 


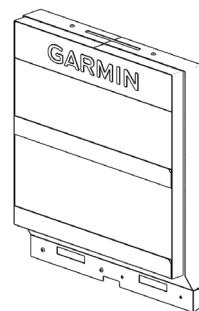
ASSEMBLY GUIDE

TOOLS REQUIRED – SUPPLIED

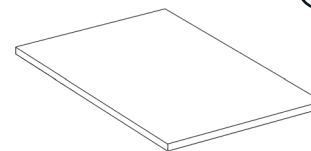


Parts

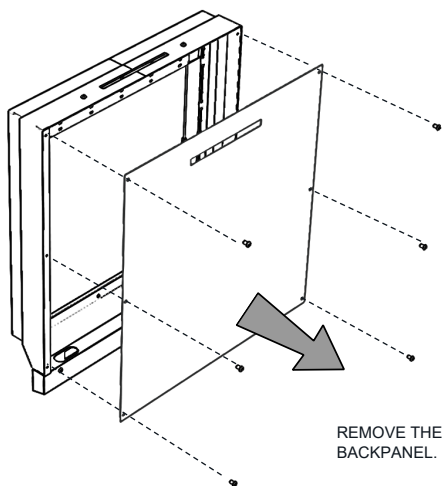
(A)

DOUBLE HEADER
(NOT INCLUDED)REPLACEMENT
PANEL

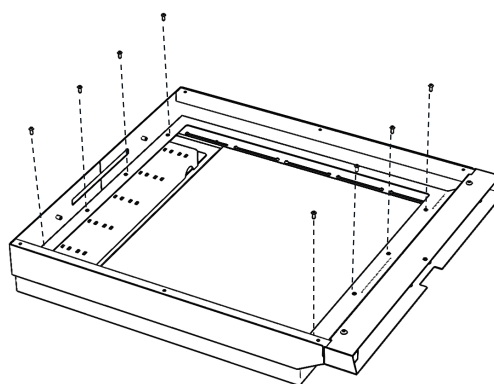
(B)



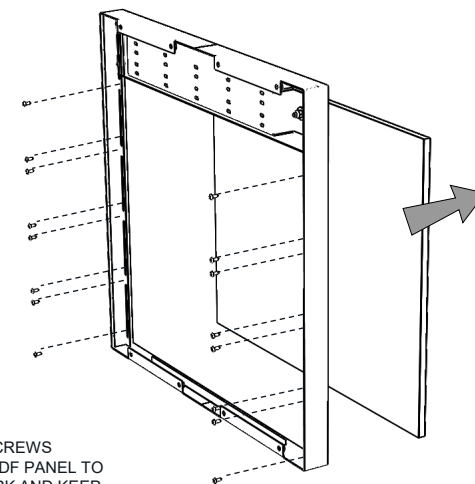
1

REMOVE THE
BACKPANEL.

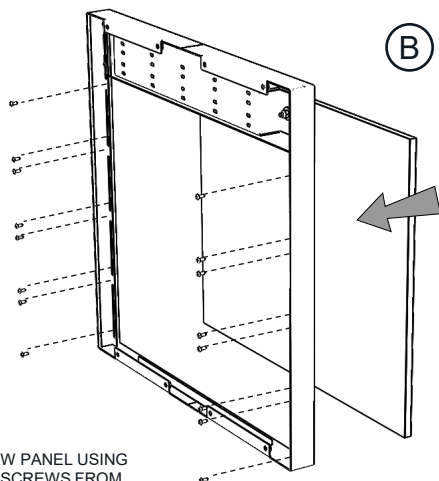
2

REMOVE THE SCREWS HOLDING
FRONT ASSEMBLY TO THE MAIN
BODY AND PULL AWAY.

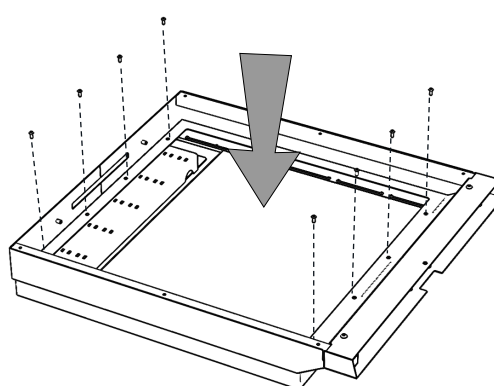
3

REMOVE SCREWS
HOLDING MDF PANEL TO
METAL WORK AND KEEP
TO ONESIDE

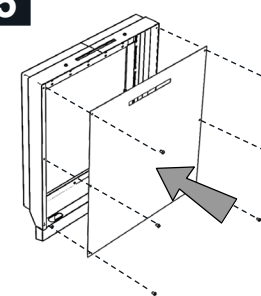
4

FIT THE NEW PANEL USING
THE SAME SCREWS FROM
THE STEP 3.

5

FIX THE MAIN HEADER BODY TO THE
FRONT ASSEMBLY.

5

FIX PRODUCTS AND
RETURN BACK PANEL.