

GARMIN

BRONZE SECURITY

P11274






JULY 2024

ASSEMBLY GUIDE

TOOLS REQUIRED – SUPPLIED

Parts

     Ⓐ X1

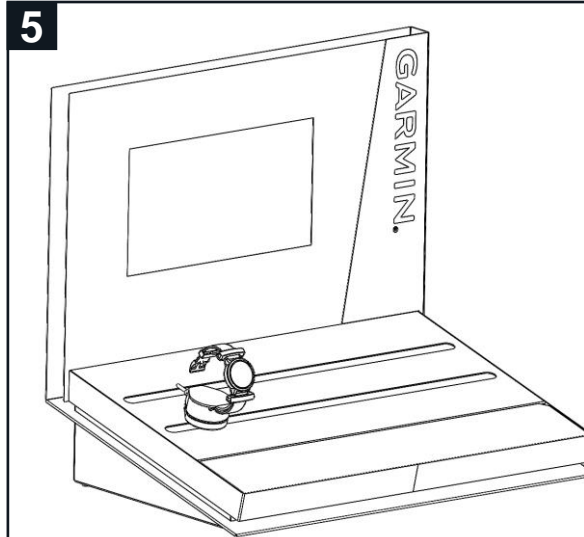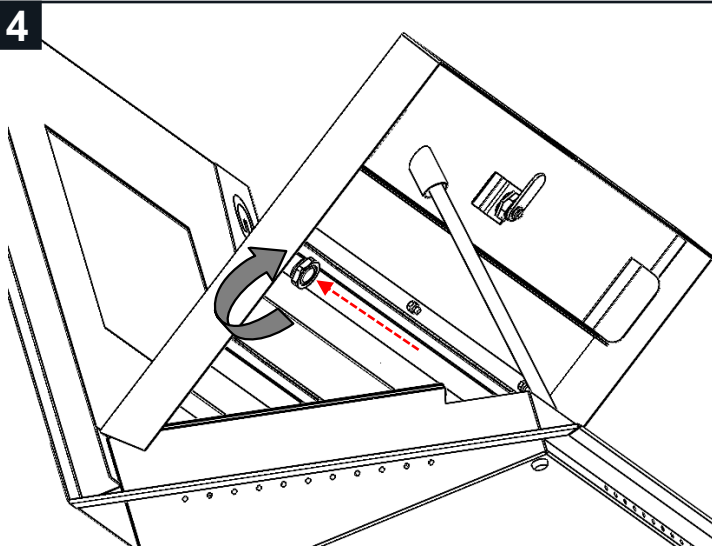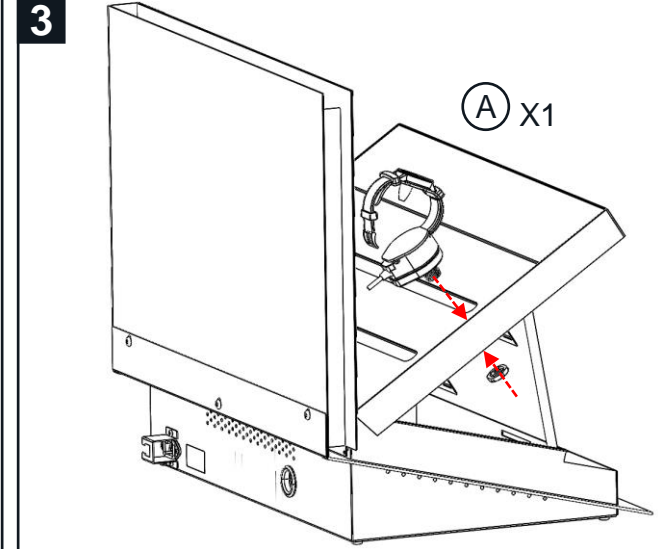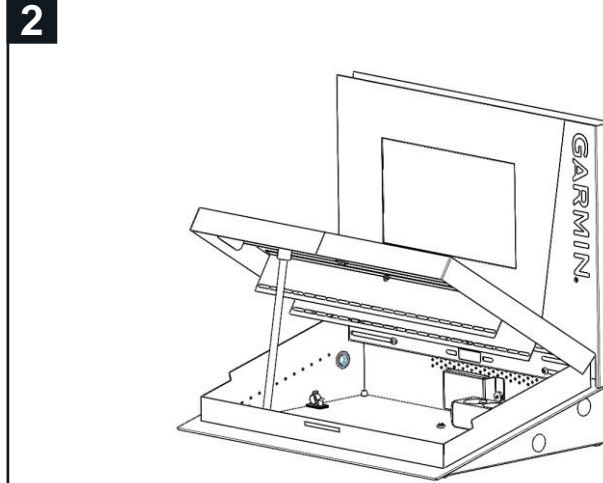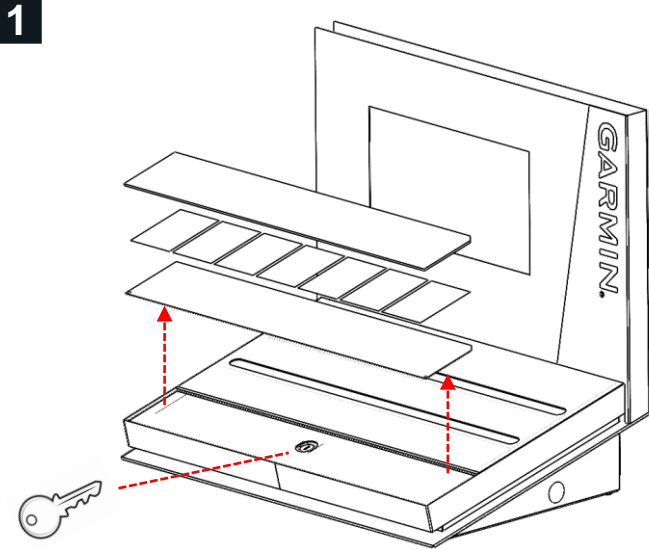

GARMIN®

ASSETS PAGE – DELETE BEFORE ISSUING OR PRINTING

 
 
 
 
 
 
(A) x#

(A)


(1)







Notes

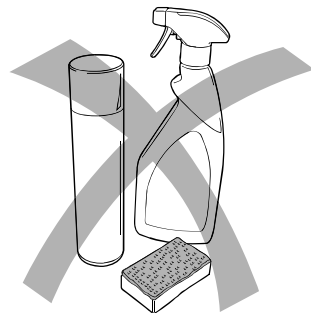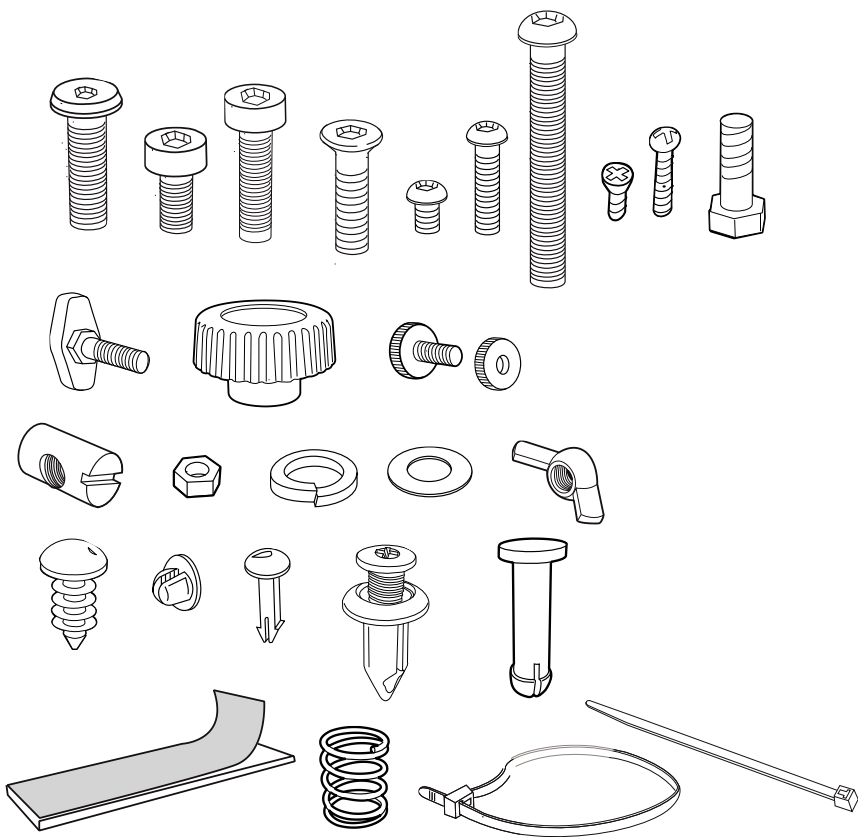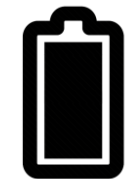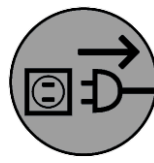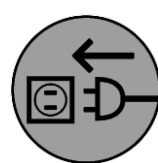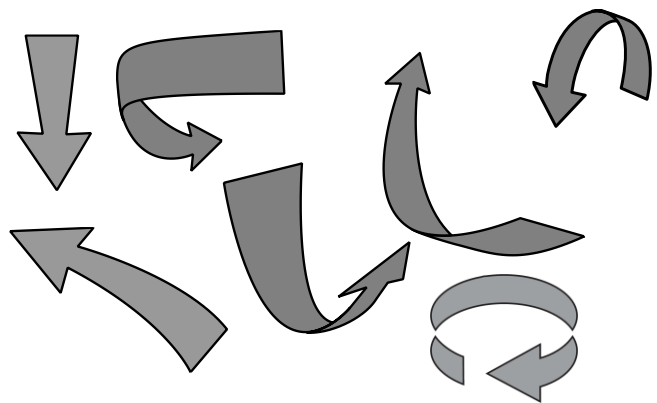

 Do NOT use chemical based cleaning products or abrasive cloth's & sponges

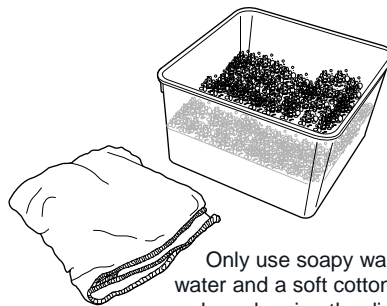

    Only use soapy warm water and a soft cotton cloth when cleaning the display

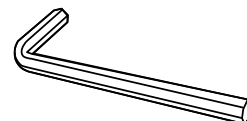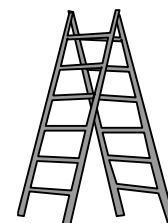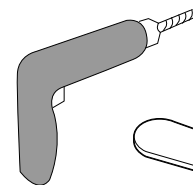

GARMIN®