

 
GARMIN

FLIP CHART

P11963 | March 2024

ASSEMBLY GUIDE

TOOLS REQUIRED – SUPPLIED



4.0mm

GARMIN


FLIP CHART

ACCESSORY GUIDE

Parts




1

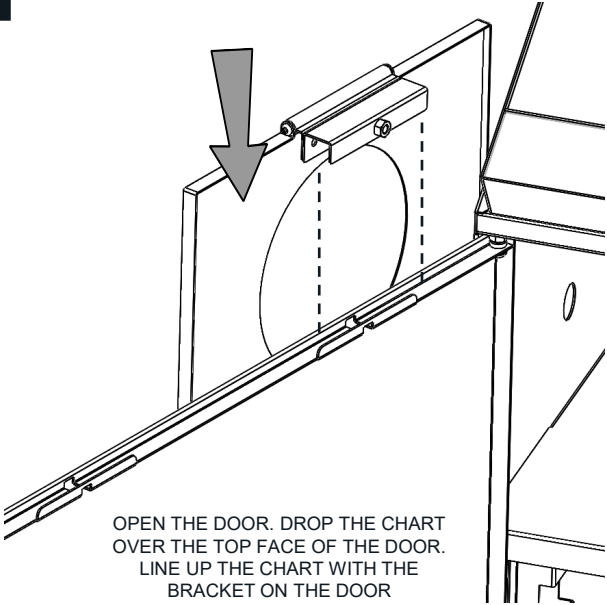


OPEN THE DOOR. DROP THE CHART OVER THE TOP FACE OF THE DOOR. LINE UP THE CHART WITH THE BRACKET ON THE DOOR

2

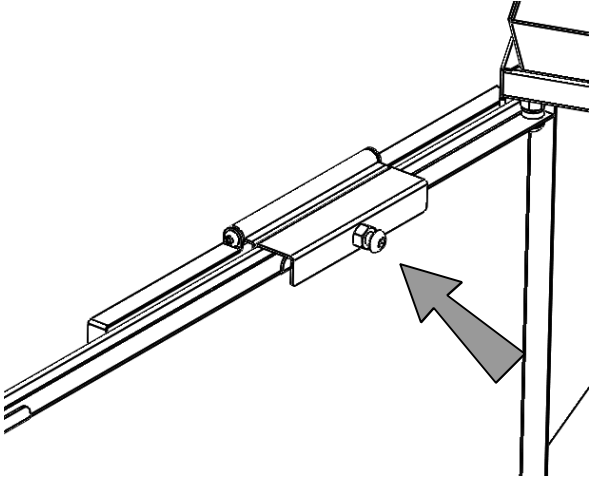

USING THE M6X30 SCREW PROVIDED. TIGHTEN THE SCREW THROUGH THE FLIP CHART SO THAT THE CHART IS HELD IN POSITION.

3

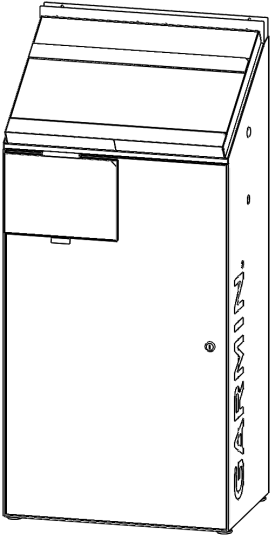

4

THE FLIP CHART CAN BE PLACED ON THE RIGHT OR LEFT SIDE OF THE DOOR.

