

**GARMIN**


1st GEN CTU 600 + 2nd GEN  
1200 STRETCHED SCREEN  
P11274 | July 2024

**ASSEMBLY DIAGRAM**


**Tools Required - Supplied**



**Parts**

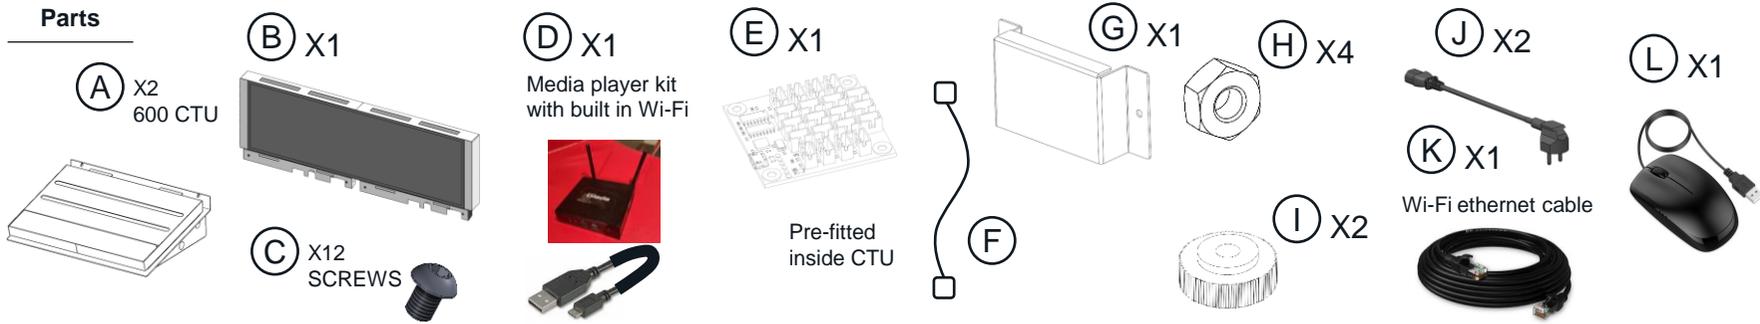


**1**

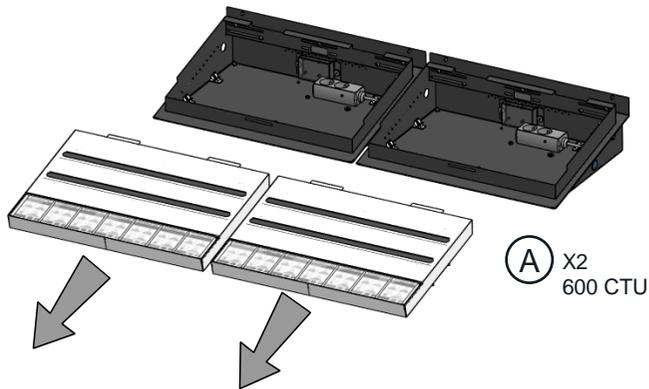


REMOVE TOP PANEL ASSEMBLIES

**2**

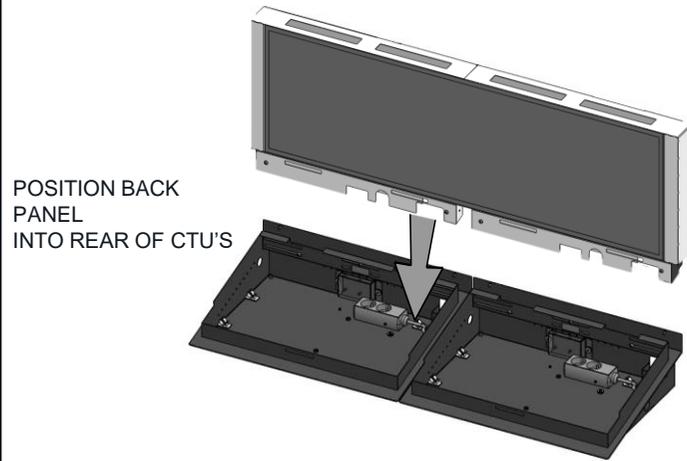


POSITION BACK  
PANEL  
INTO REAR OF CTU'S

**3**

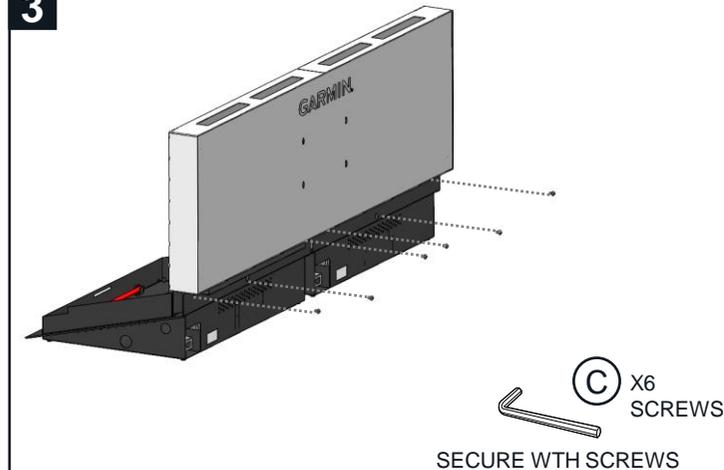


SECURE WITH SCREWS

**4**

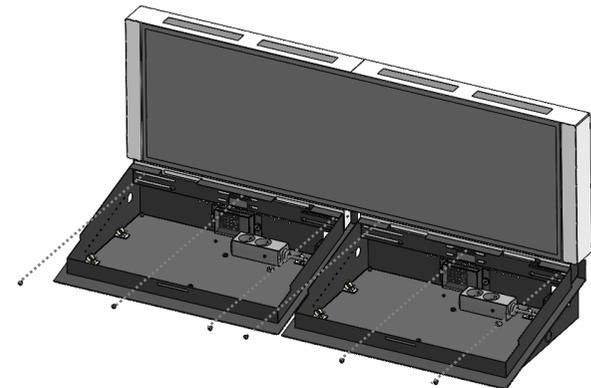

SECURE WITH SCREWS


**5**

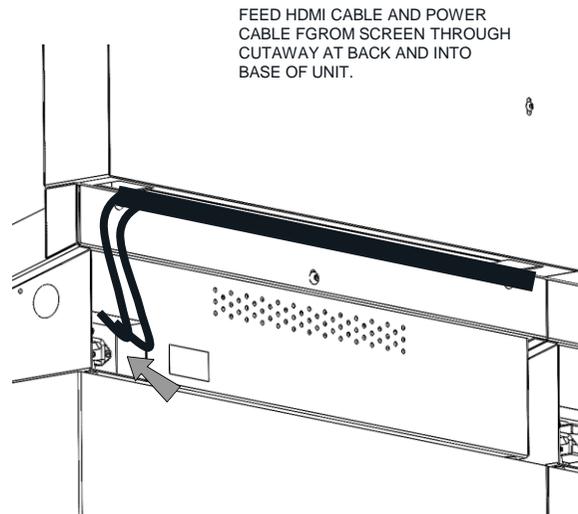

FEED HDMI CABLE AND POWER  
CABLE FROM SCREEN THROUGH  
CUTAWAY AT BACK AND INTO  
BASE OF UNIT.



**6**

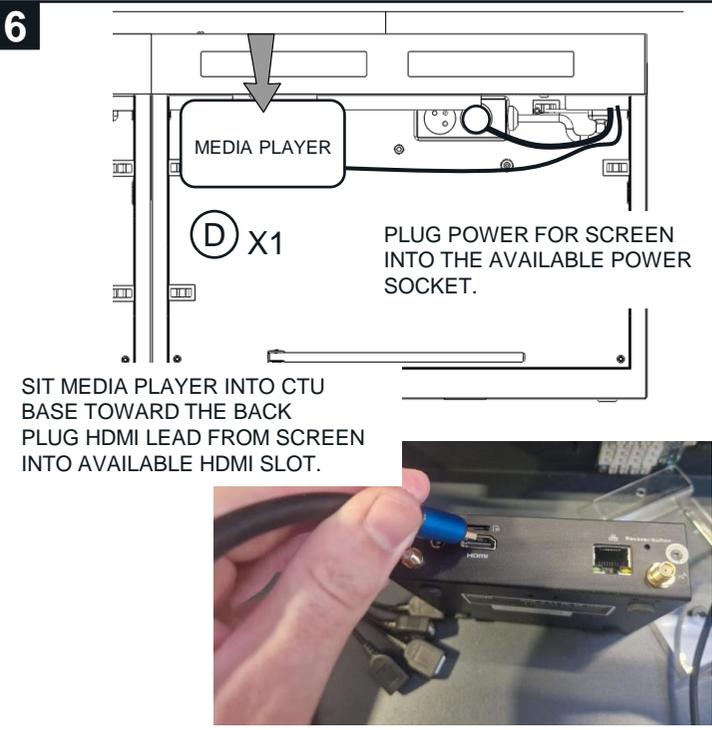


MEDIA PLAYER

**D** X1

PLUG POWER FOR SCREEN INTO THE AVAILABLE POWER SOCKET.

SIT MEDIA PLAYER INTO CTU BASE TOWARD THE BACK PLUG HDMI LEAD FROM SCREEN INTO AVAILABLE HDMI SLOT.


**7**

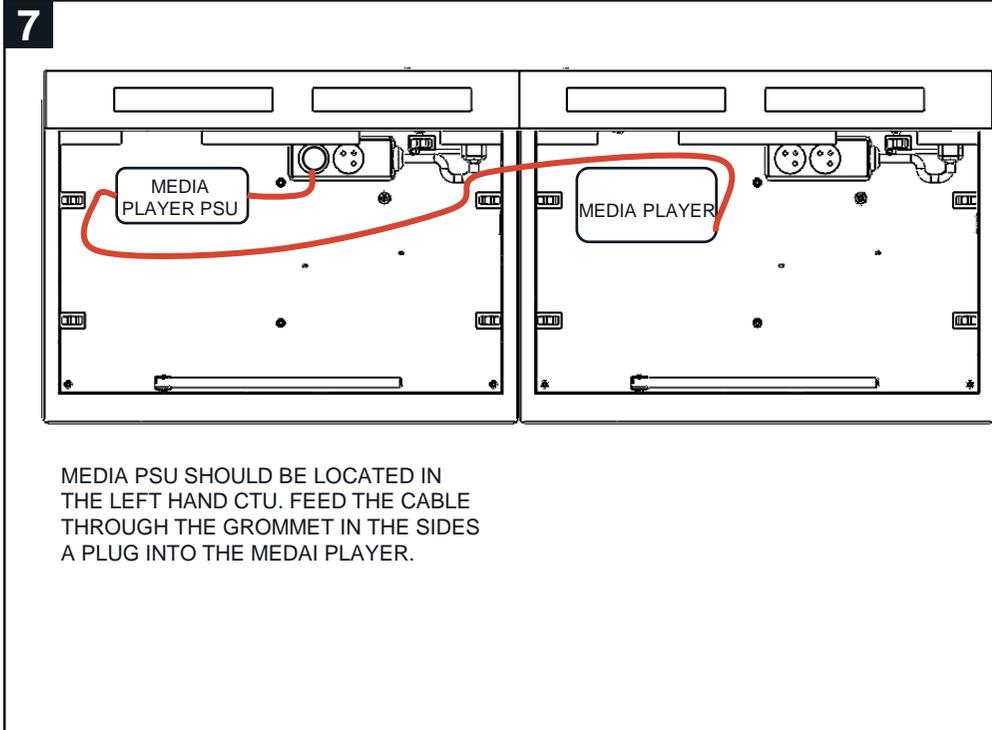


MEDIA PLAYER PSU

MEDIA PLAYER

MEDIA PSU SHOULD BE LOCATED IN THE LEFT HAND CTU. FEED THE CABLE THROUGH THE GROMMET IN THE SIDES A PLUG INTO THE MEDIA PLAYER.

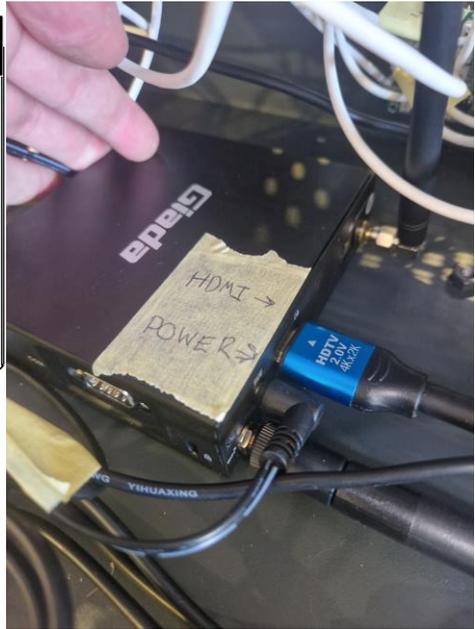

**8**

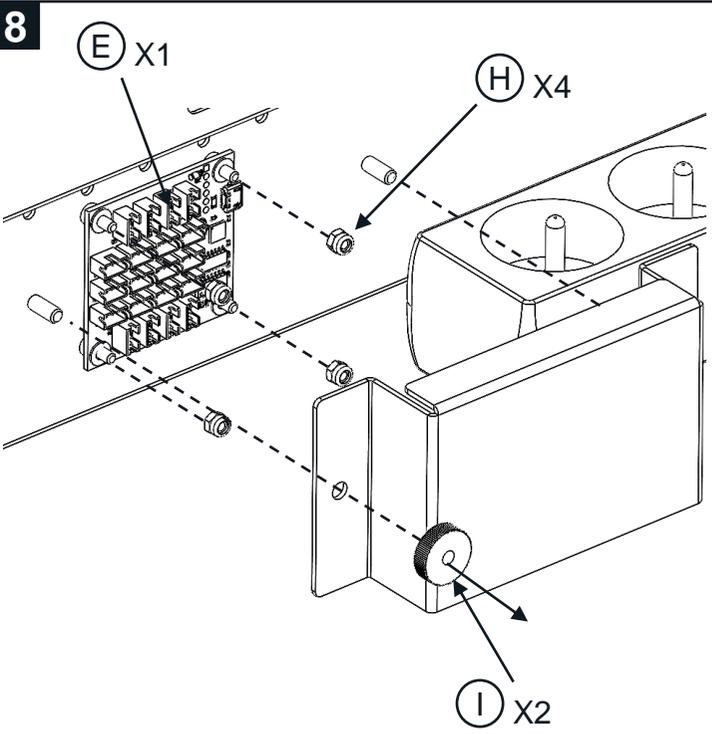


**E** X1

**H** X4

**I** X2

**9**

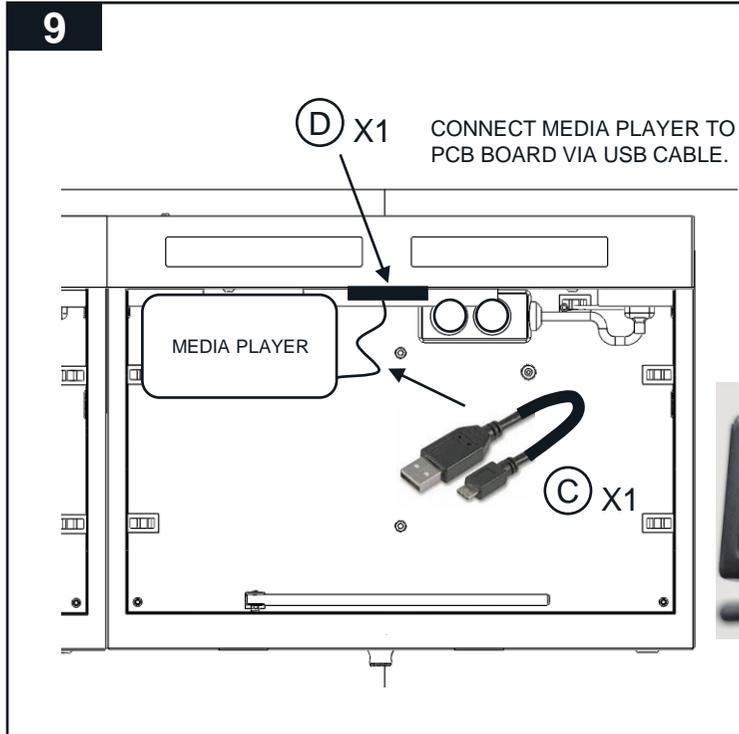

**D** X1

CONNECT MEDIA PLAYER TO PCB BOARD VIA USB CABLE.

MEDIA PLAYER

**C** X1



10

IF A WIFI OR 4G/5G DATA CONNECTION IS NOT AVAILABLE USE THE 10M CAT 5E ETHERNET CABLE TO MAKE A WIRED CONNECTION. STORE MUST HAVE A SUITABLE CONNECTION INSTORE. **CABLE SHOULD NOT BE VISIBLE TO CUSTOMERS. ROUTED SECURELY AS TO CAUSE SNAGGING OR TRIP HAZARD.**


(K) X1



ROUTE THE CABLE TO EXIT THE UNIT IN THE SAME LOCATION AS THE HDMI CONNECTION.




PLUG THE ETHERNET CABLE TO THE MEDIA PLAYER IN THIS LOCATION.

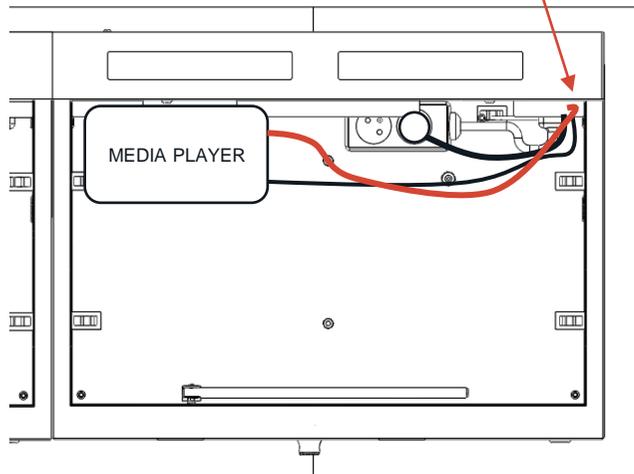

11

PLUG MOLEX CABLES INTO BOARD REFERENCE THE PRODUCT LAYOUT GUIDE AND MATCH THE NUMBERS TO THE NUMBERS ON THE BOARD

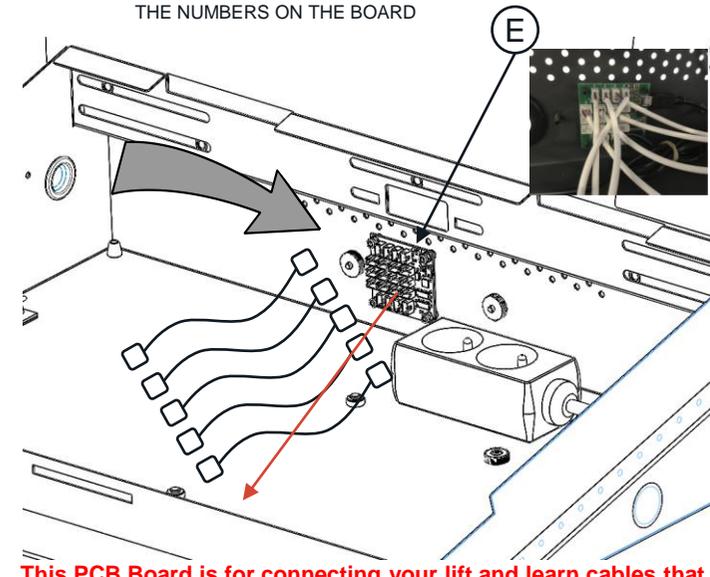


**This PCB Board is for connecting your lift and learn cables that come with your Gold Security.**

12

(E) X1

(H) X4

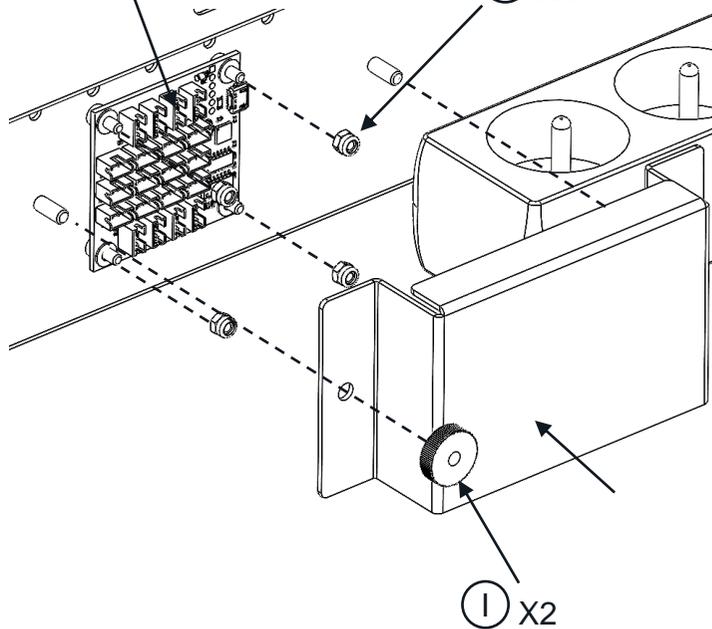

(I) X2


13

1. PLUG IN THE USB MOUSE IN THE MEDIA PLAYER. USE THE USB PORTS HIGHLIGHTED.
2. FOLLOW THE DIGITAL CONNECTION STEPS NOW.
3. FOLLOWING DIGITAL SET UP REMOVED MOUSE AND STORE IN THE UNIT.


(L) X1



14

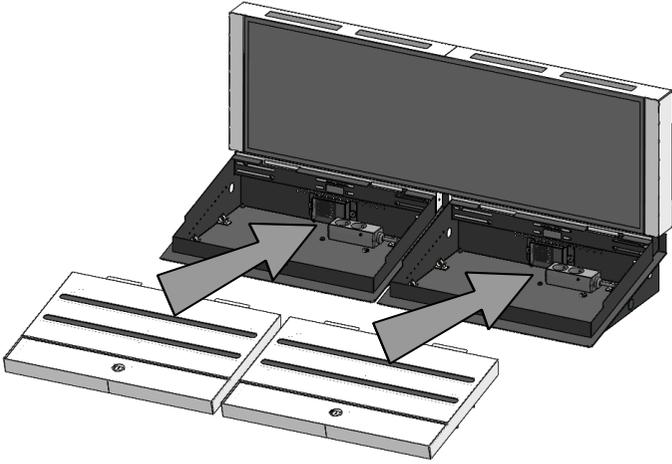


15

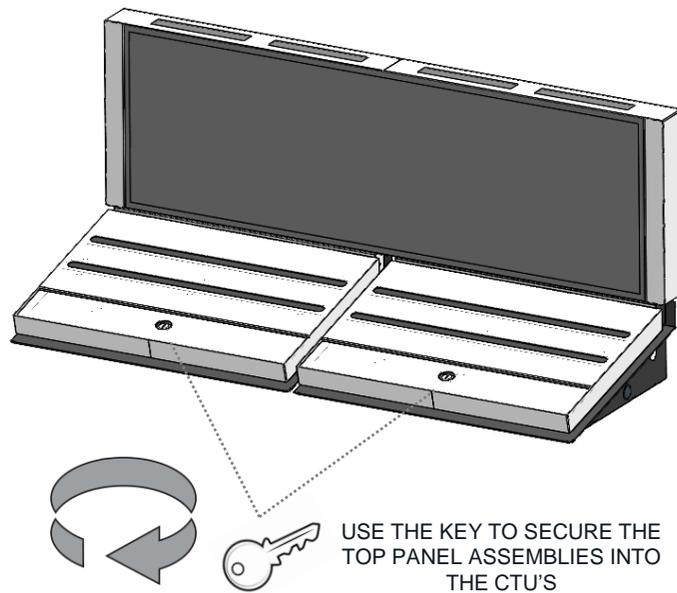


USE THE KEY TO SECURE THE TOP PANEL ASSEMBLIES INTO THE CTU'S

16

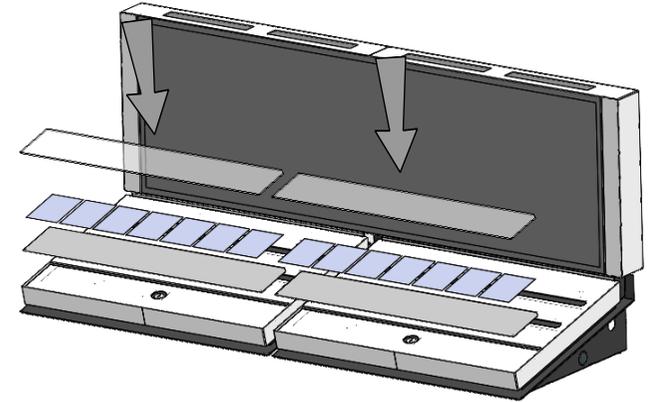


REPLACE THE LENS, TICKETS AND METAL PLATE


17

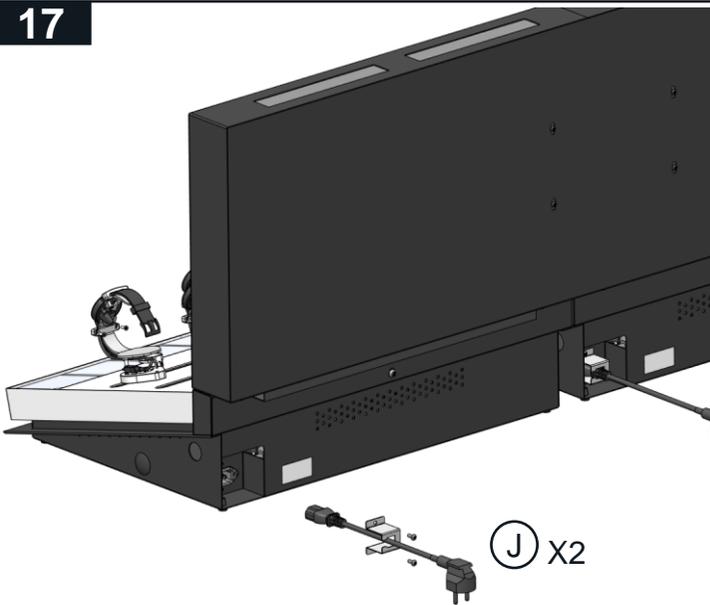

18

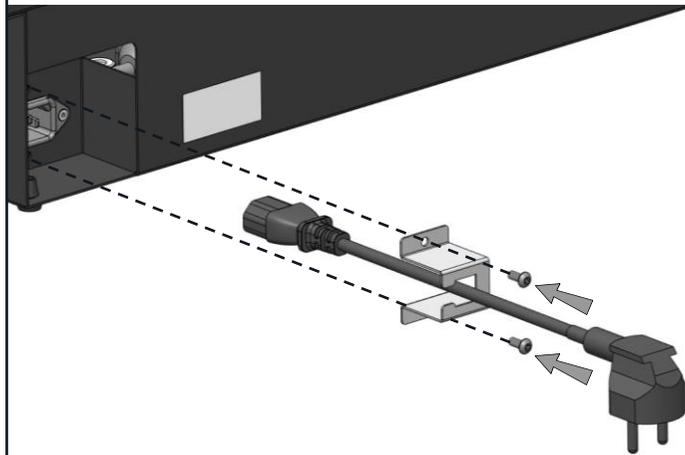

19

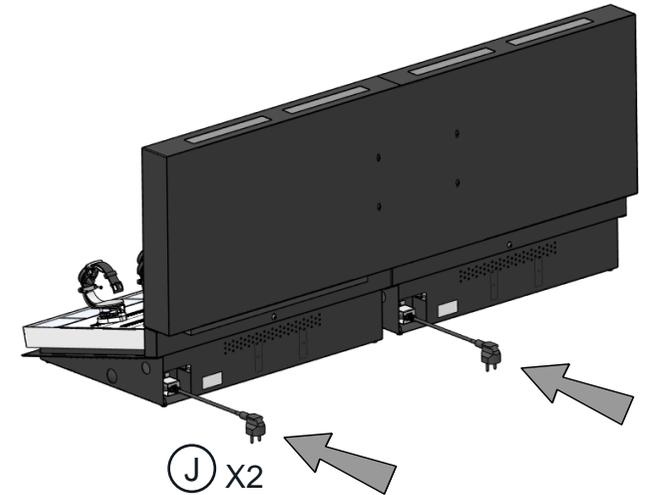

# Digital Section

## Guidance to connect your display with digital content


Follow the steps that follow and if you experience any challenges and require support please contact:

Tel: +44 (0) 7834 170 290

Email: [dplan-support@hhglobal.com](mailto:dplan-support@hhglobal.com)

# Connecting the Hardware

- Connect the power lead to the socket on the back of the screen.
- Connect the HDMI cable to the HDMI port closest to the power lead on the back of the screen.
- Press the switch to turn the screen on.

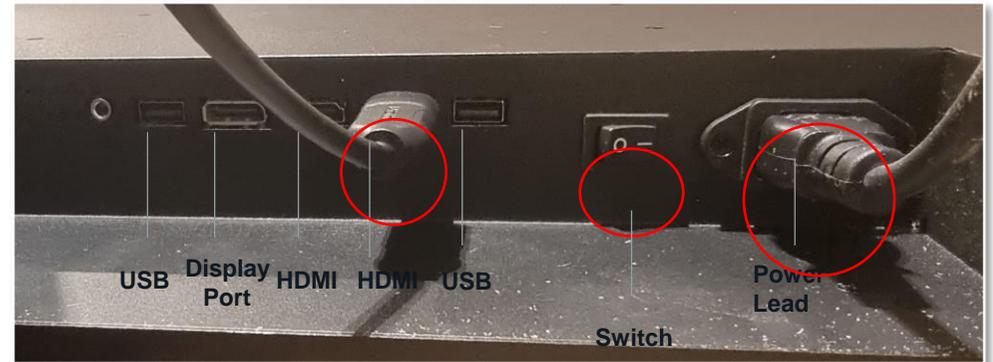

- Connect the power supply, Wi-Fi antenna, and other end of the HDMI cable to the media player inputs.



Wi-Fi Antenna Power Lead HDMI

# Connecting the Hardware

- On the front of the media player, connect your USB mouse to one of the USB ports. **Do not** use the OTG port. The mouse will not work.




- Now look at the screen and right click with your mouse.




- You will see a dialogue box asking if you want to shutdown the content. Tap **OK** to exit.




# Connecting to a Wi-Fi network

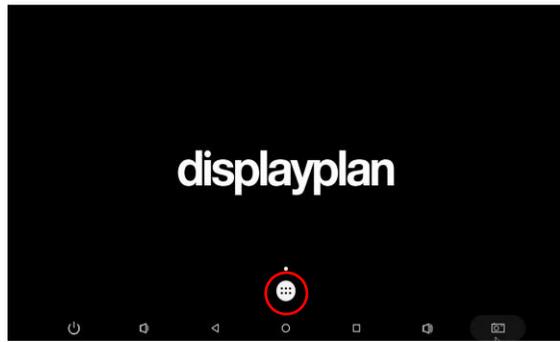

From the Home Screen tap the **white circle with the 6 dots** to open the **app drawer**.

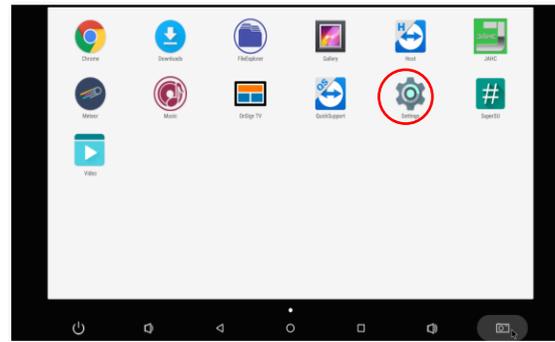


Tap **Settings**

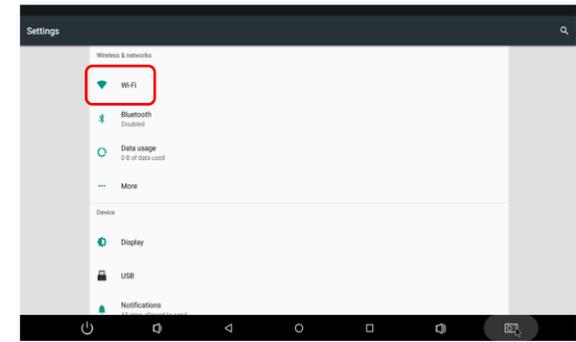


Tap the **Wi-Fi** icon.



Turn **ON** the radio button to see available networks to connect to.

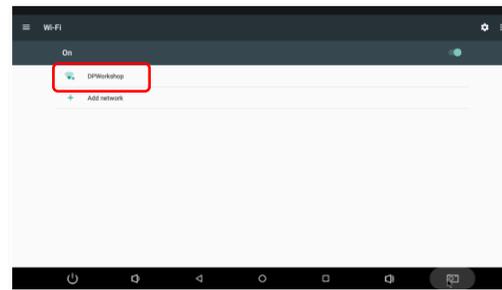


Select the **in-store SSID**.

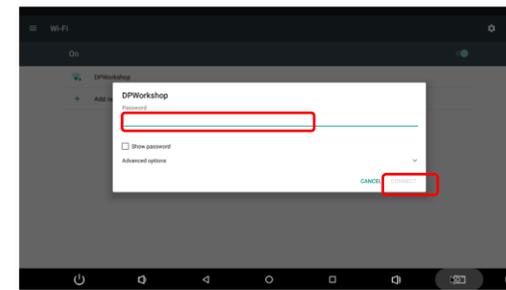


Input the password

# Connecting to a Wi-Fi network

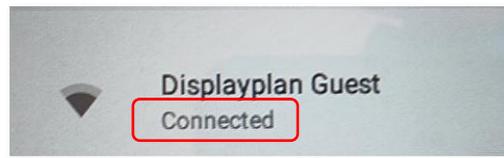

Once connected, you will see the word **Connected** under the SSID name.

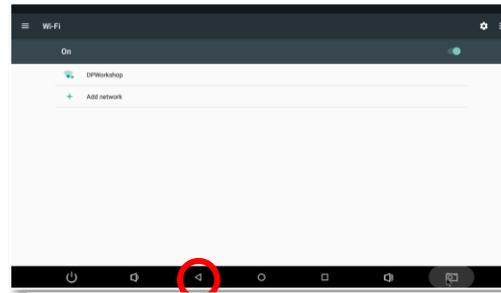

Tap the **Back** button 3 times to go back to the app drawer



Tap the **OnSign TV** icon to load the kiosk app.



You should now see the content playing again, and the device is connected to the network. Configuration is complete.