

GARMIN

CORPORATE DISPLAY

P12674 | 19/11/2024

2 CTU + ADJOINING STRETCHED
SCREEN 1200


TOOLS REQUIRED - SUPPLIED




4MM ALLEN KEY

Parts

(A) X2
600MM

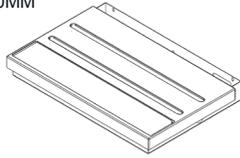

(B) X1
1200MM

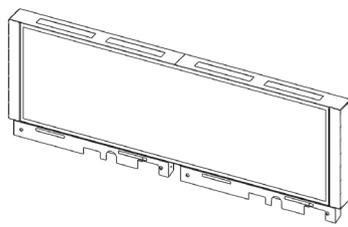

(C) X10
M6X8MM
SCREW



(D) X2
M6X16MM
SCREW



(E) X1



(I) X1



(F) X1

Media player kit
With built in Wi-fi



(G) X1




(H) X1



Ethernet cable
for Wi-fi

1

2X

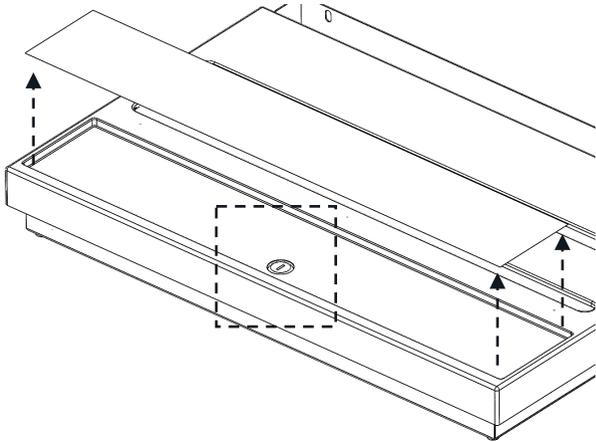


2

2X




3

2X

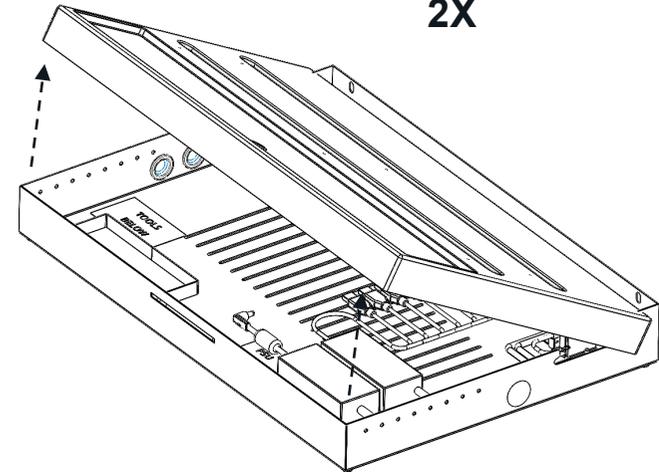


4

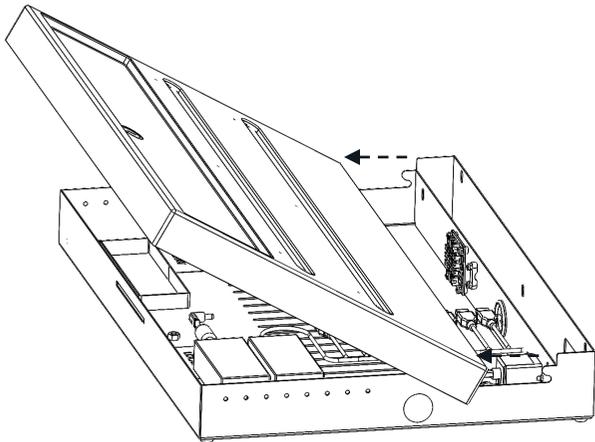

5




MUST TWIST LOCKING
PLATES
TO HOLD TOP SURFACE IN
POSITION
(REPEAT BOTH SIDES)

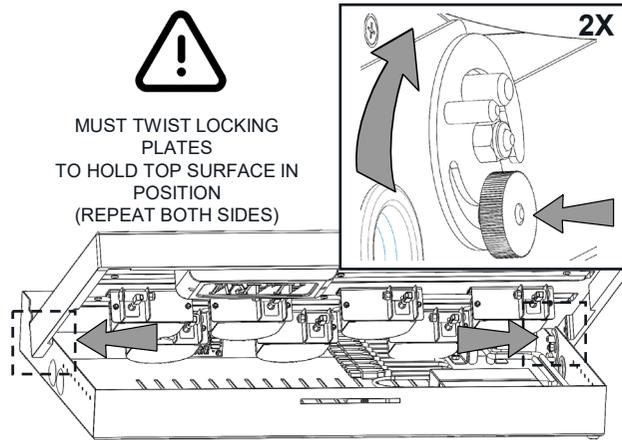

6




RED SUPPORT ARM MUST
BE
SWUNG INTO POSITION TO
SUPPORT TOP PLATE

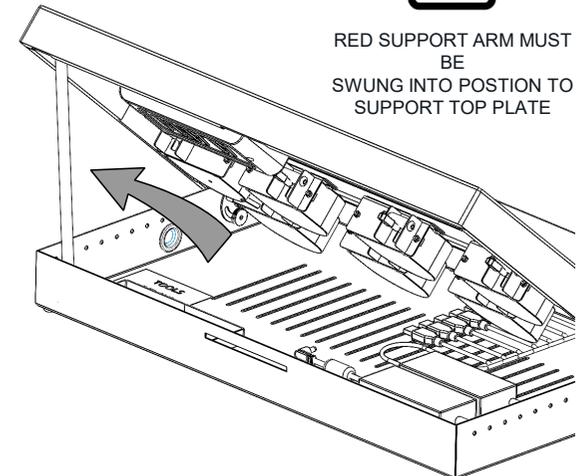


7





RED SUPPORT ARM MUST BE SWUNG INTO POSITION TO SUPPORT TOP PLATE

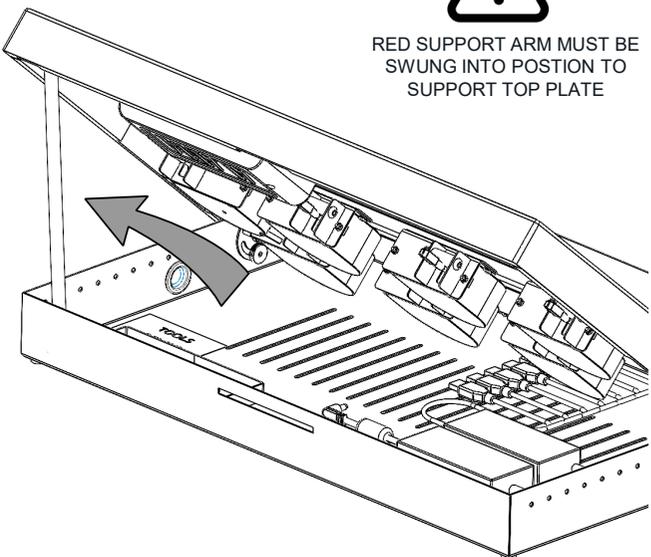


8

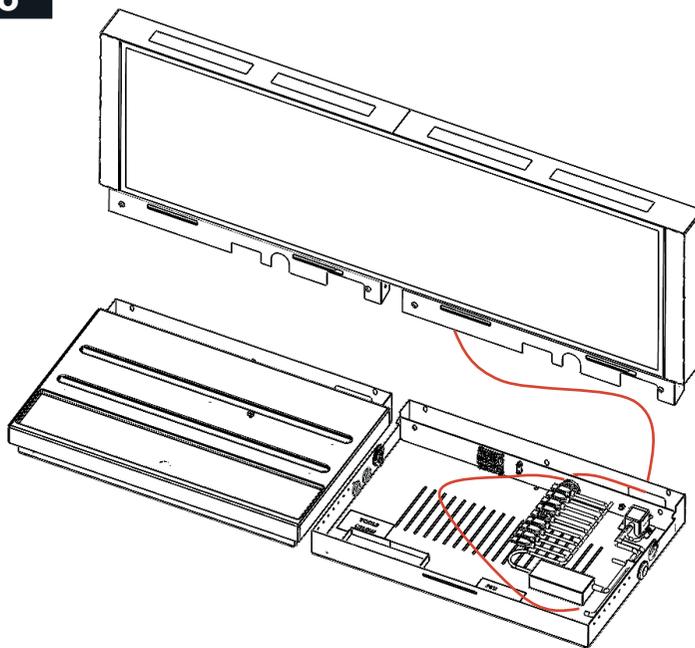

I X1

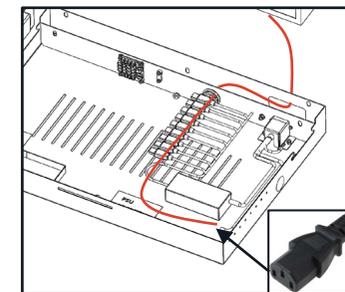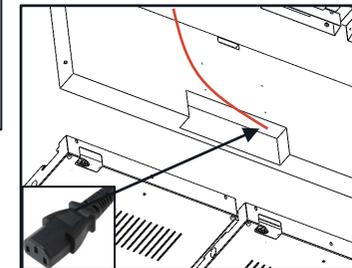

9

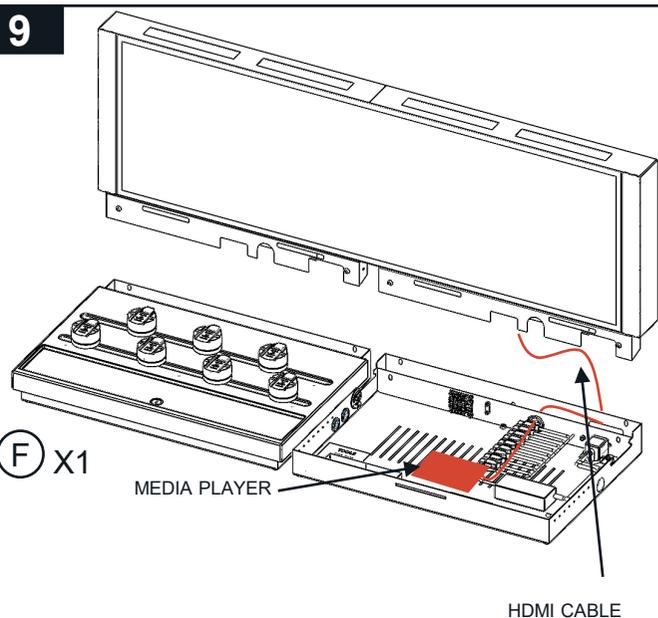


10


PLUG HDMI CABLE INTO MEDIA PLAYER



11

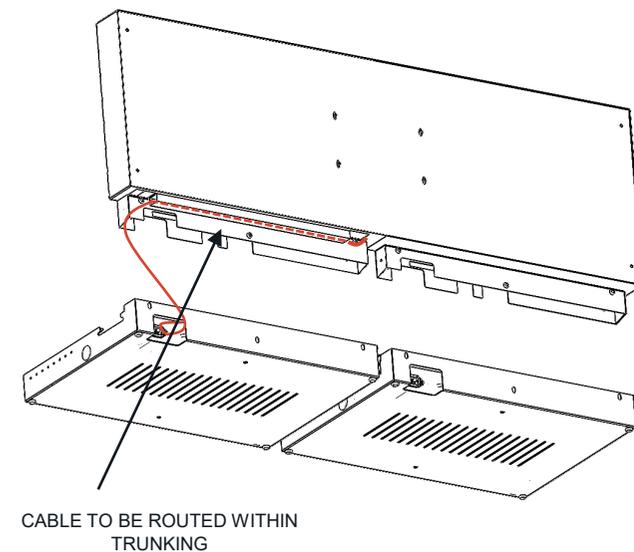

12

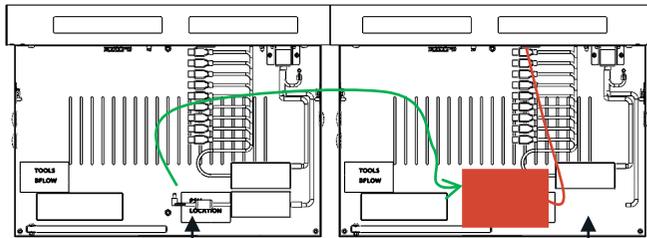

PLU MEDIA PLAYER PSU INTO 1ST CTU TO POWER THE MEDIA PLAYER. LOOM THE CABLE THROUGH GROMMETS IN THE SIDE OF THE METAL BASE.


No PSU to be assembled here.

13

Do not use OTG port.



14

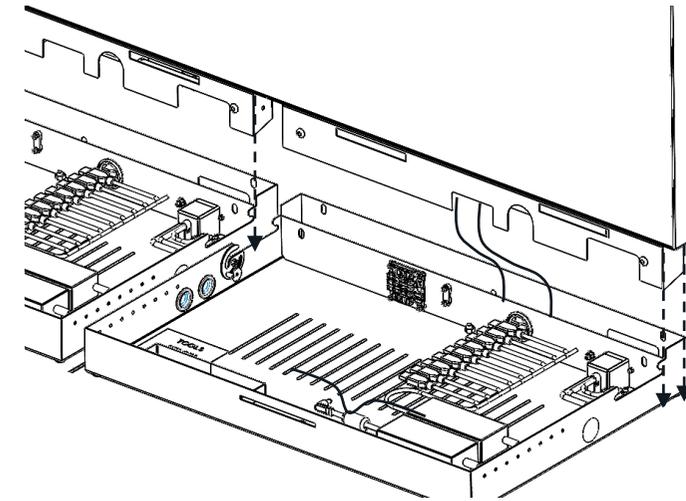

15


IF A WIFI OR 4G/5G DATA CONNECTION IS NOT AVAILABLE USE THE 10M CAT 5E ETHERNET CABLE TO MAKE A WIRED CONNECTION. STORE MUST HAVE A SUITABLE CONNECTION INSTORE. **CABLE SHOULD NOT BE VISIBLE TO CUSTOMERS. ROUTED SECURELY AS TO CAUSE SNAGGING OR TRIP HAZARD.**

(K) X1




PLUG THE ETHERNET CABLE TO THE MEDIA PLAYER IN THIS LOCATION.

IF ETHERNET IS BEING USED REMOVE THE ANTENNAS FROM THE MEDIA PLAYER.





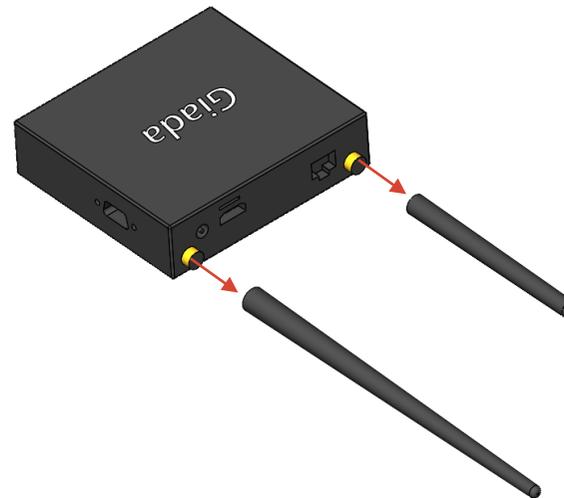


ROUTE THE CABLE TO EXIT THE UNIT IN THE SAME LOCATION AS THE HDMI CONNECTION.

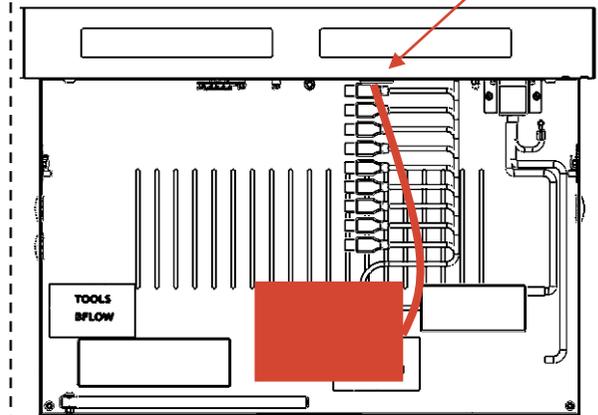


16


1. PLUG IN THE USB MOUSE IN THE MEDIA PLAYER. USE THE USB PORTS HIGHLIGHTED.
2. FOLLOW THE DIGITAL CONNECTION STEPS NOW.
3. FOLLOWING DIGITAL SET UP REMOVED MOUSE AND STORE IN THE UNIT.

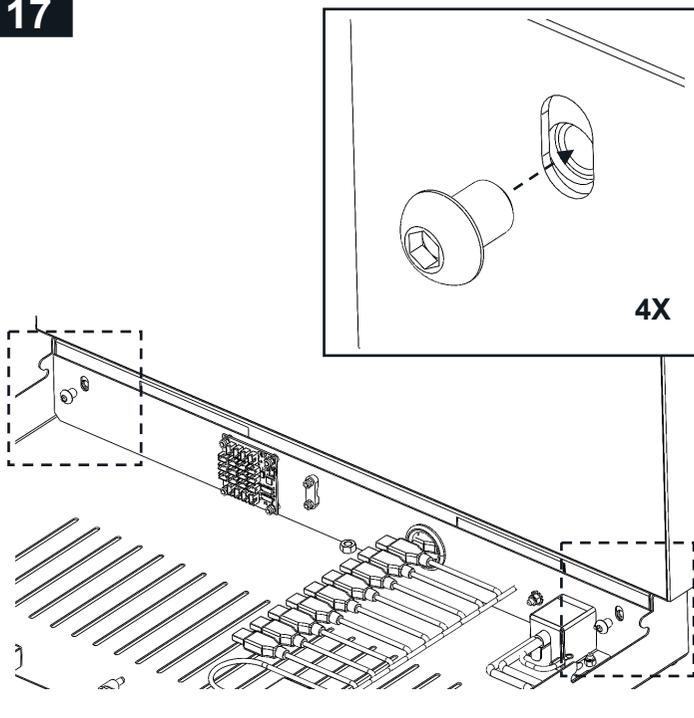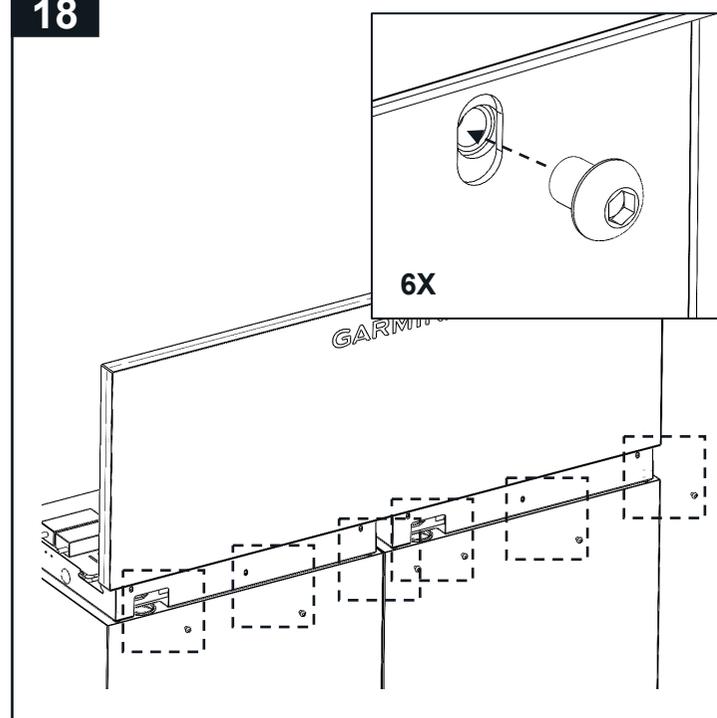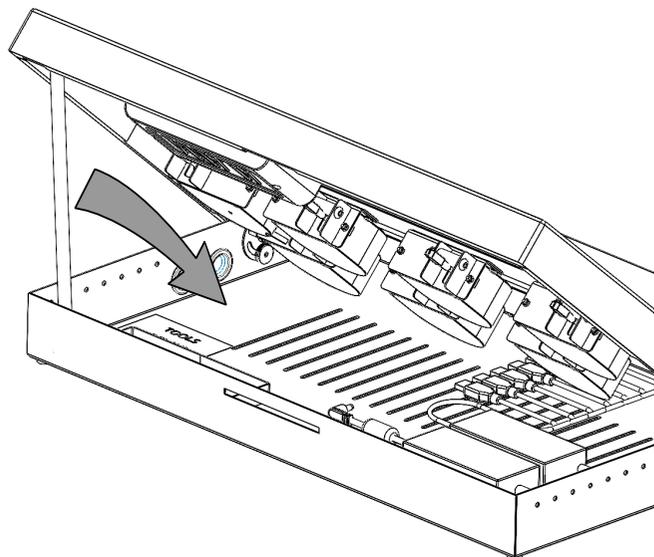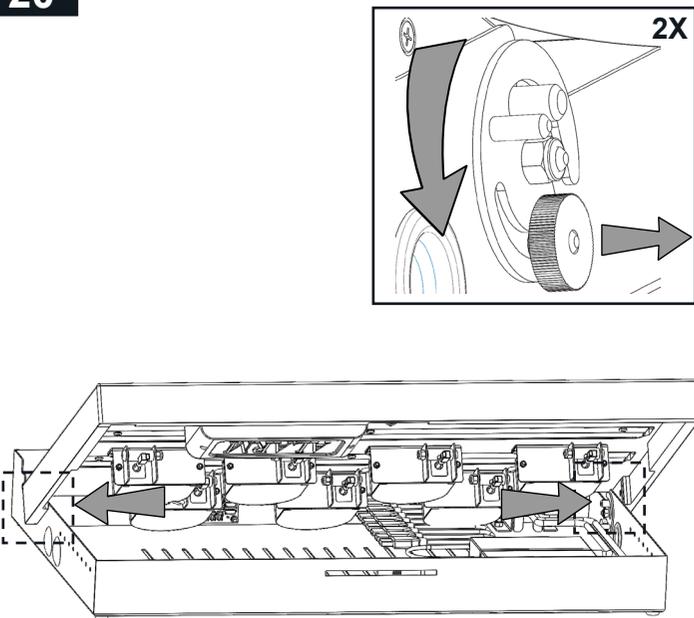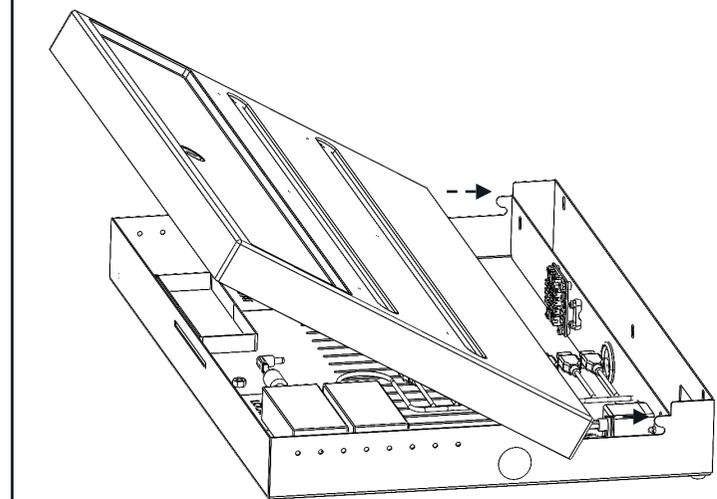L X1**17****18****19****20****21**


22

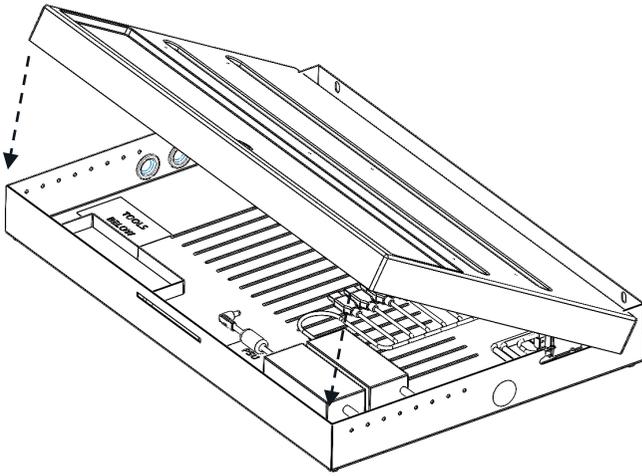


23

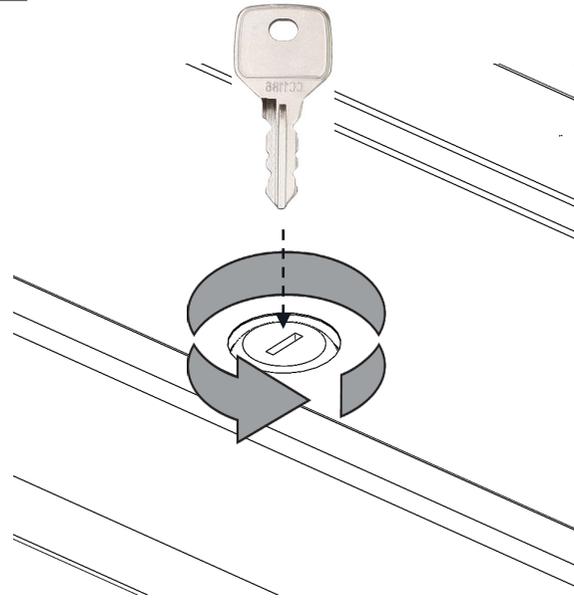


24

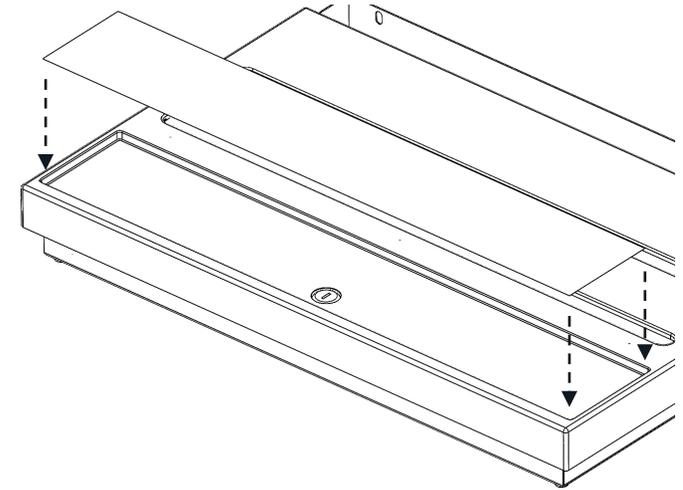


25

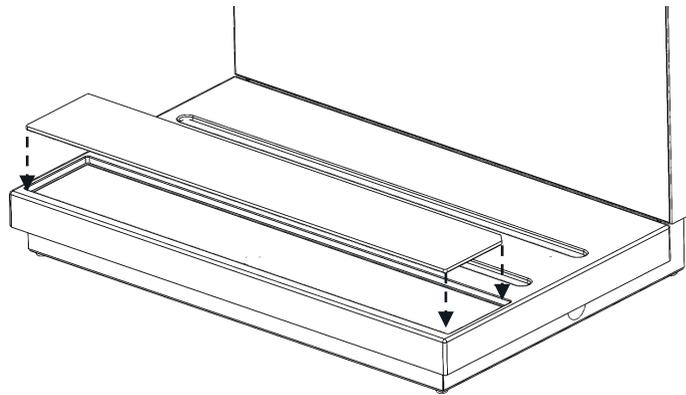

26

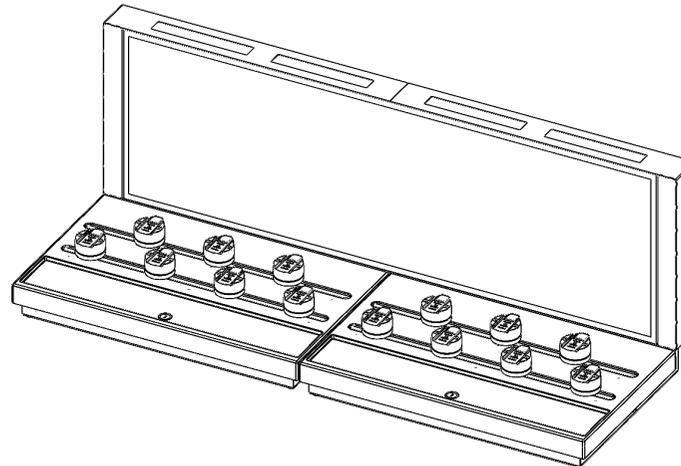

27

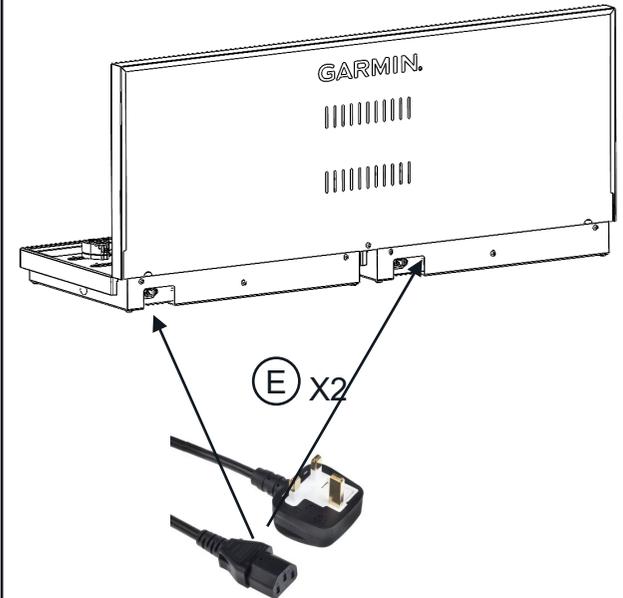

Digital Section

Guidance to connect your display with digital content


Follow the steps that follow and if you experience any challenges and require support please contact:

Tel: +44 (0) 7834 170 290

Email: dplan-support@hhglobal.com

Connecting the Hardware

- Connect the power lead to the socket on the back of the screen.
- Connect the HDMI cable to the HDMI port closest to the power lead on the back of the screen.
- Press the switch to turn the screen on.

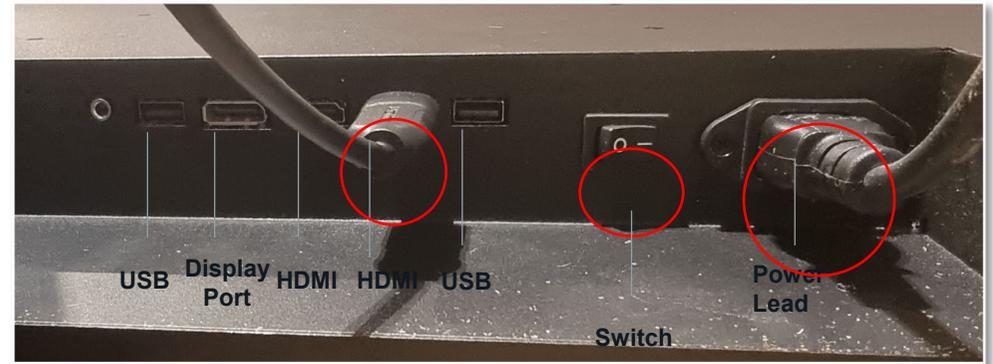

- Connect the power supply, Wi-Fi antenna, and other end of the HDMI cable to the media player inputs.



Wi-Fi Antenna Power Lead HDMI

Connecting the Hardware


- On the front of the media player, connect your USB mouse to one of the USB ports. **Do not** use the OTG port. The mouse will not work.




- Now look at the screen and right click with your mouse.




- You will see a dialogue box asking if you want to shutdown the content. Tap **OK** to exit.

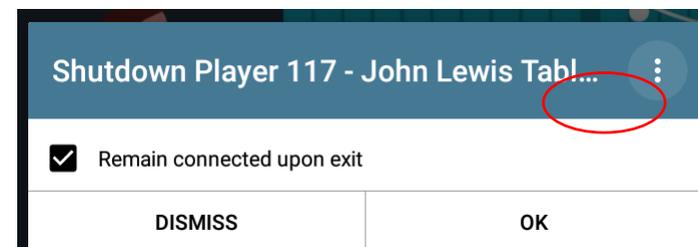


Connecting to a Wi-Fi network

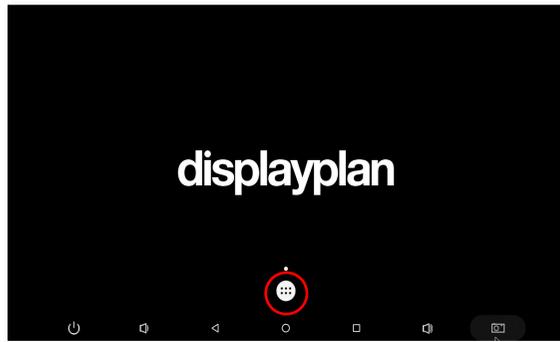


From the Home Screen tap the **white circle with the 6 dots** to open the **app drawer**.

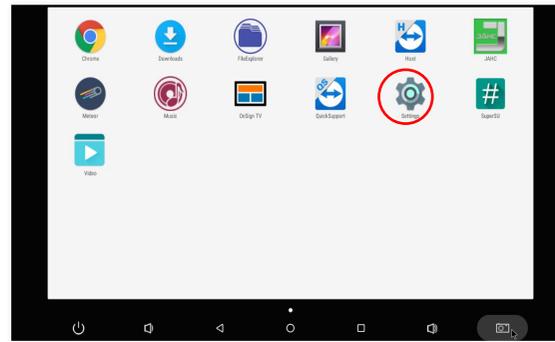


Tap **Settings**

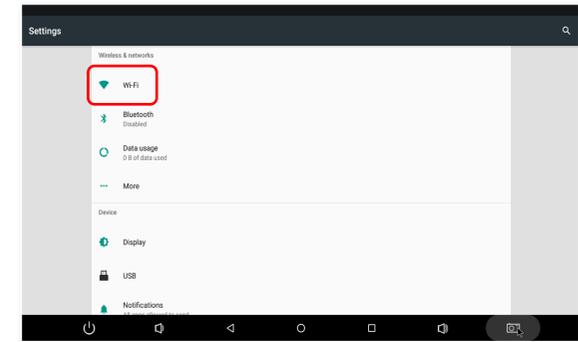


Tap the **Wi-Fi** icon.

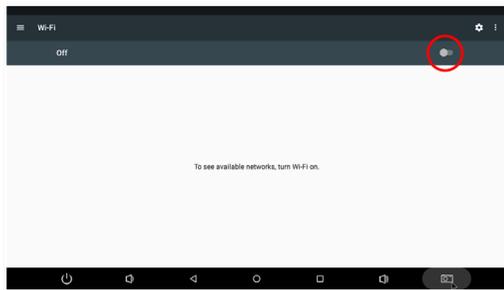

Turn **ON** the radio button to see available networks to connect to.

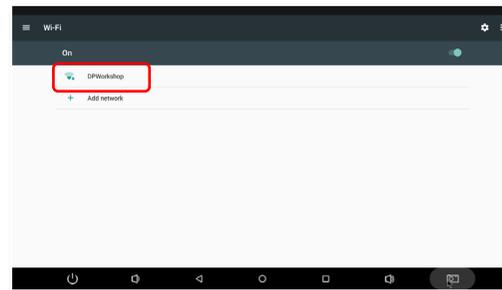


Select the **in-store SSID**.

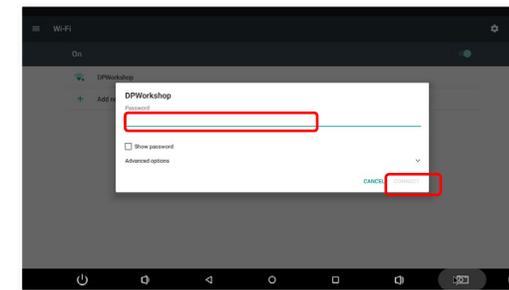


Input the **password**

Connecting to a Wi-Fi network

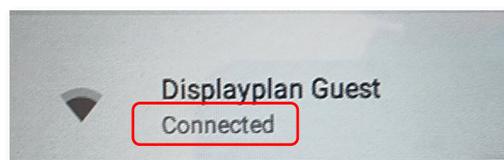

Once connected, you will see the word **Connected** under the SSID name.

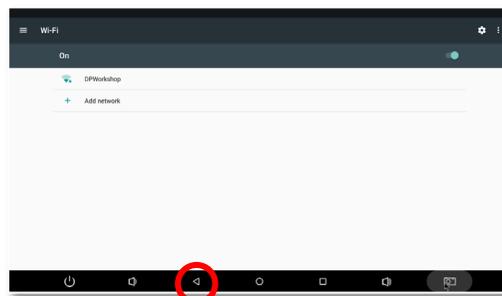

Tap the **Back** button 3 times to go back to the app drawer



Tap the **OnSign TV** icon to load the kiosk app.



You should now see the content playing again, and the device is connected to the network. Configuration is complete.