

GARMIN

BASIC DISPLAY SINGLE SIDED

P11963 | 03/05/2024


ASSEMBLY GUIDE TOPPER + LENS

TOOLS REQUIRED – SUPPLIED




Parts



(A) x1

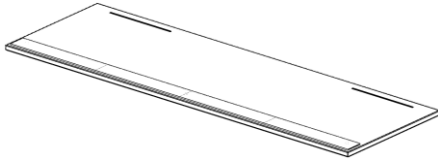

(B) x1

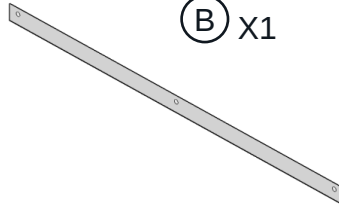


1 REMOVE OLD

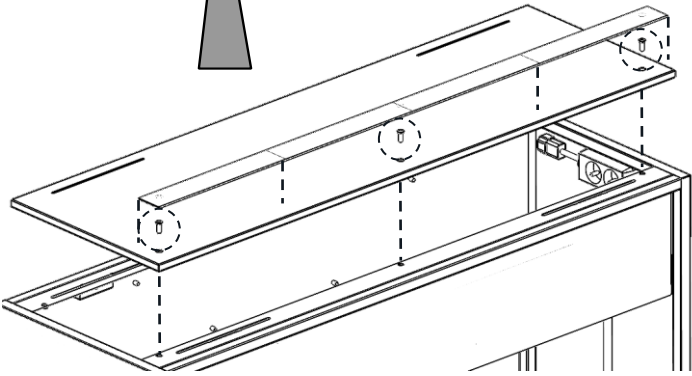 



2 REPLACE WITH NEW



 (B) x1



(A) x1

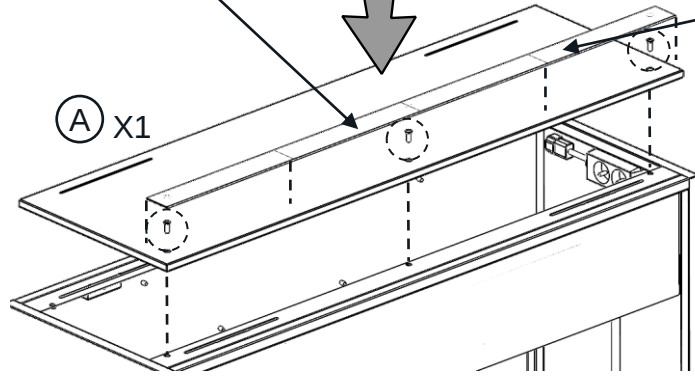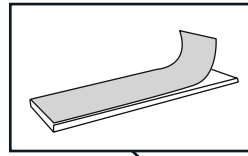

(B) x1

