


Tools Required (NOT supplied)

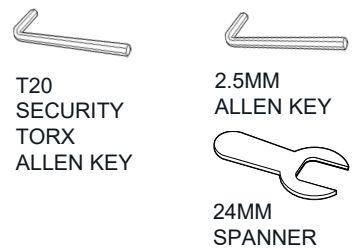

Parts

 

A x1
NEW TOP




GUIDE SHOWS CTU – 600MM VERSION BUT IS ALSO APPLICABLE FOR CTU – 400MM VERISON.

PLEASE REFER TO INDIVIDUAL STEPS FOR CORRECT UNIT VERSION.


1 UNPLUG DISPLAY

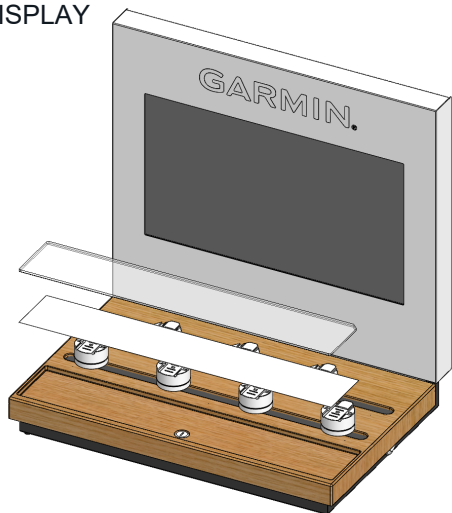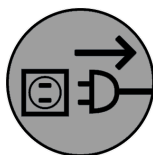


2

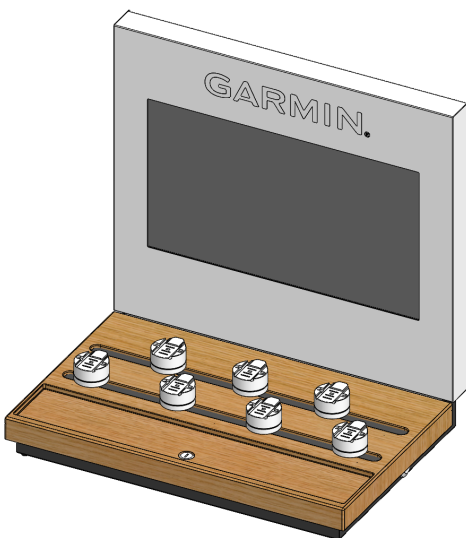


3

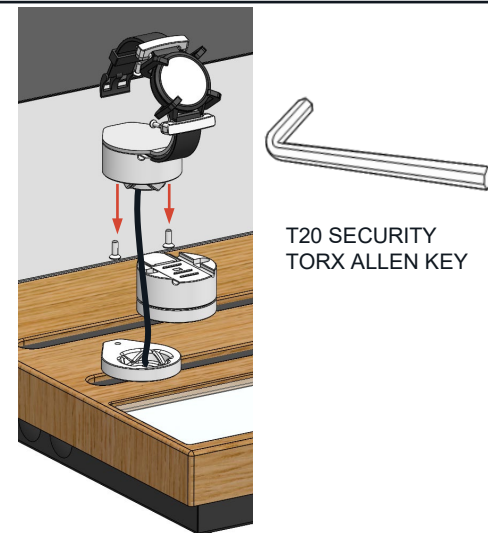


4

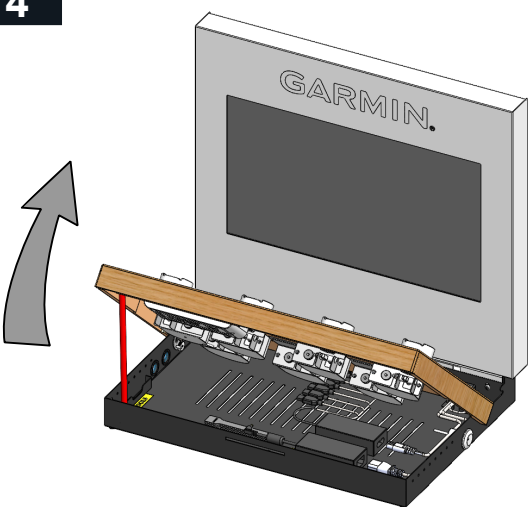


5

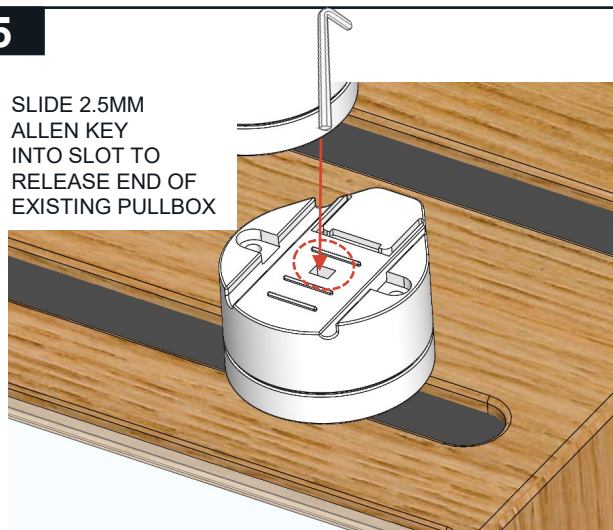 

6

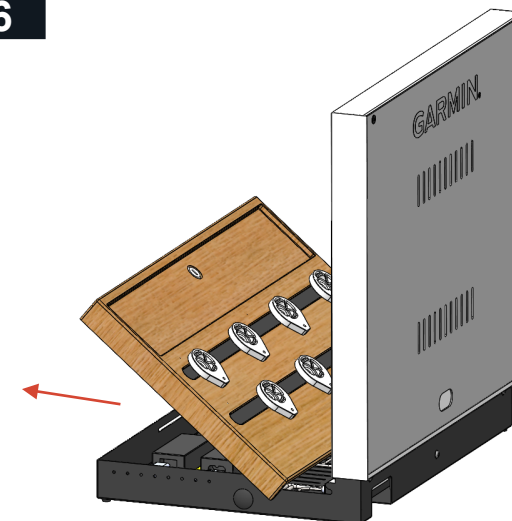


7

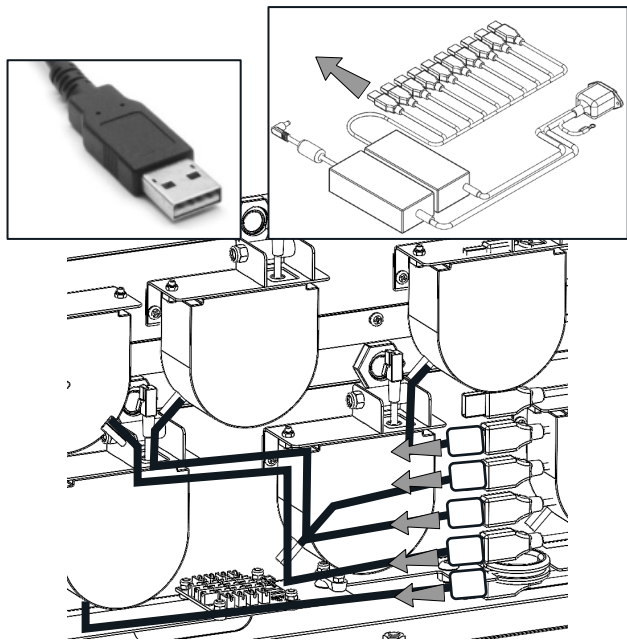 


8


CAREFULLY REMOVE ALL PLUGS ON PCB

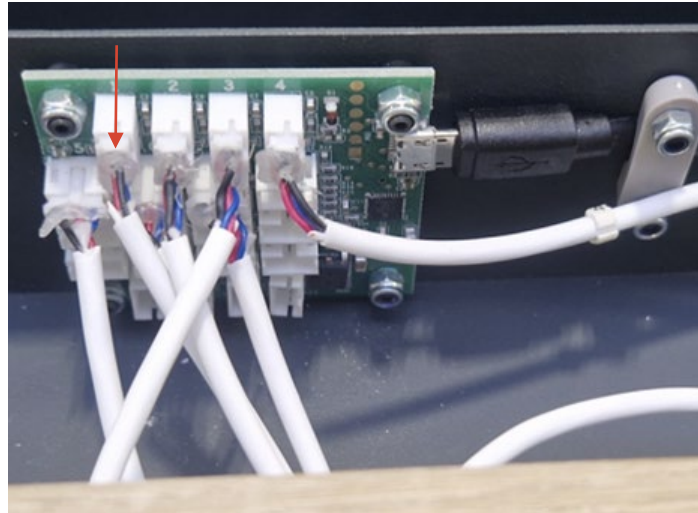

9

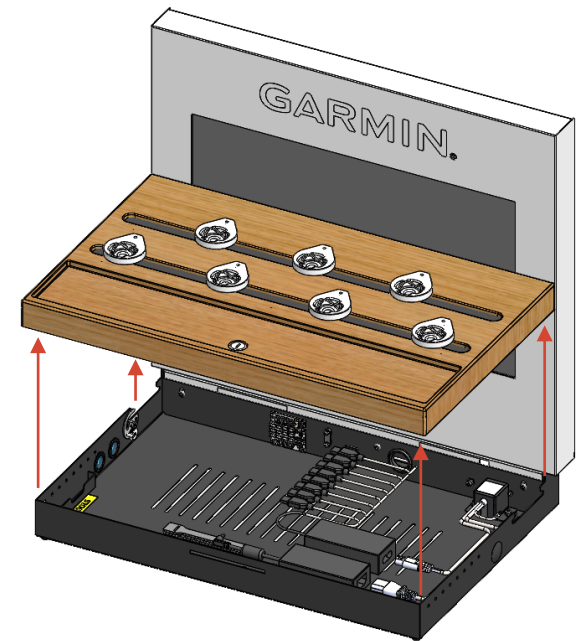


10

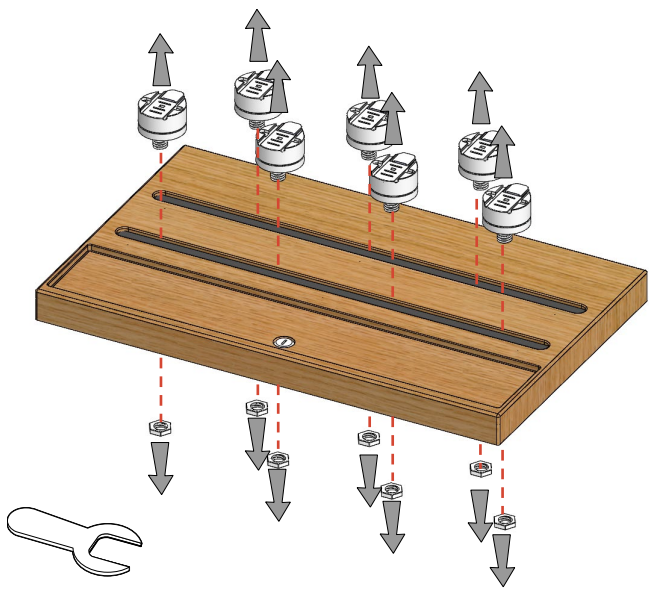


24MM SPANNER

11

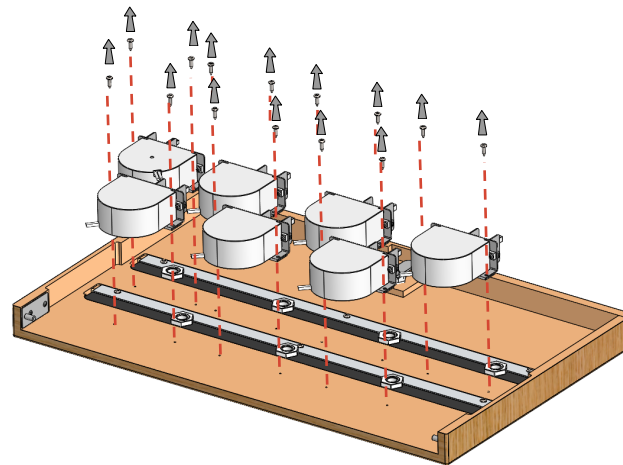


12

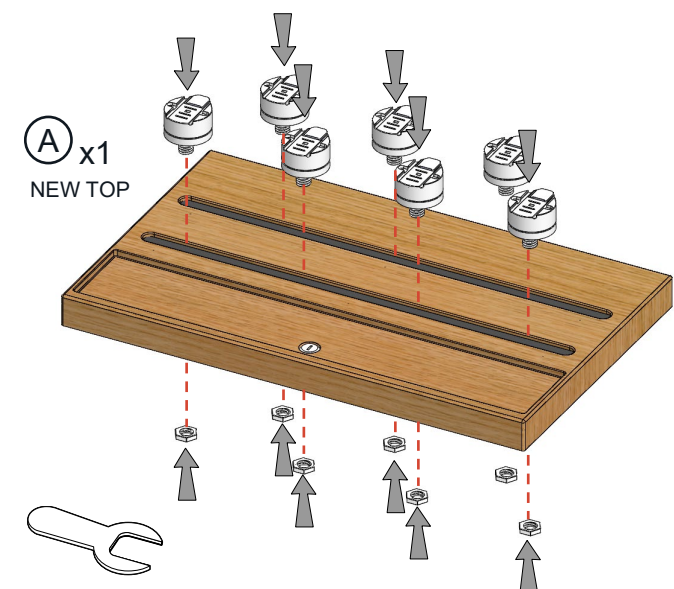


(A) x1
NEW TOP

24MM SPANNER


13 600 VERSION

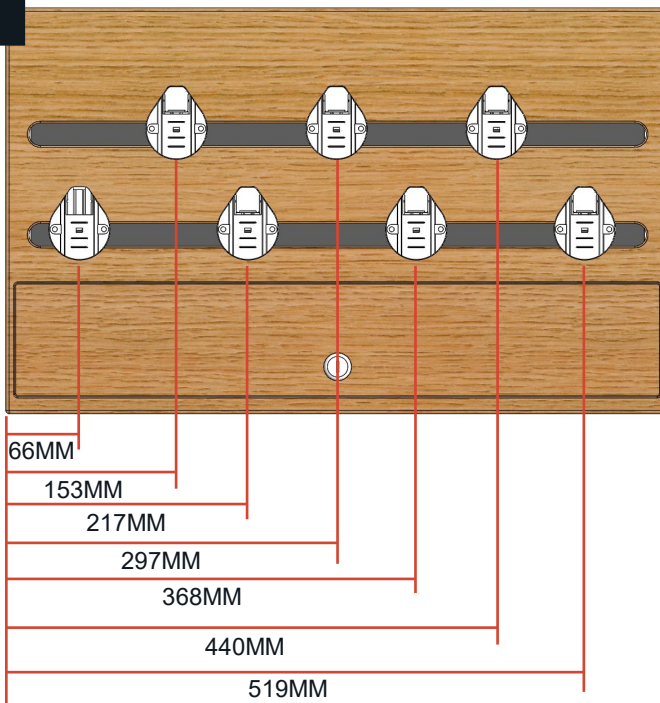


400 VERSION

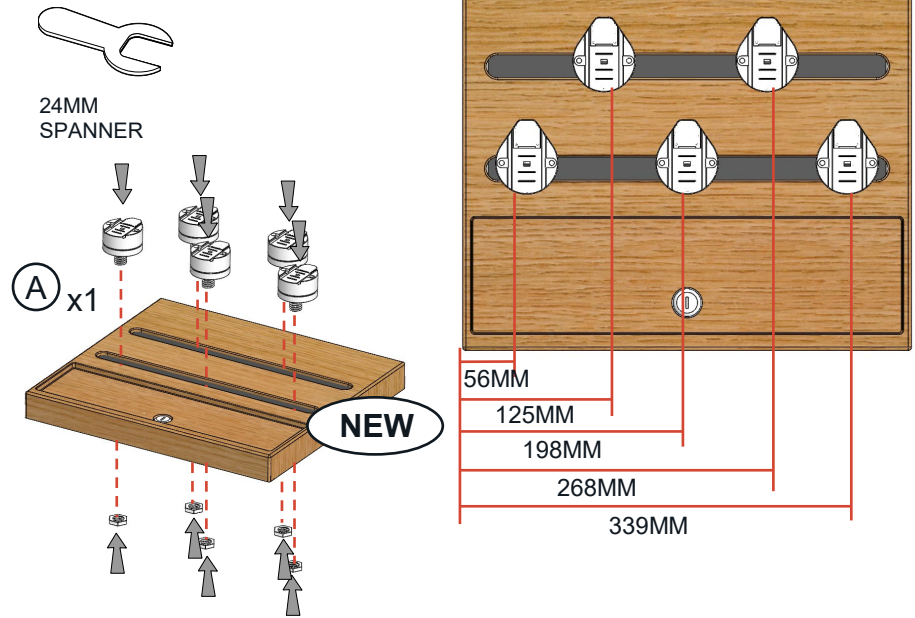

14 600 VERSION


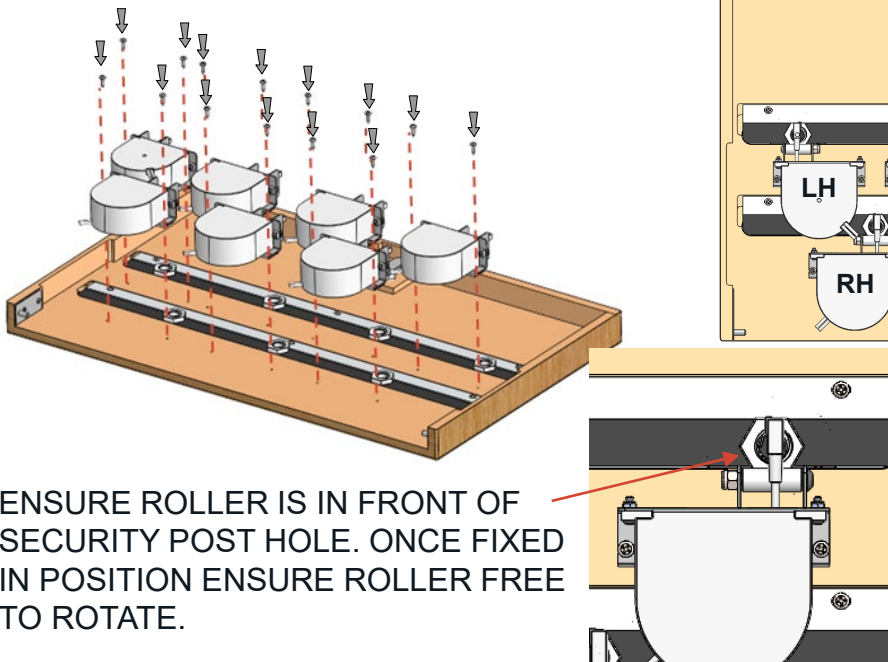


400 VERSION

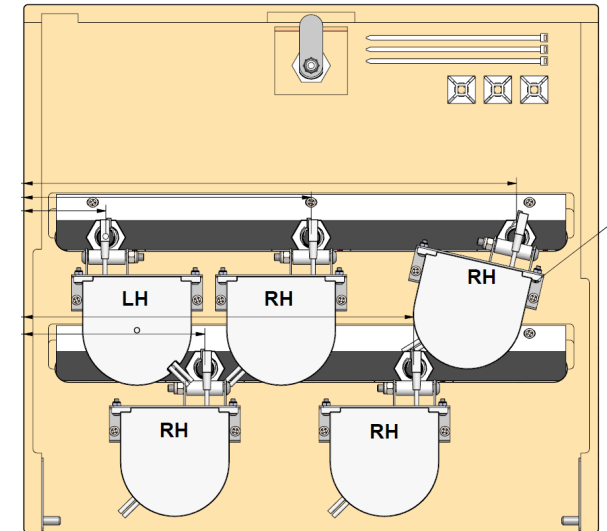


15


TEST RECOILER FOR SMOOTH MOVEMENT

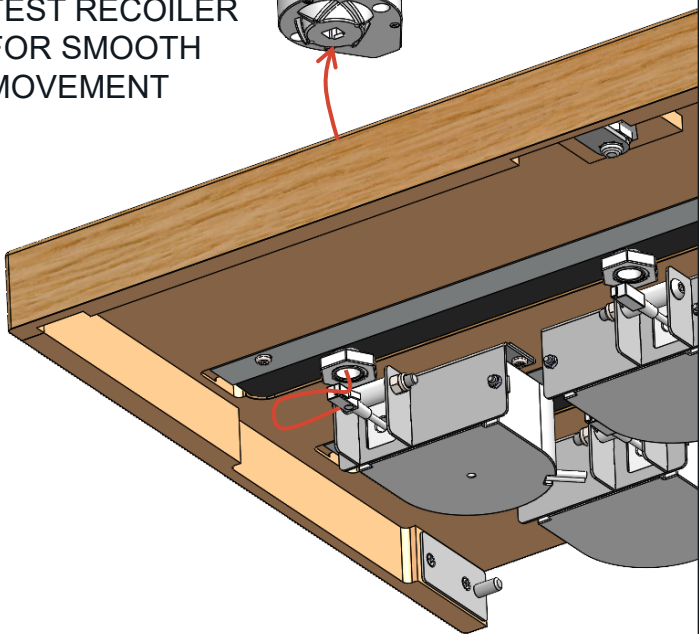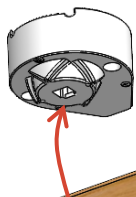

16

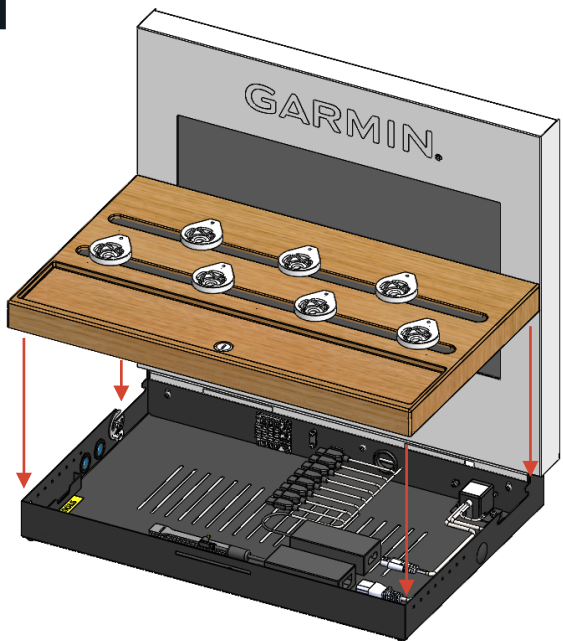


17

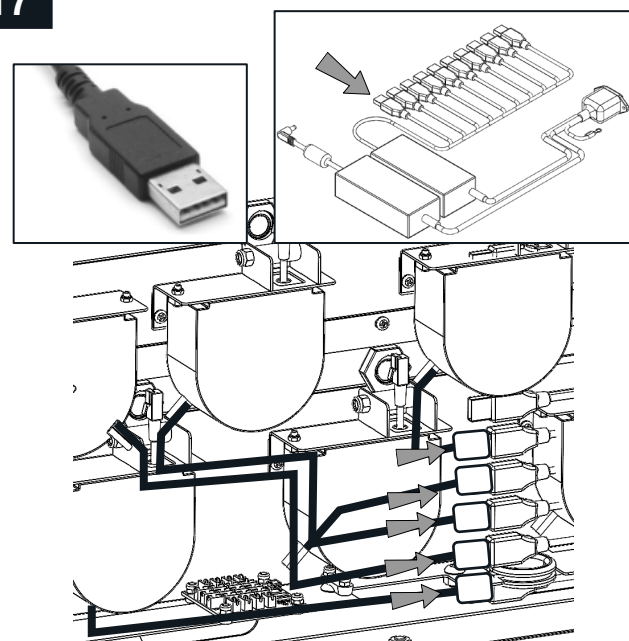 


18


PLUG CORRESPONDING POSITIONS TO PCB BOARD

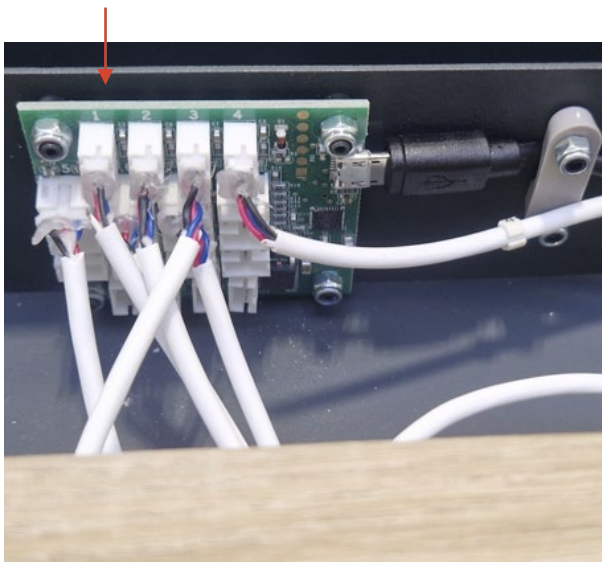


600 VERSION

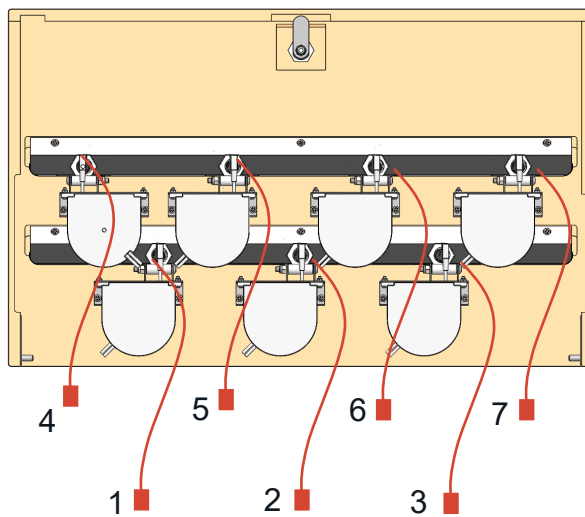


400 VERSION

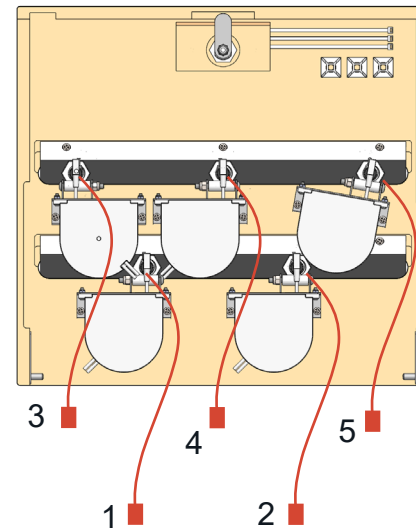


19

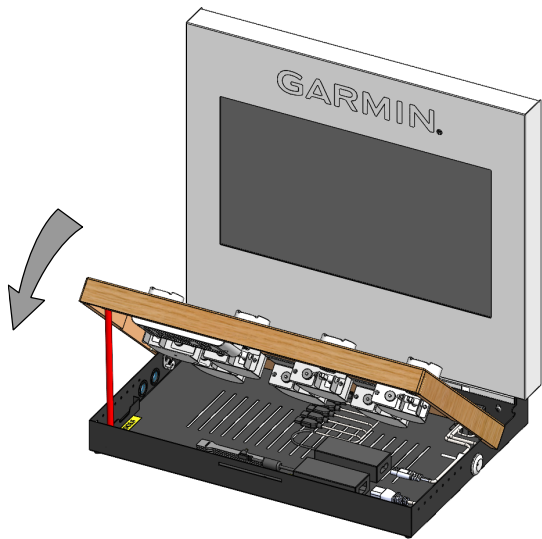


20

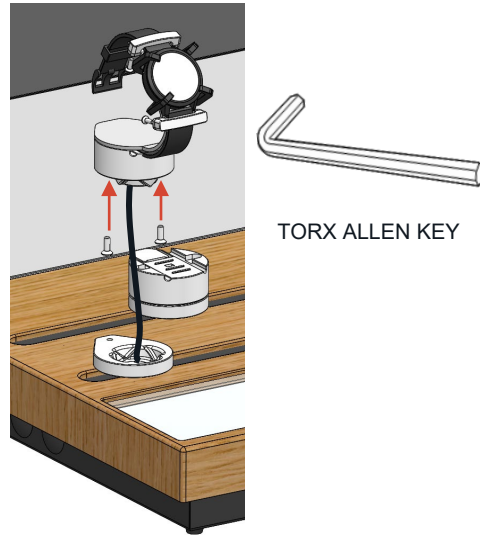 


21

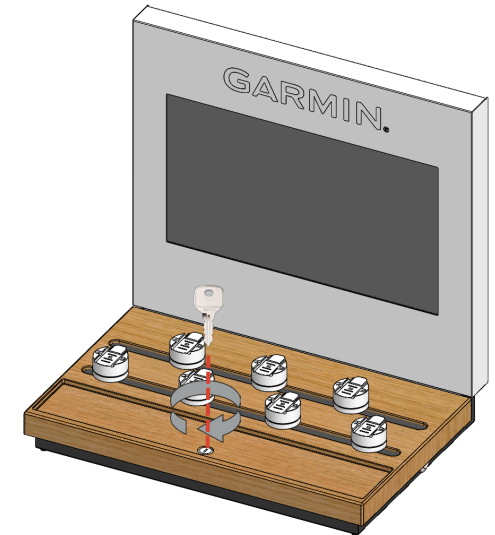 

22

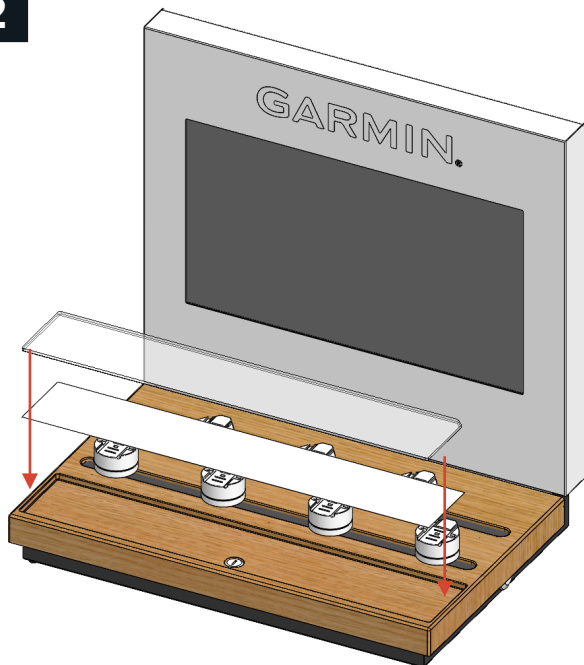

23

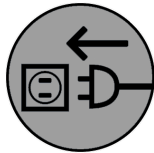

1. PLUG UNIT IN.
2. WAIT FOR SCREEN TO POWER ON.
3. LIFT EACH PRODUCT AND ENSURE THE CORRECT CONTENT PLAYS ON THE SCREEN.
4. IF INCORRECT CONTENT PLAYS PLUGS TO THE PCB WILL NEED TO BE SWAPPED OVER.

