


Tools Required (NOT supplied)

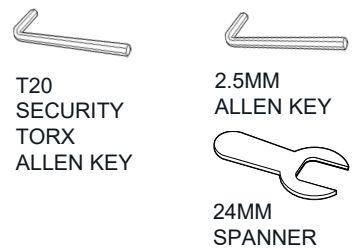

Parts

(A) x1
NEW TOP




(B) x2
DOUBLE-SIDED VHB ADHESIVE TAPE





GUIDE SHOWS CTU – 600MM VERSION BUT IS ALSO APPLICABLE FOR CTU – 400MM VERISON.

PLEASE REFER TO INDIVIDUAL STEPS FOR CORRECT UNIT VERSION.



1 ASK THE STORE FOR THE ALARM REMOTE

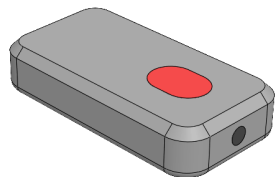

2 UNPLUG DISPLAY, REMOVE THE LENS AND PRINT

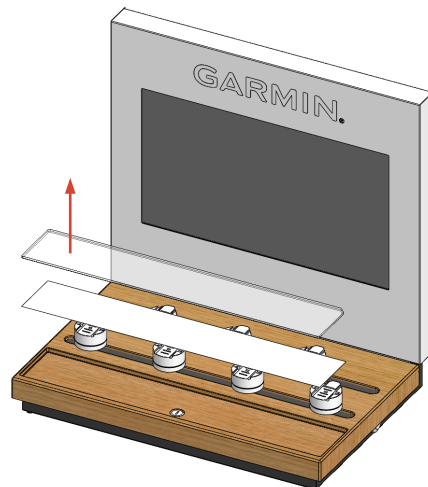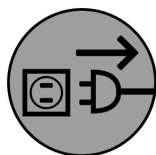


3

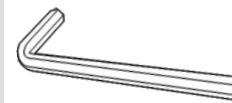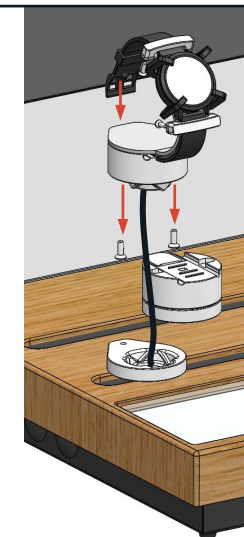


T20 SECURITY TORX ALLEN KEY


4

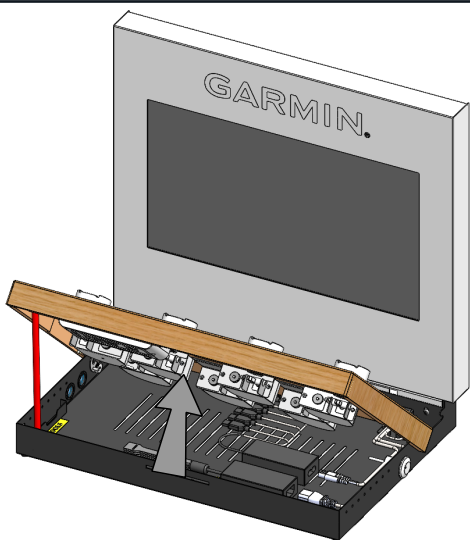


5 SLIDE 2.5MM ALLEN KEY INTO SLOT TO RELEASE END OF EXISTING PULLBOX

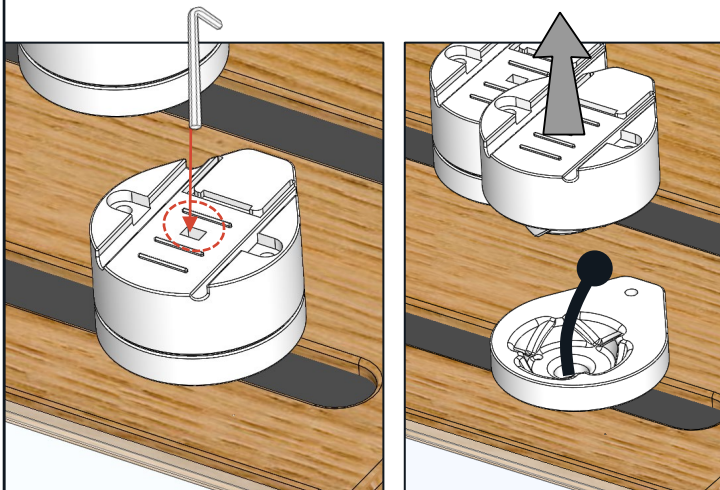


6

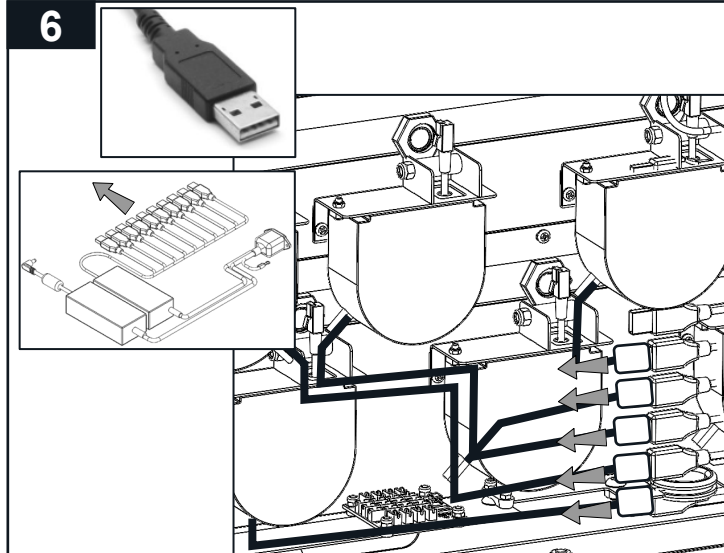


7 CAREFULLY REMOVE ALL PLUGS ON PCB

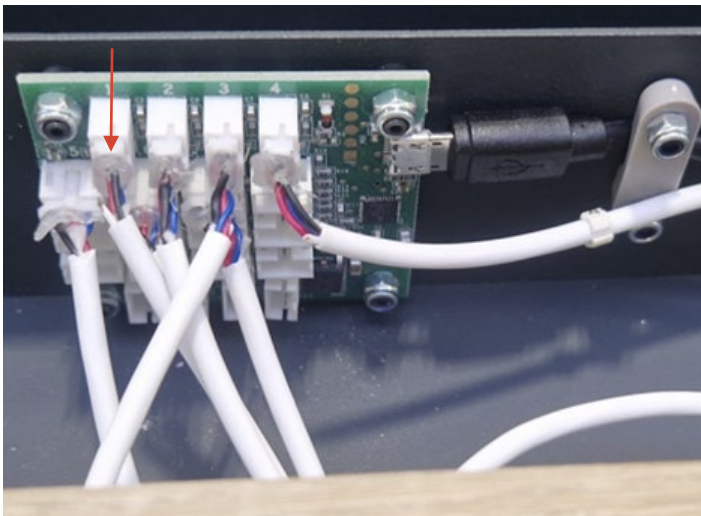


8 PEEL THE ALARM OFF THE WOOD TOP

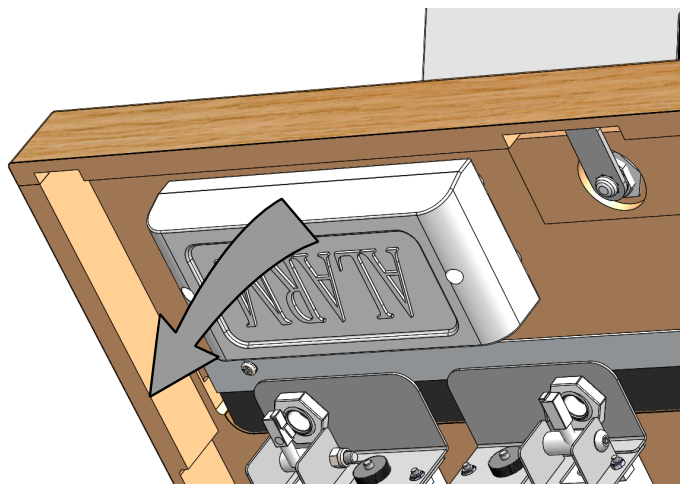


9 UNPLUG ALL THE CABLES FROM THE ALARM

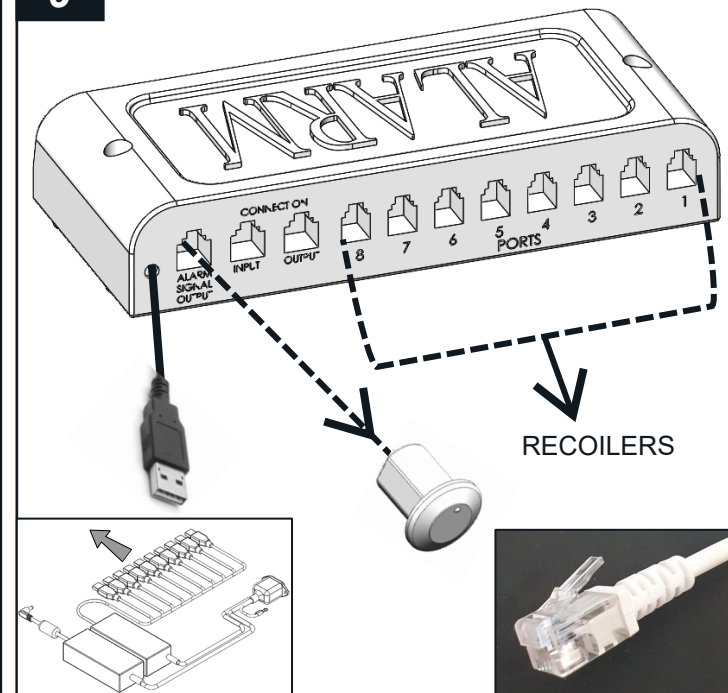

10

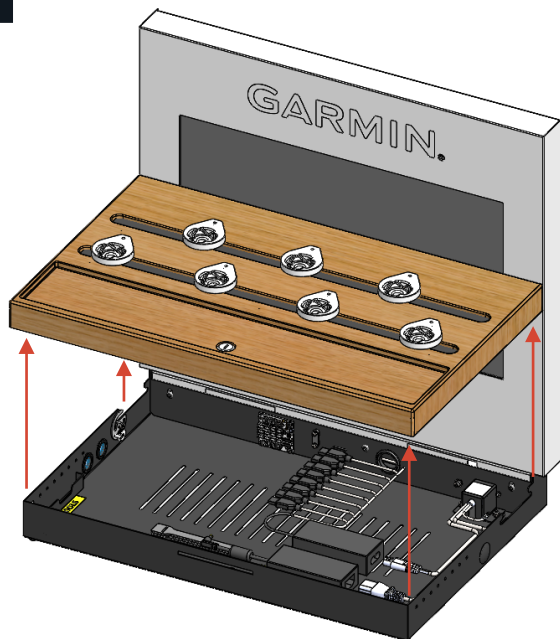


11

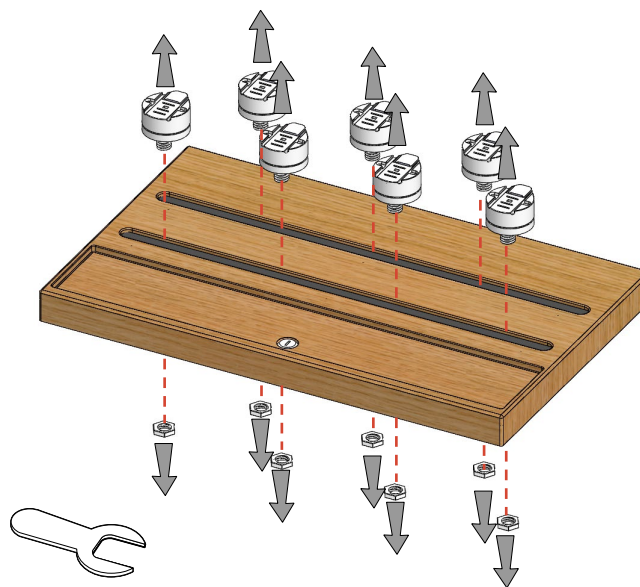

24MM
SPANNER

12

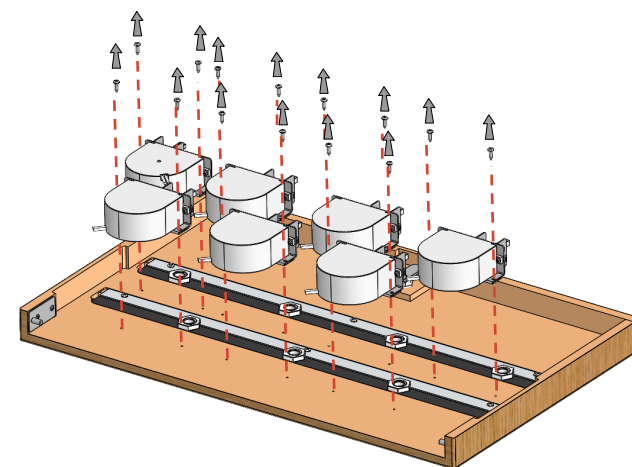



13 600 VERSION



24MM SPANNER

(A) x1

NEW

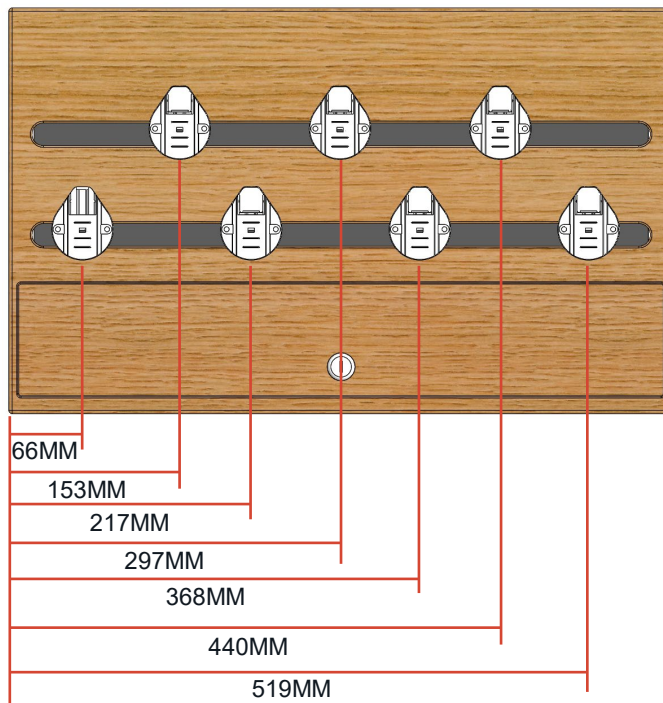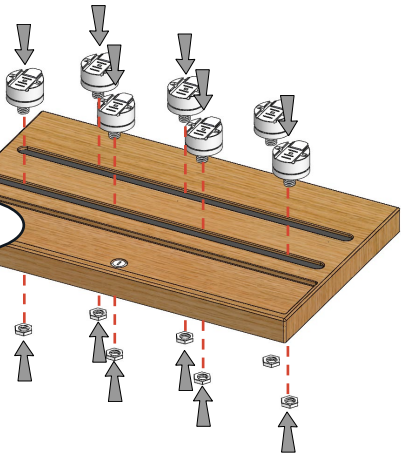



400 VERSION




24MM SPANNER

(A) x1


NEW

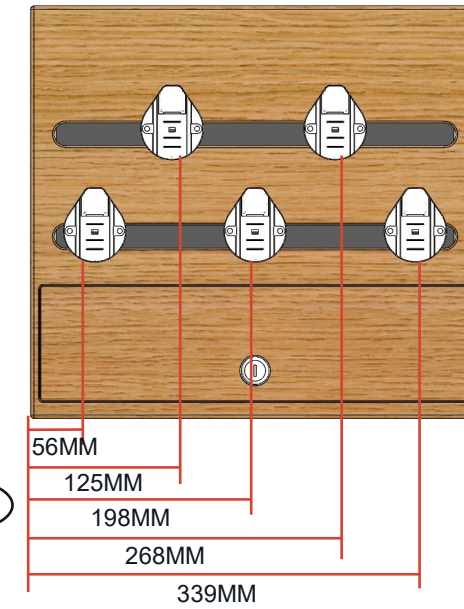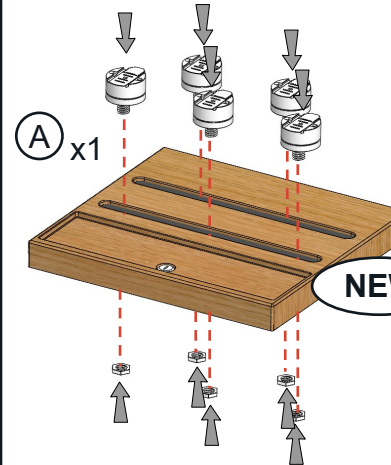


14 600 VERSION

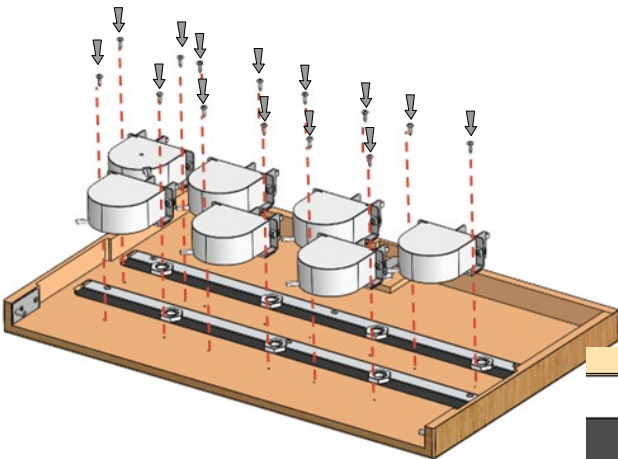


ENSURE ROLLER IS IN FRONT OF SECURITY POST HOLE. ONCE FIXED IN POSITION ENSURE ROLLER FREE TO ROTATE.

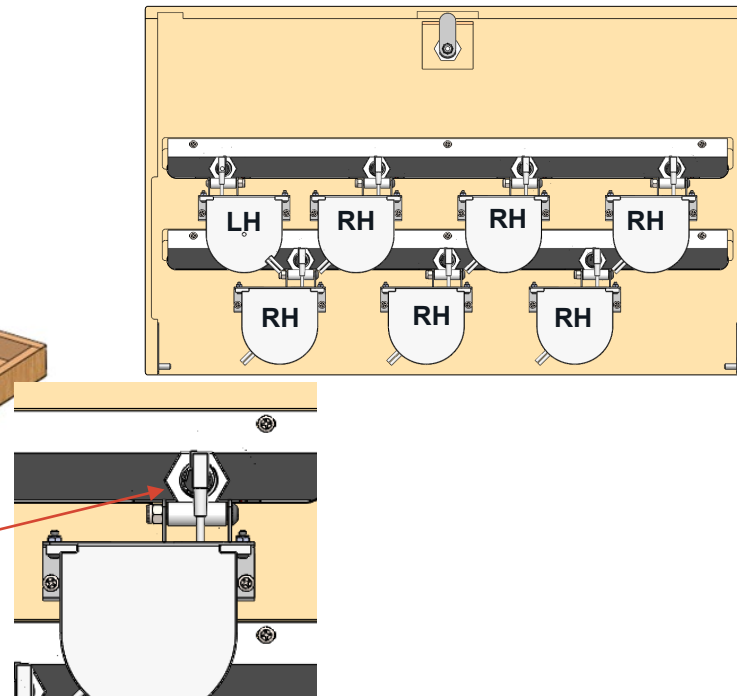

400 VERSION

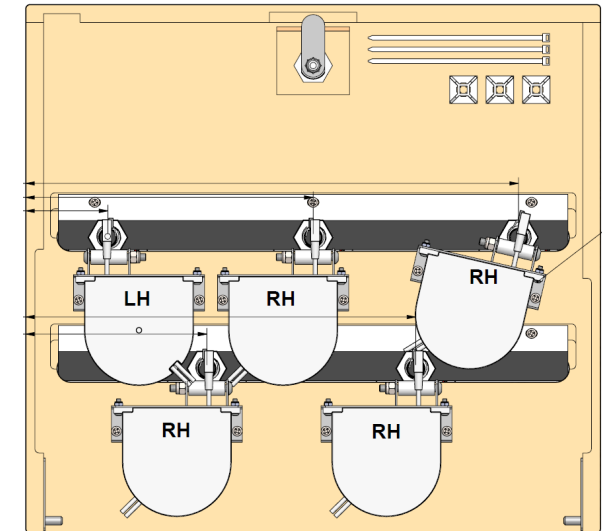


15

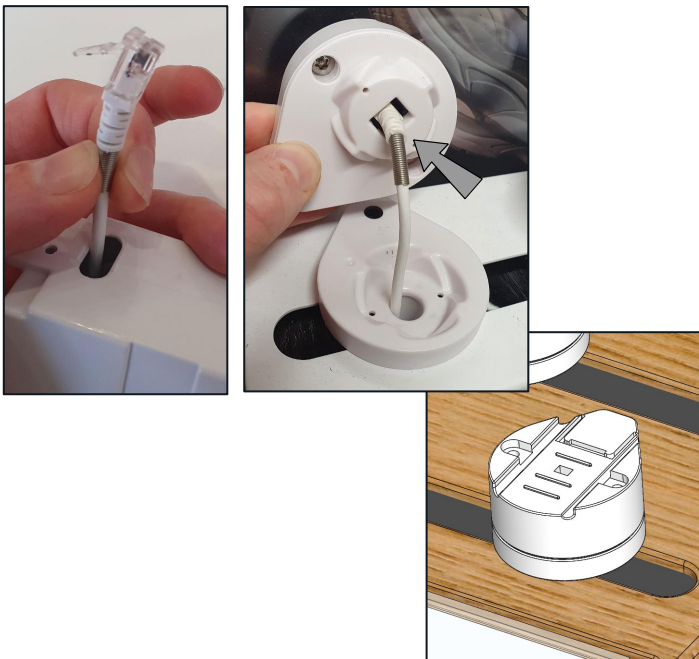

16


TEST RECOILER FOR SMOOTH MOVEMENT

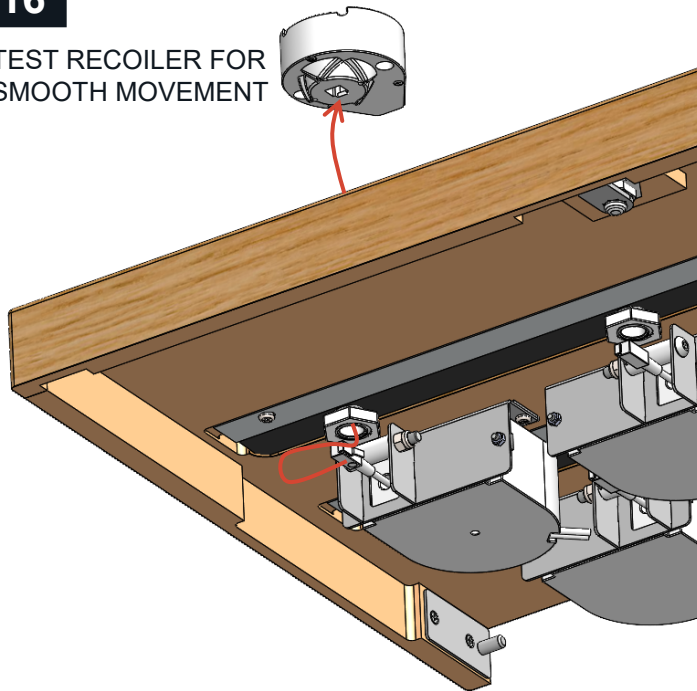

17


CLEAN OFF THE UNDERSIDE OF THE ALARM AND APPLY TAPE

(B) x2

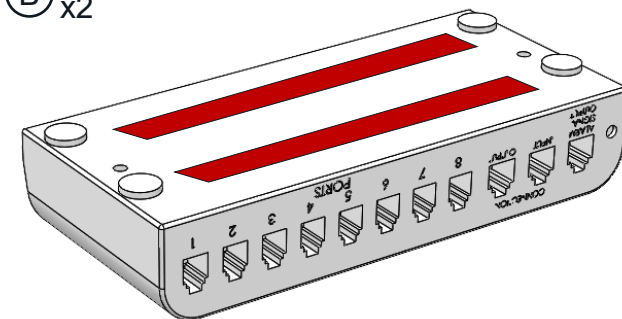


18

RECONNECT THE USB HUB, ALARM SENSOR AND RECOILERS TO THE ALARM

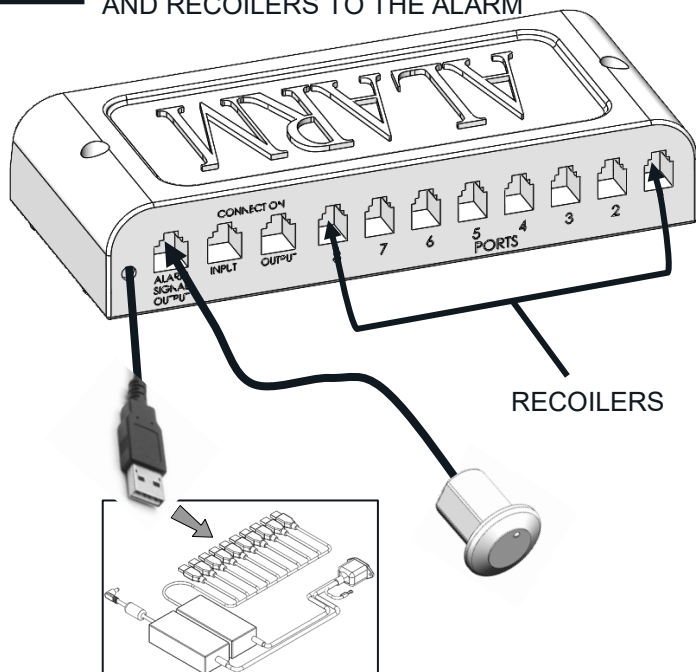


19


USING SELF-ADHESIVE TAPE FIX THE ALARM AT THE FRONT TO THE UNDERSIDE OF THE NEW WOOD TOP. PRESS FIRMLY

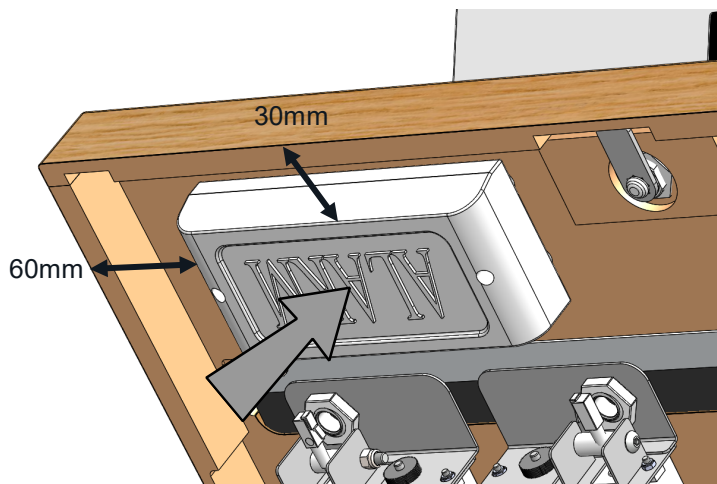


20

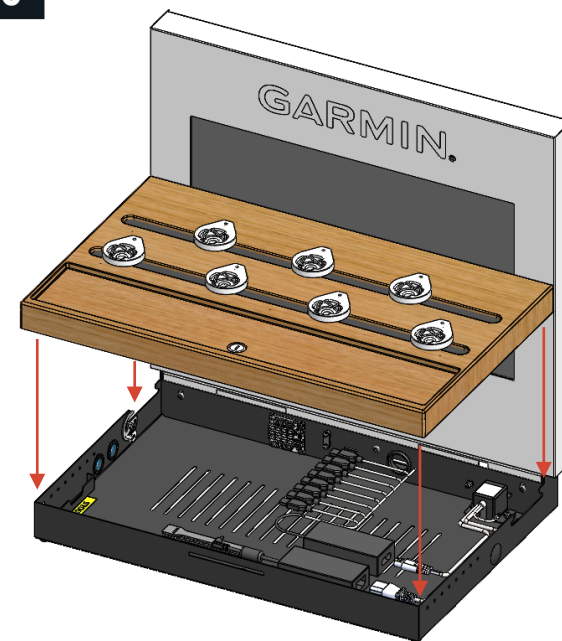


21 PLUG CORRESPONDING POSITIONS TO PCB BOARD

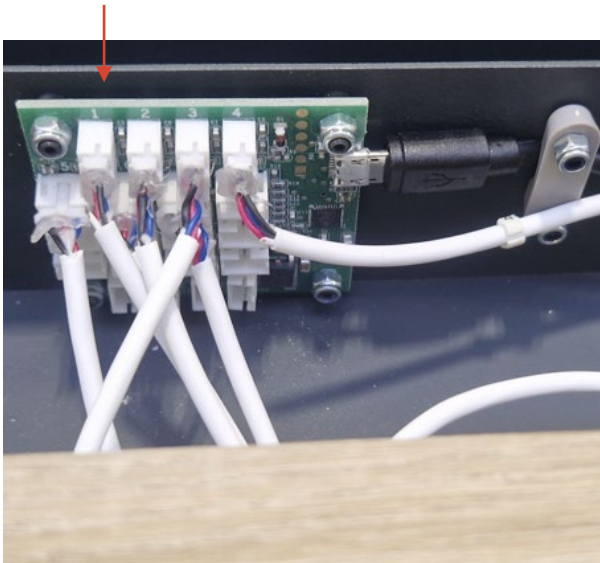


600 VERSION

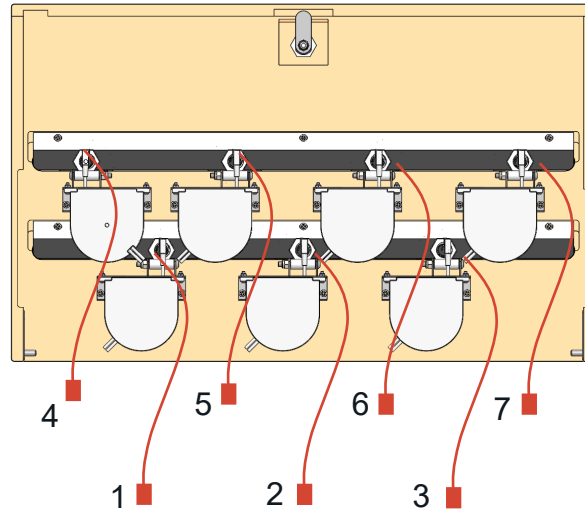


400 VERSION

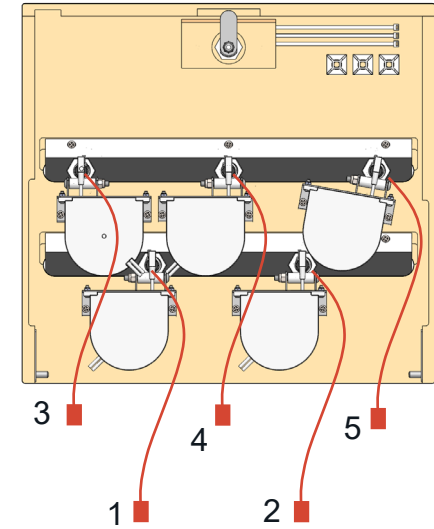


22

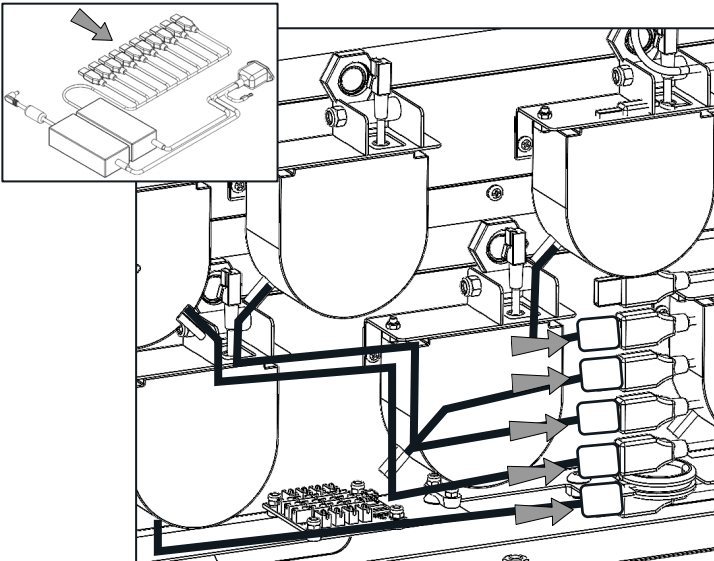


23

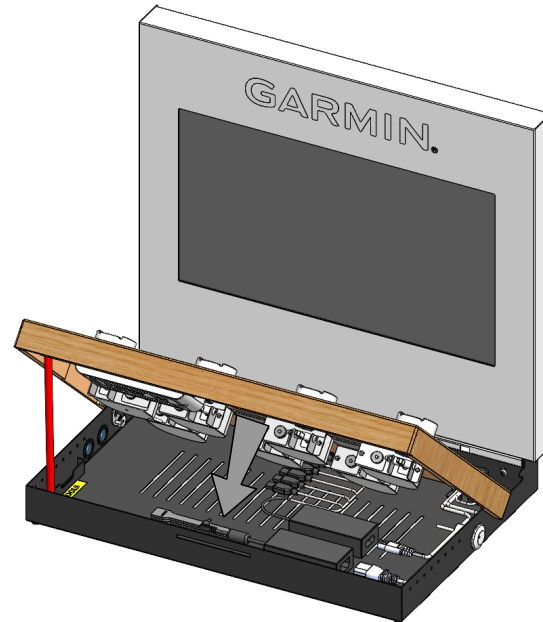

24

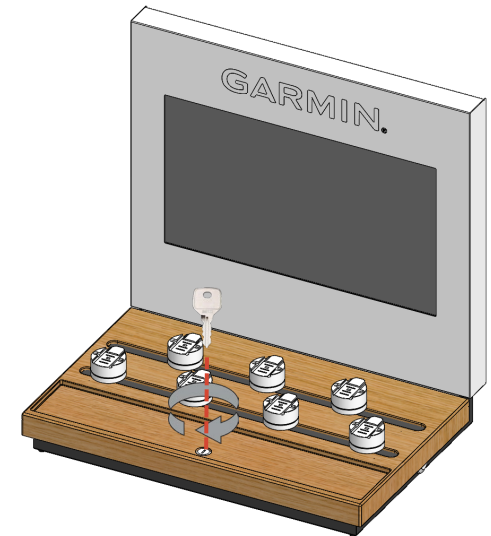


25

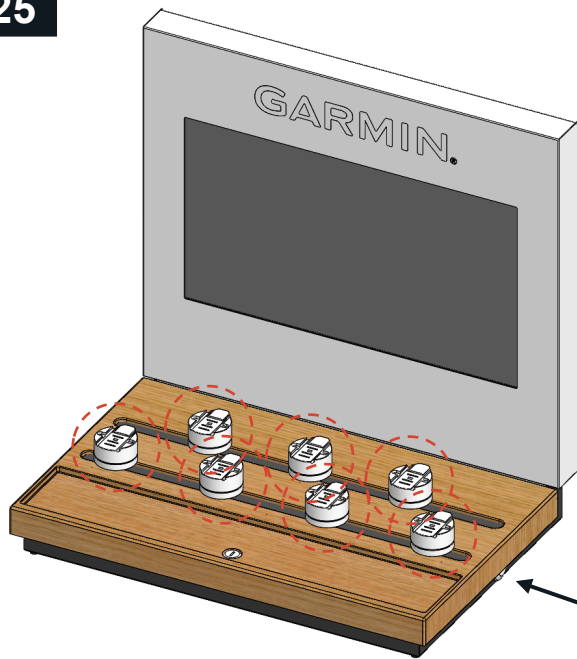


TEST THE ALARM FOR EACH PRODUCT MOUNT:

1. PLUG UNIT IN
2. HOLD THE SWITCH ON TOP OF THE PRODUCT MOUNT IN, THEN RELEASE. THE ALARM SHOULD SOUND
3. DEACTIVATE THE ALARM WITH THE REMOTE
4. REPEAT FOR ALL PRODUCT MOUNTS

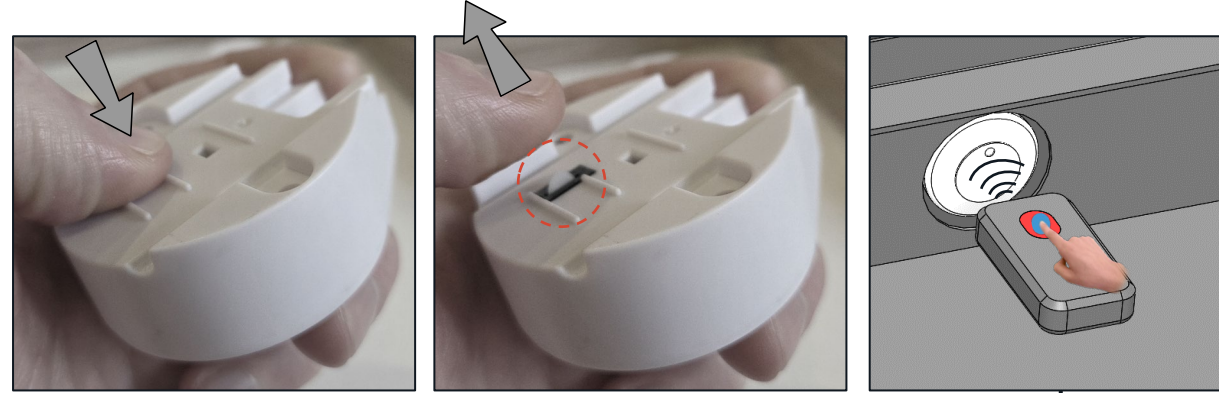


26

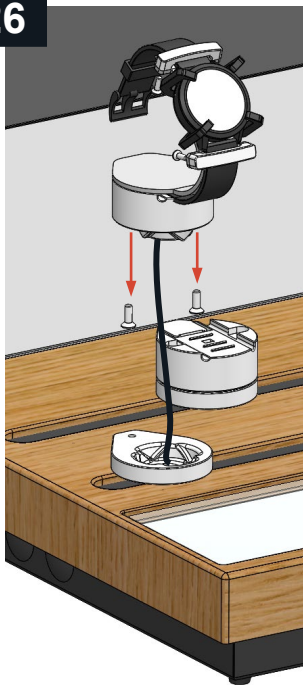

TORX ALLEN KEY

27

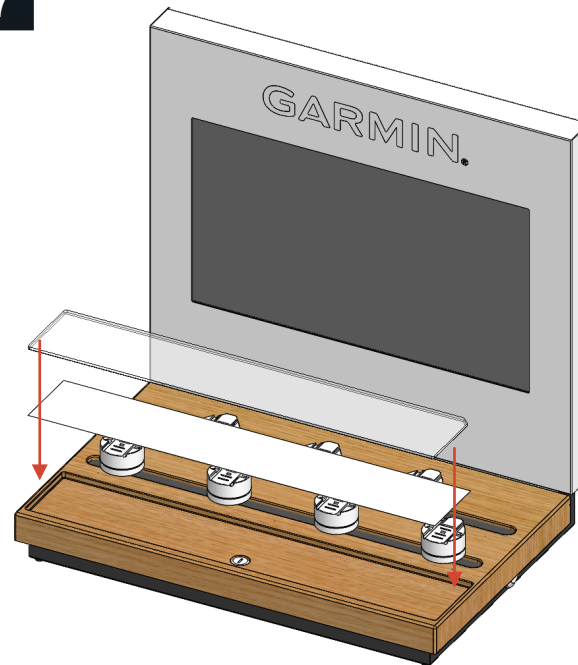

28

1. PLUG UNIT IN.
2. WAIT FOR SCREEN TO POWER ON.
3. LIFT EACH PRODUCT AND ENSURE THE CORRECT CONTENT PLAYS ON THE SCREEN.
4. IF INCORRECT CONTENT PLAYS PLUGS TO THE PCB WILL NEED TO BE SWAPPED OVER.

