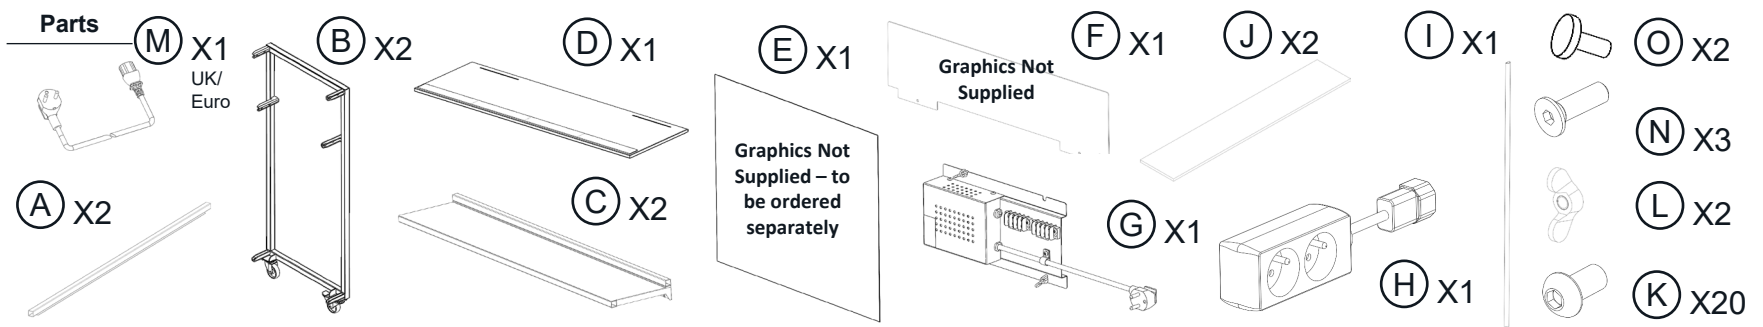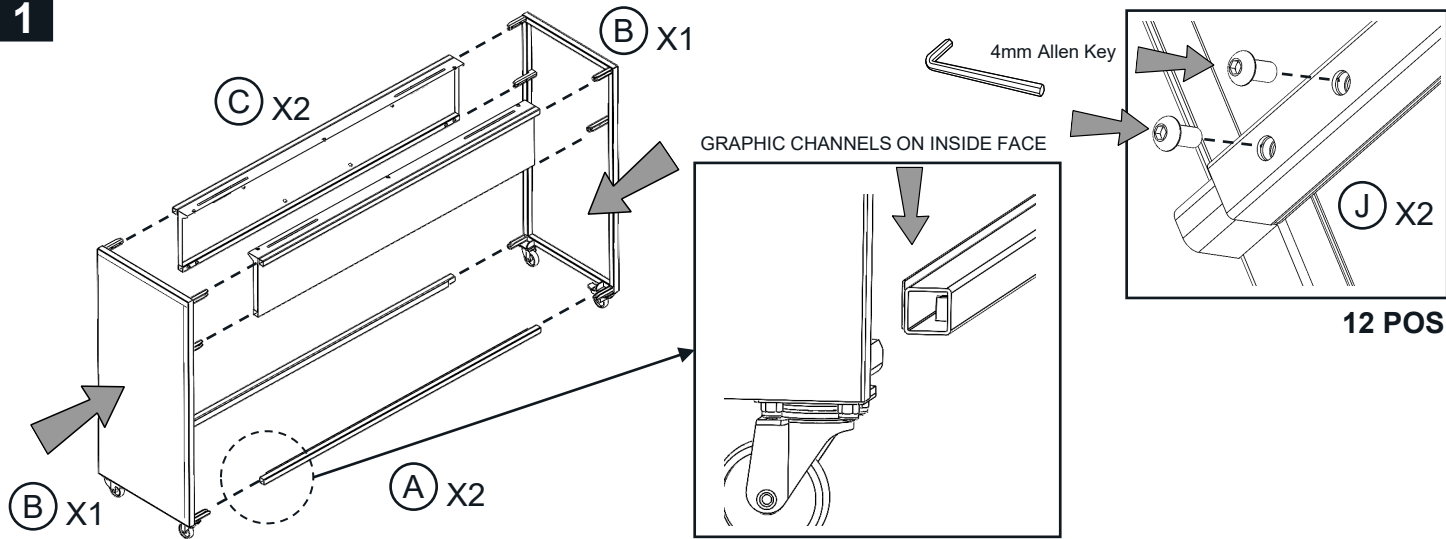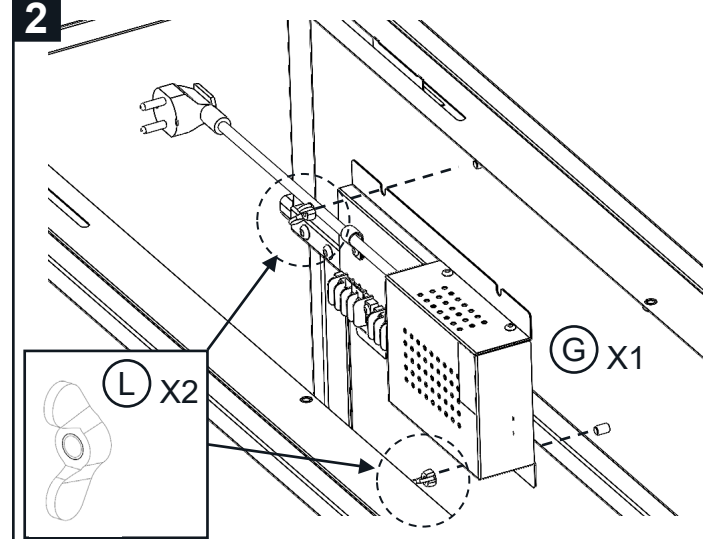# GARMIN

## BASIC DISPLAY SINGLE SIDED

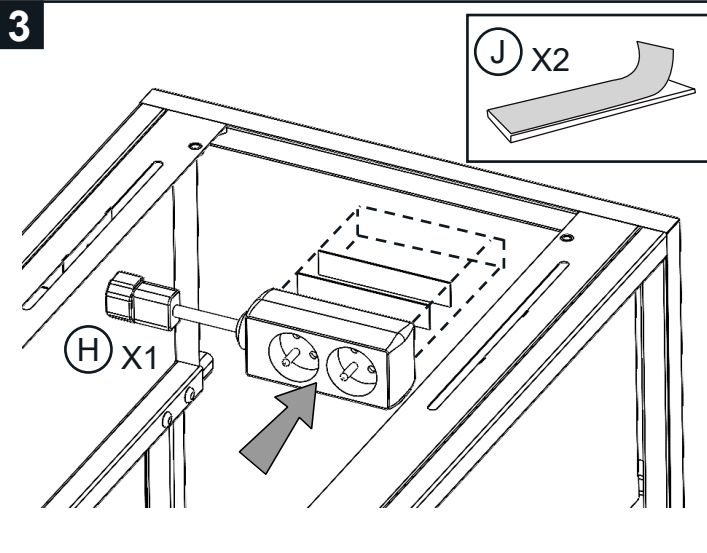P11963 | 03/05/2024

## ASSEMBLY GUIDE

### TOOLS REQUIRED – SUPPLIED

4mm Allen Key

**Parts**

(M) X1 UK/Euro

(A) X2

(B) X2

(D) X1

(C) X2

(E) X1 — Graphics Not Supplied – to be ordered separately

Graphics Not Supplied

(F) X1

(J) X2

(G) X1

(H) X1

(I) X1

(O) X2

(N) X3

(L) X2

(K) X20

**1**

(C) X2

(B) X1

GRAPHIC CHANNELS ON INSIDE FACE

4mm Allen Key

(J) X2

**12 POS**

(B) X1

(A) X2

**2**

(L) X2

(G) X1

**3**

(J) X2

(H) X1

**4**

**5**

(I) X1

**GARMIN**

**6**



BRAKES MUST BE ENGAGED ONCE
UNIT IS IN POSITION.
ONLY ONCE UNIT IS SECURE CAN
THE POWER BE PROVIDED TO UNIT

**(UNIT MUST ALSO BE UNPLUGGED
AND CABLE HELD INSIDE UNIT WHEN
UNBRACKED AND MOVING UNIT)**

**7**

(M) X1
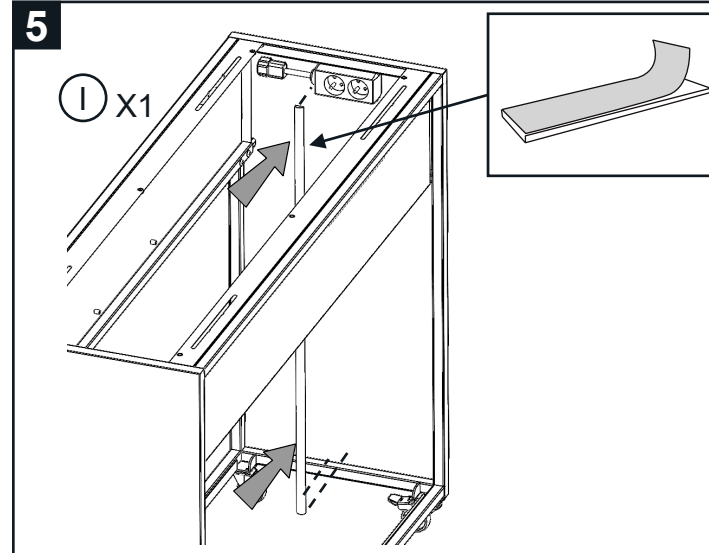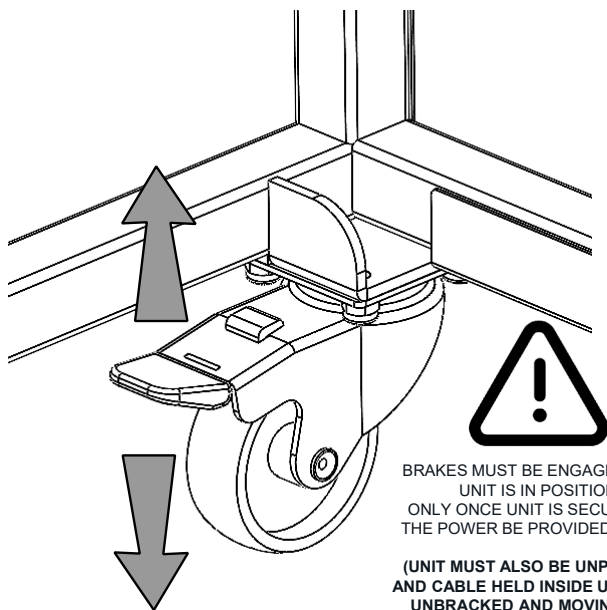UK or
Euro



**8**

GPSMAP® 8410/8610 Series Flush
Mount Template
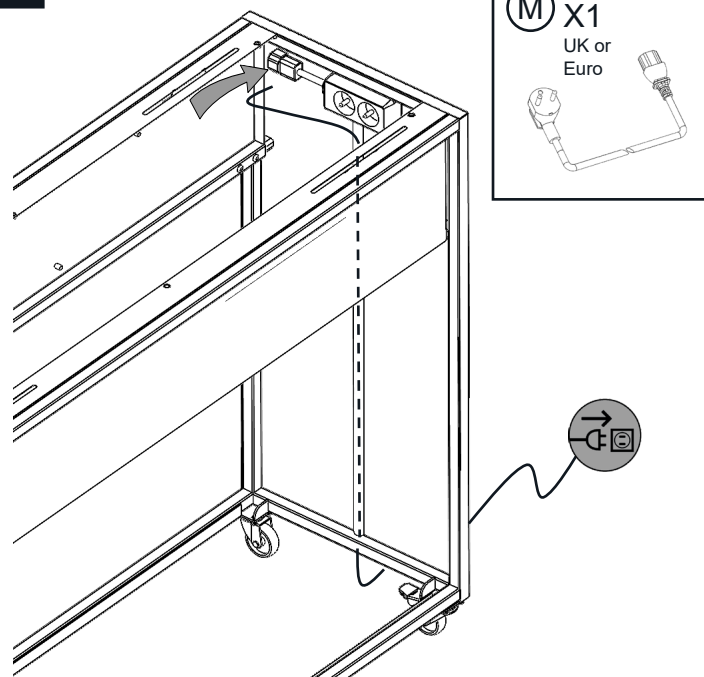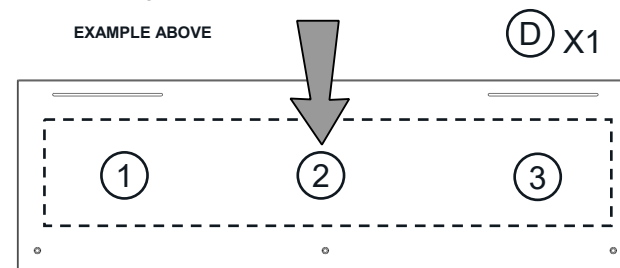
BLANK TOP SURFACE FOR PRODUCT
PLACECMENT, CUTOUTS OR
MOUNTING HOLE TO BE MADE ON
INSTALLATION OF CHOSEN
PRODUCTS
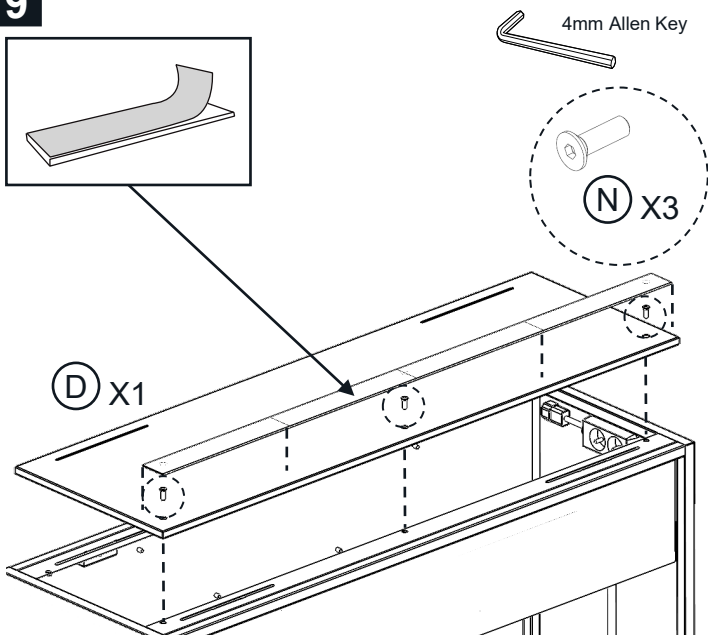
TEMPLATES SUPPLIED WITH
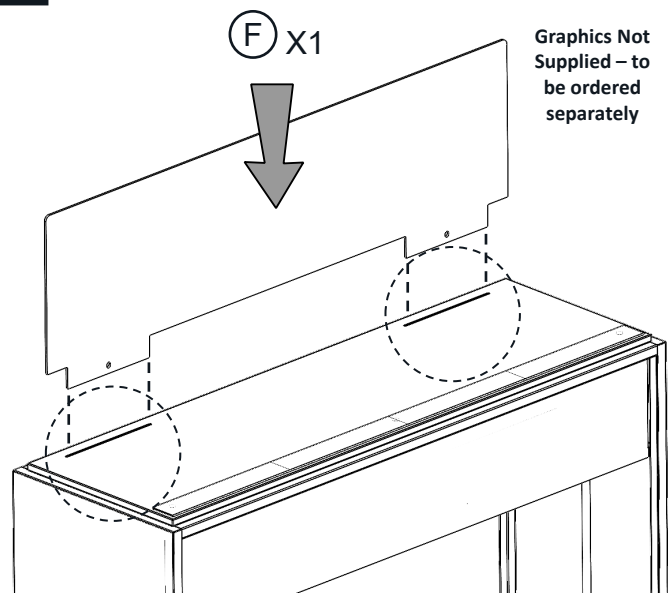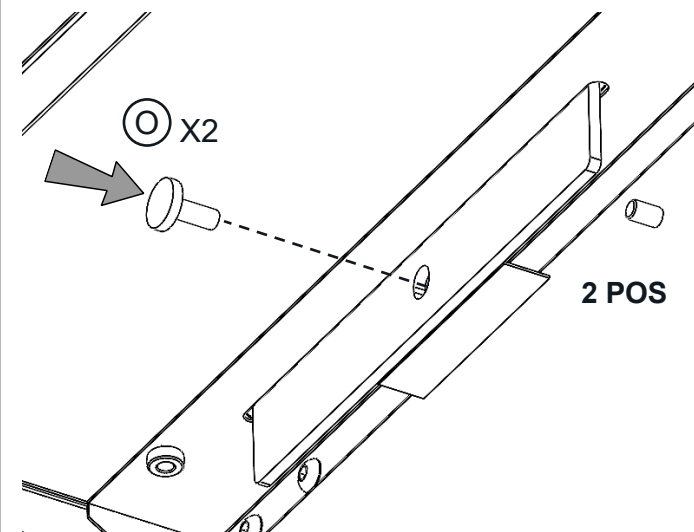PRODUCT BOX OR ONLINE GARMIN
WEBSITE

**EXAMPLE ABOVE**

(D) X1

① ② ③

**MAX 3 PRODUCT**

**9**

4mm Allen Key

(N) X3

(D) X1



**10**

(F) X1

**Graphics Not
Supplied – to
be ordered
separately**



**11**

(O) X2

**2 POS**

GARMIN®

**12**



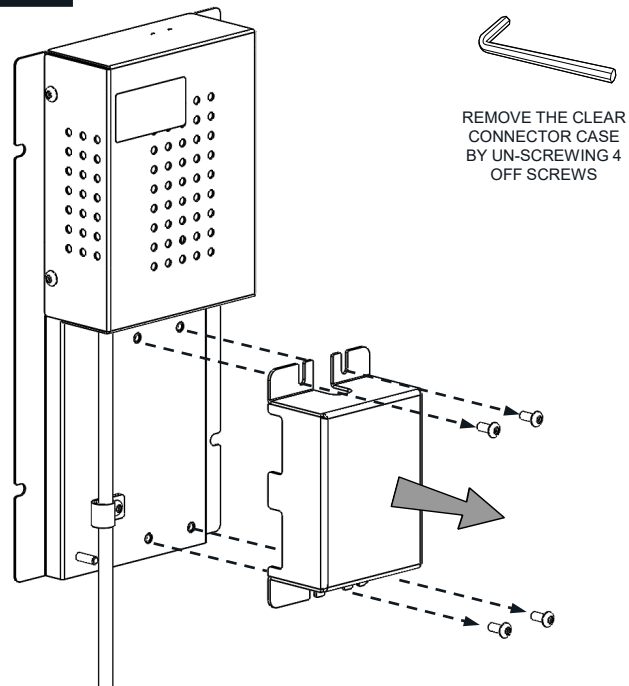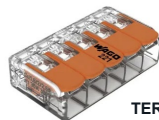REMOVE THE CLEAR CONNECTOR CASE BY UN-SCREWING 4 OFF SCREWS

**13**

⚠️
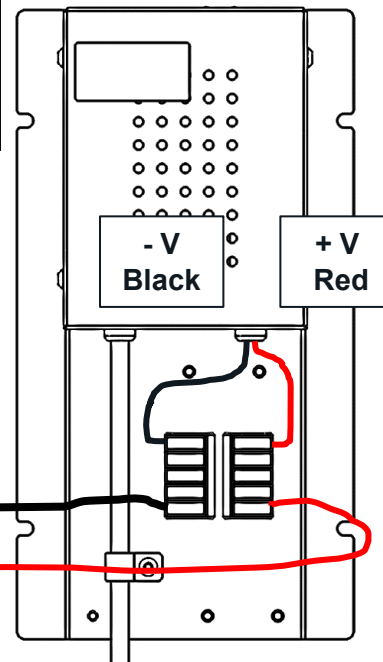
UNIT MUST BE DISCONNECTED FROM POWER AND UNPLUG BEORE WIRING UP 12V POWER SUPPLIES FROM PRODUCT TO TERMINALS
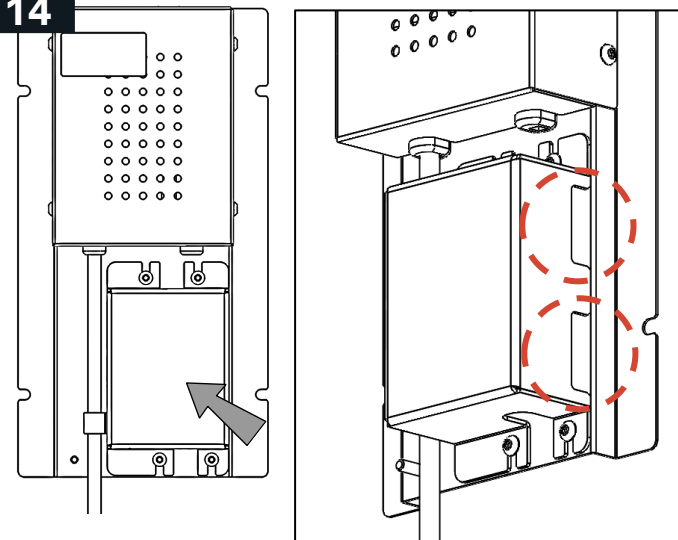
5 CONNECTOR TERMINALS PROVIDED

- V
**Black**

+ V
**Red**

PRODUCT

**14**

FIT THE COVER BACK TO THE TRAY. MAKE SURE ALL THE CABLES AND CONNECTORS ARE MANAGED UNDER THE COVER. THERE ARE RELIEFS IN THE COVER FOR CABLES.

**15**

Ⓔ X1

**Graphics Not Supplied – to be ordered separately**

GARMIN.