

GARMIN

FABRIC LIGHTBOX HEADER 600

P11963


April 2024

ASSEMBLY GUIDE

TOOLS REQUIRED – SUPPLIED



Parts

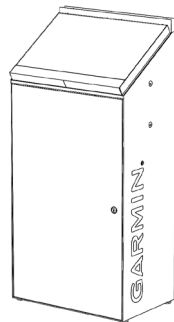

M.I.D 60CM
FSDU

(A) X1

(B) X7
M6X8

(C) X2
M4X6


(D) X1

(E) X1

(G) X1


FABRIC
LIGHTBOX
HEADER 600

(H) X1

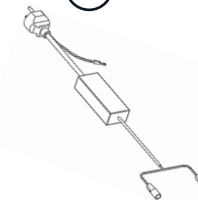


1

(A)

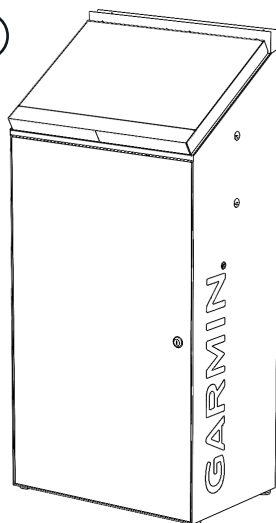

2

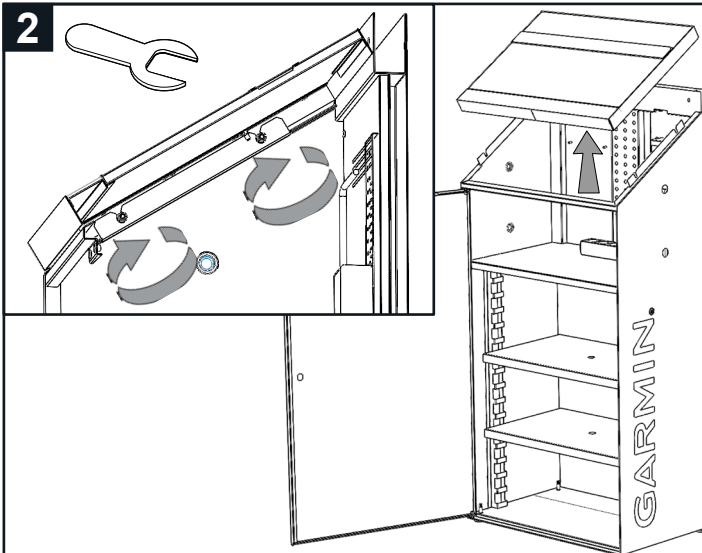


3

(B) X7
M6X8

(G) X1


FIX HEADER TO FSDU
USING 4 SCREWS ON
THE FRONT AND 3
SCREWS ON THE REAR

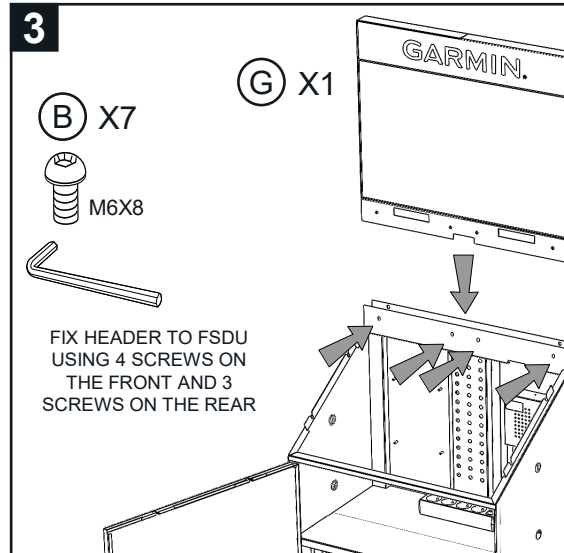


4

(H) X1

PLUG THE 2X
LIGHTING POWER
CABLES FROM THE
HEADER INTO THE
PSU SPLITTER. PLUG
THE PSU INTO THE
GANG EXTENSION

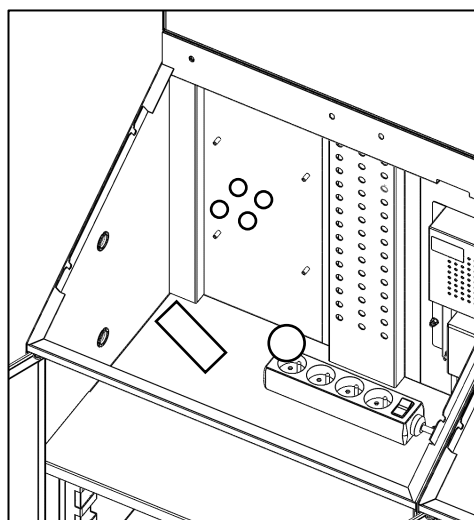

5

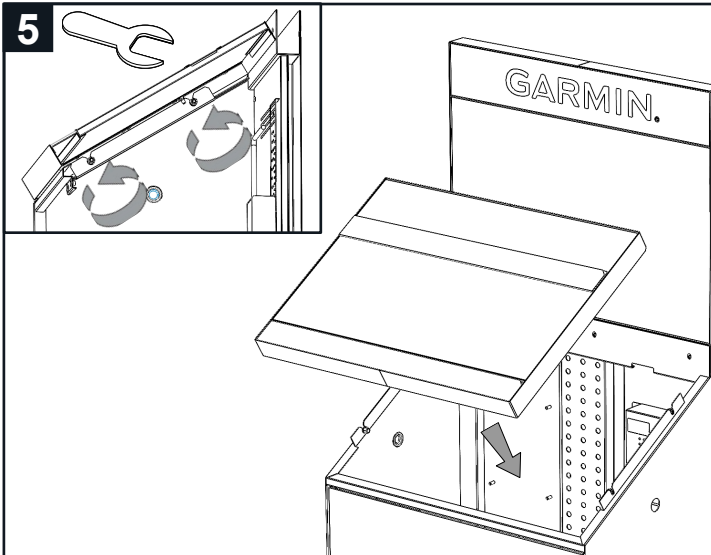

6

