

GARMIN

1st GEN CTU 600 + 2nd GEN
1200 15.6 SCREEN HEADER
P11274 | FEB 2025


ASSEMBLY DIAGRAM

Tools Required - Supplied




Parts

(A) X2
600 CTU

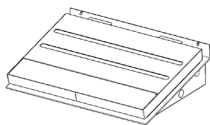

(B) X1 1200
HEADER

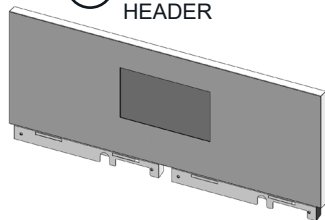


(C) X12
SCREWS



(D) X1




1

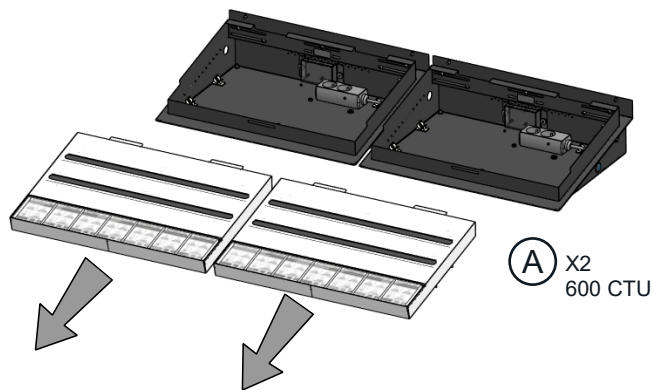


REMOVE TOP PANEL ASSEMBLIES

2

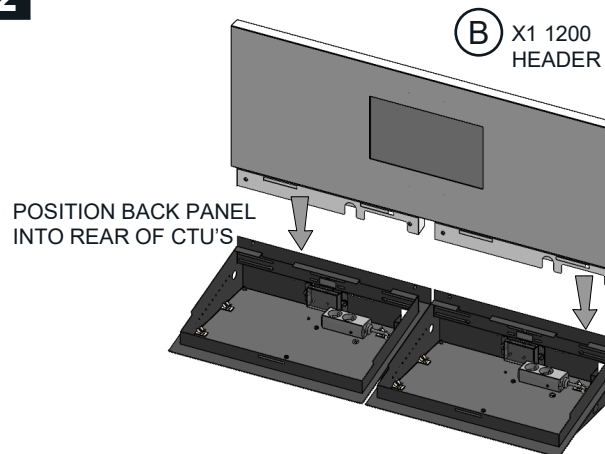


POSITION BACK PANEL
INTO REAR OF CTU'S

3

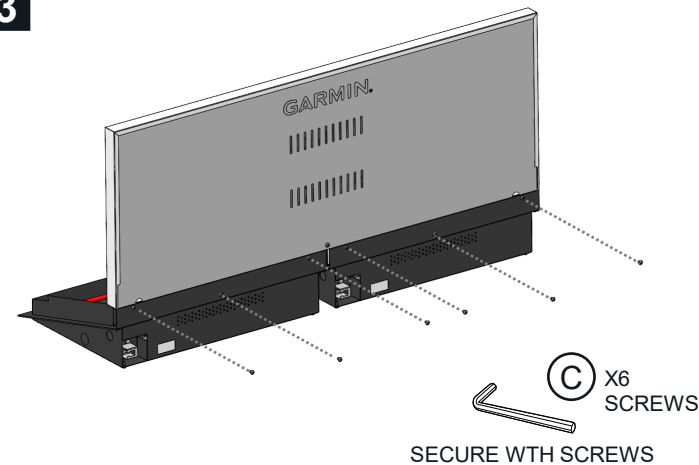


(C) X6
SCREWS
SECURE WITH SCREWS

4

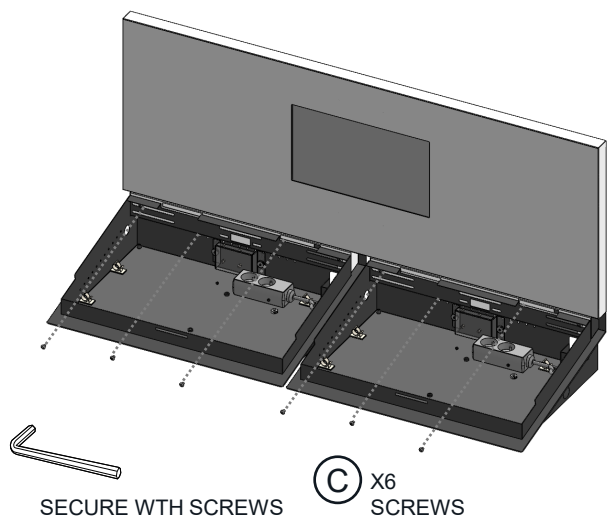


SECURE WITH SCREWS
(C) X6
SCREWS


5

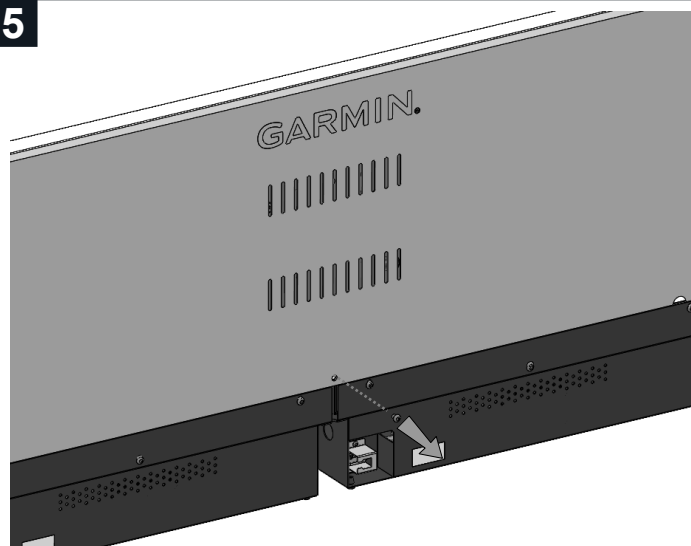

6

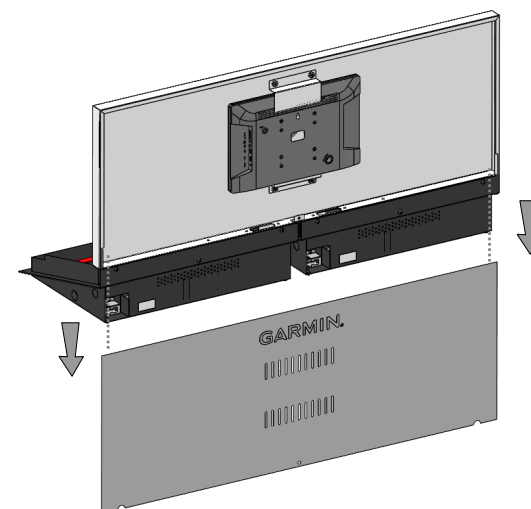

7

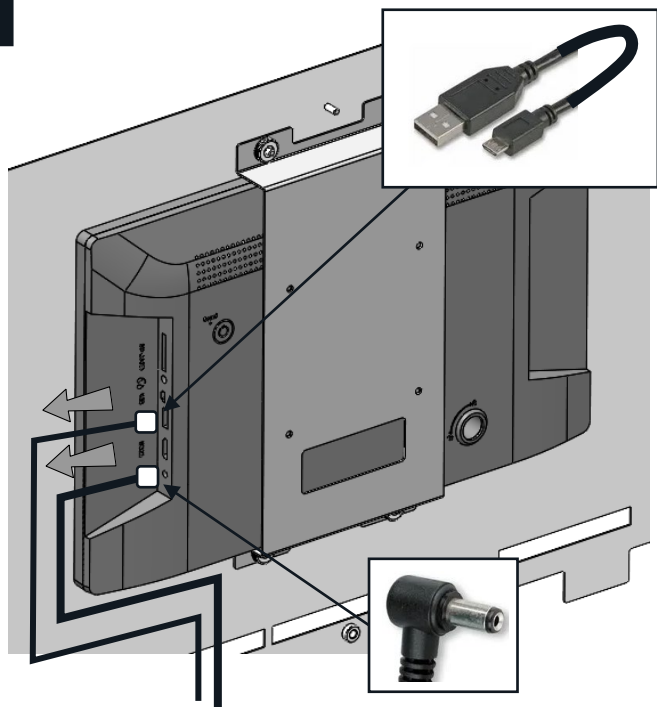

IF THE POWER
CONNECTOR AND USB
ARE ALREADY FITTED
INTO THE SCREEN THEN
UNPLUG SO THAT THE
CABLE CAN BE
THREADED THROUGH
METALWORK
BEFORE RE-ATTACHING

8


PLUG SCREEN POWER
SUPPLY INTO AVAILABLE
SOCKET IN THE 600 CTU
BASE




SCREEN PSU

9

PLUG MICRO USB END
INTO BOARD
(AND THEN CAREFULLY
REPLACE THE CLEAR
COVER)

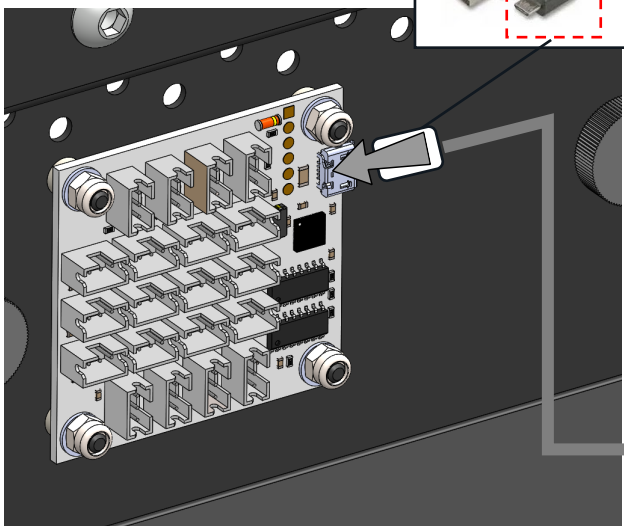


10

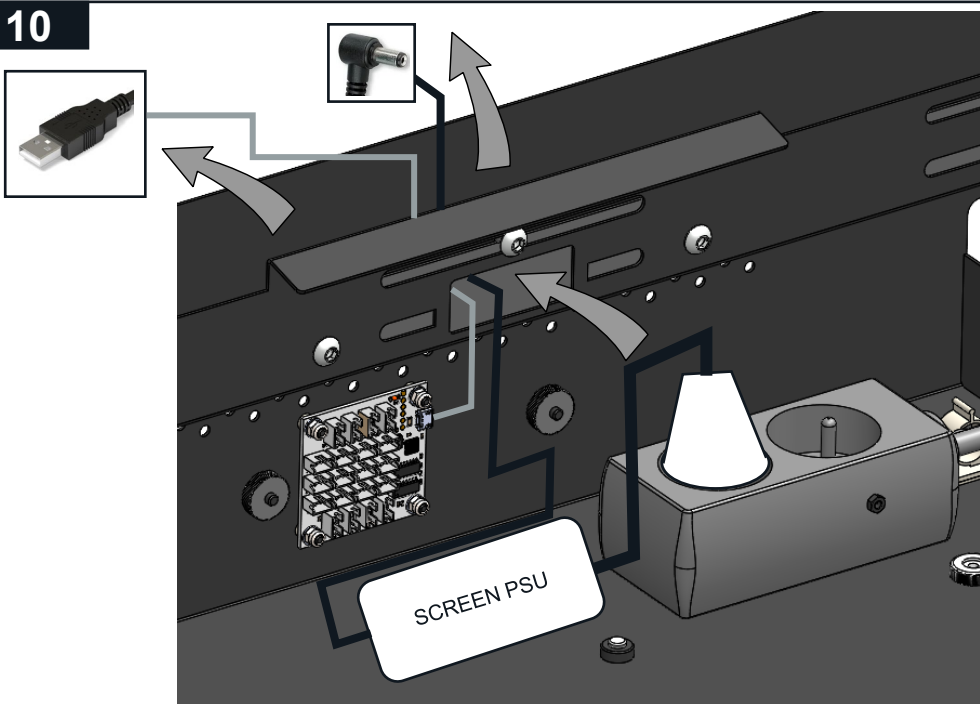


FEED BOTH THE SCREEN
POWER CONNECTOR AND
USB THROUGH THIS HOLE
AND OUT THE TOP OF THE
REAR CHANNEL.

11

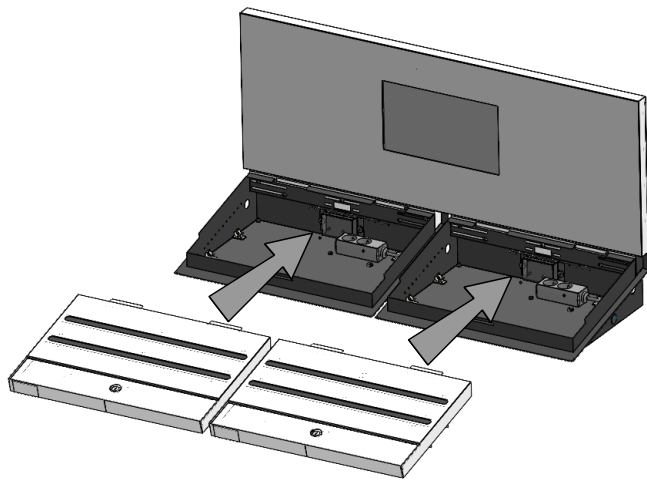


12

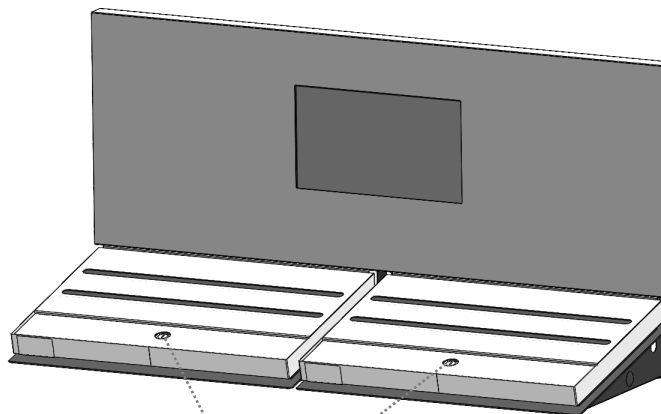


USE THE KEY TO SECURE THE
TOP PANEL ASSEMBLIES INTO
THE CTU'S

13

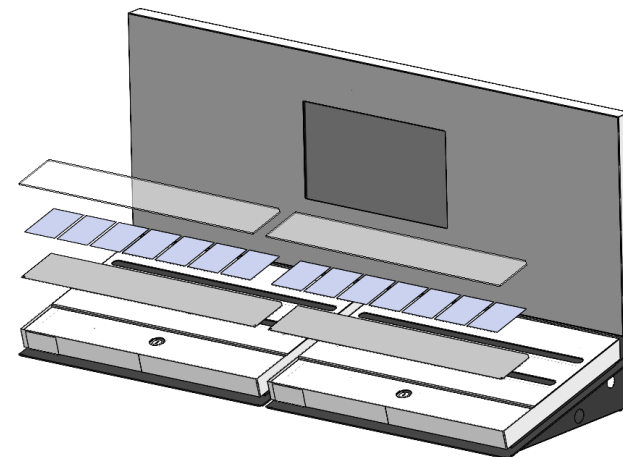


REPLACE THE LENS, TICKETS
AND METAL PLATE

14

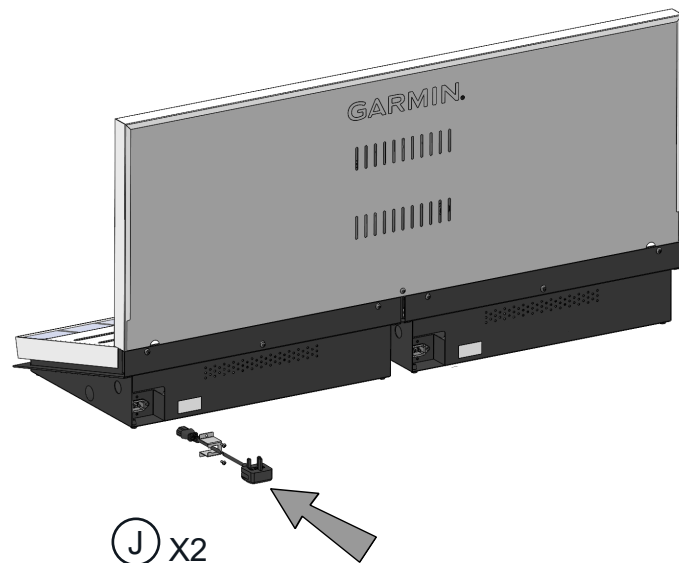

ⓐ X2

15

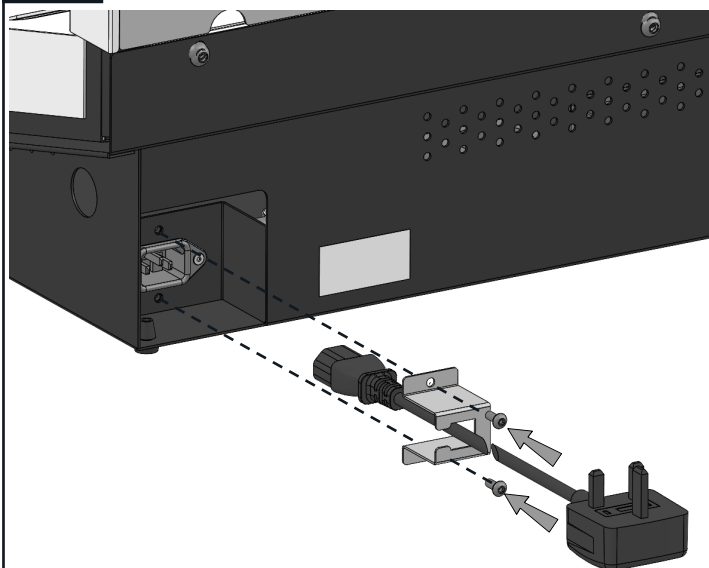

16

