


## ASSEMBLY GUIDE

## TOOLS REQUIRED – SUPPLIED

Parts


(A) X1

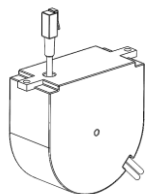

(B) X1




(C) X1

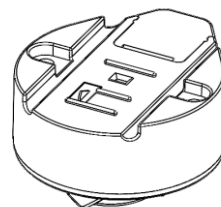


(D) X1




1

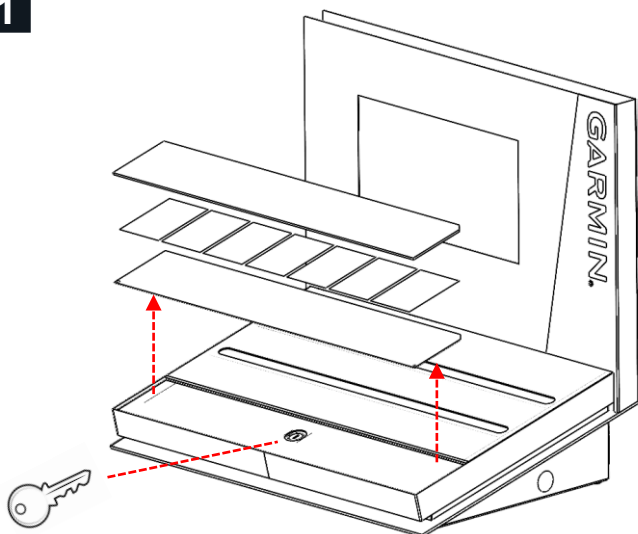


2

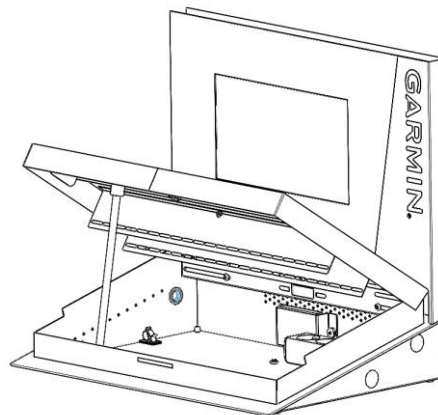


3

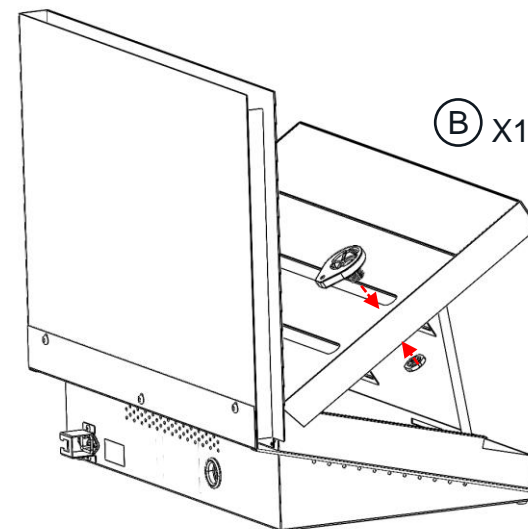


4

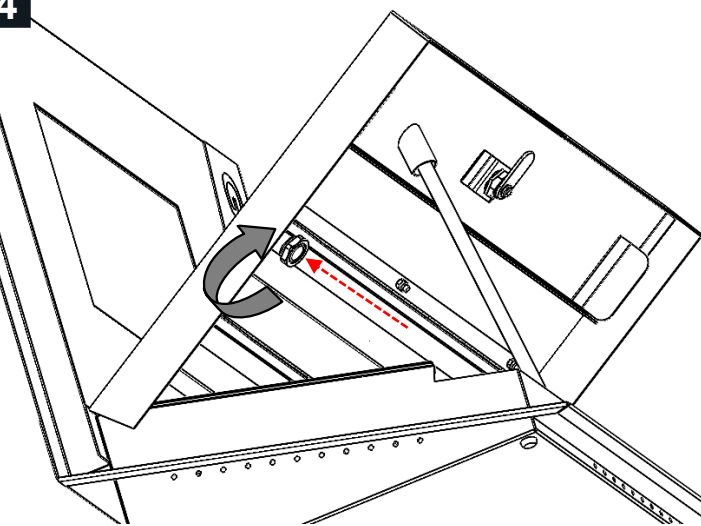

5

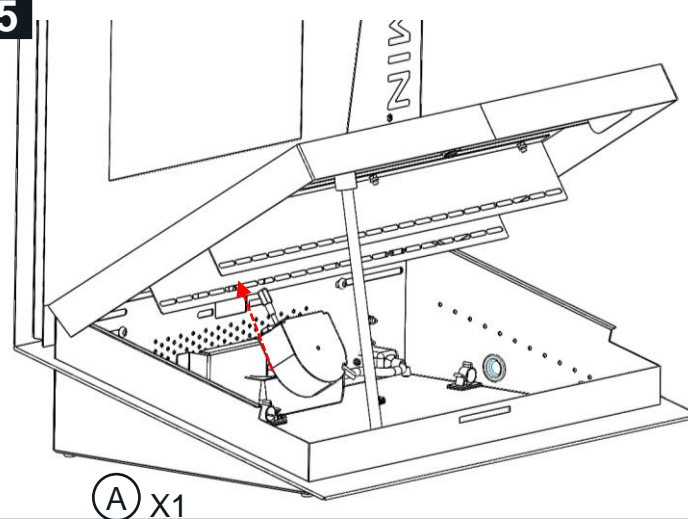

(A) X1

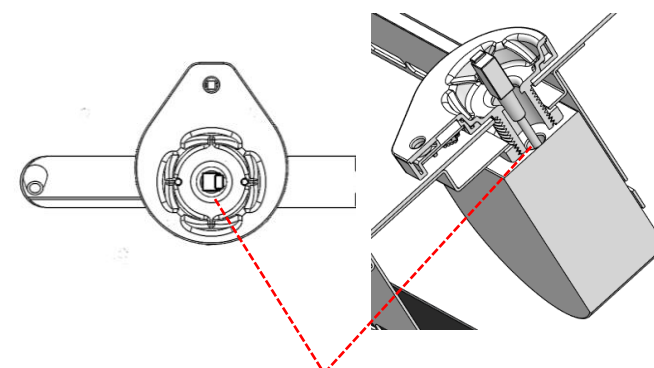


**!CRITICAL!**  
Ensure recoiled cable  
hole is aligned with the  
security mount.

6






CLIP RJ9(1) CONNECTOR INTO  
SOCKET IN TOP MOULDING

7

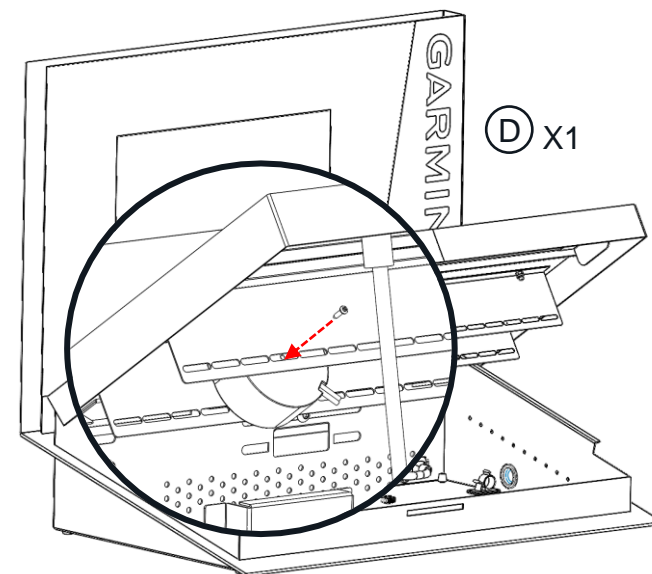


8

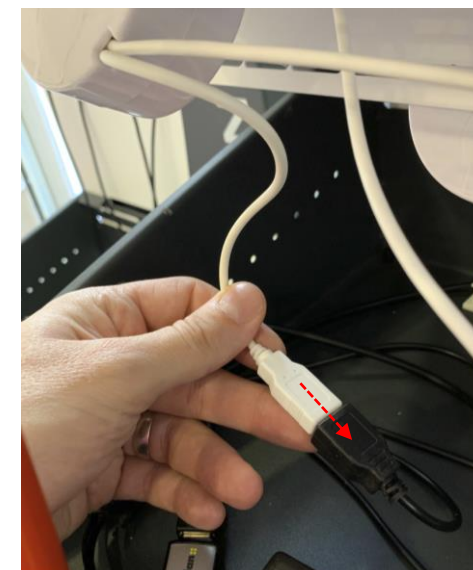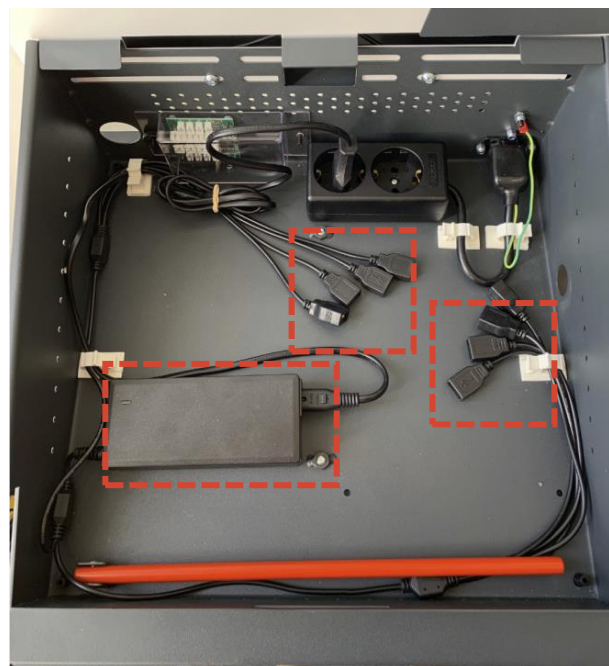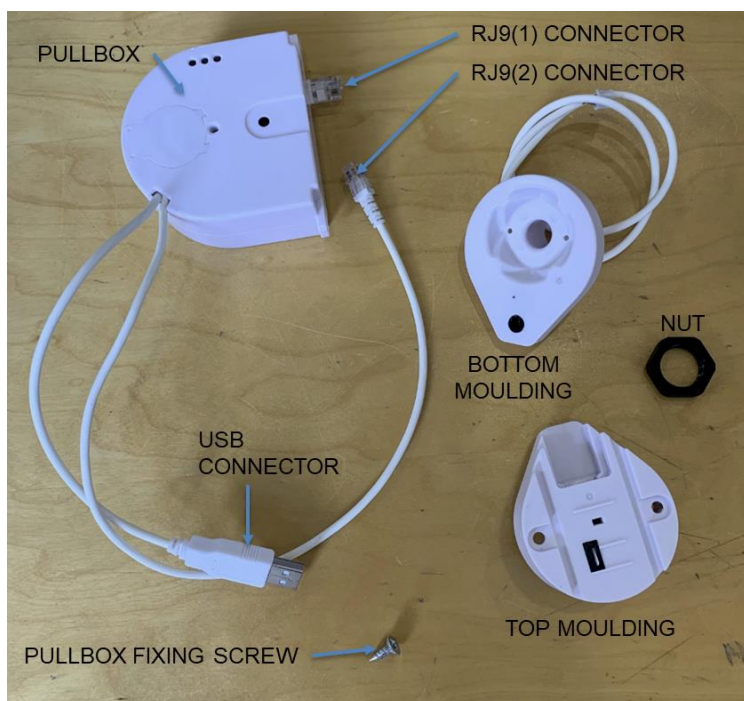


Connect USB from pull box to USB  
splitter in base.



11

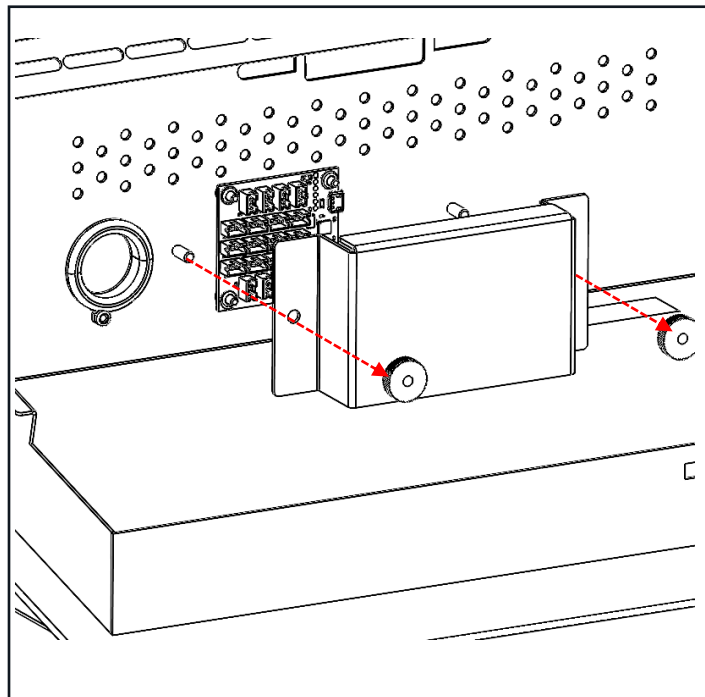

Connect Molex into PCB board

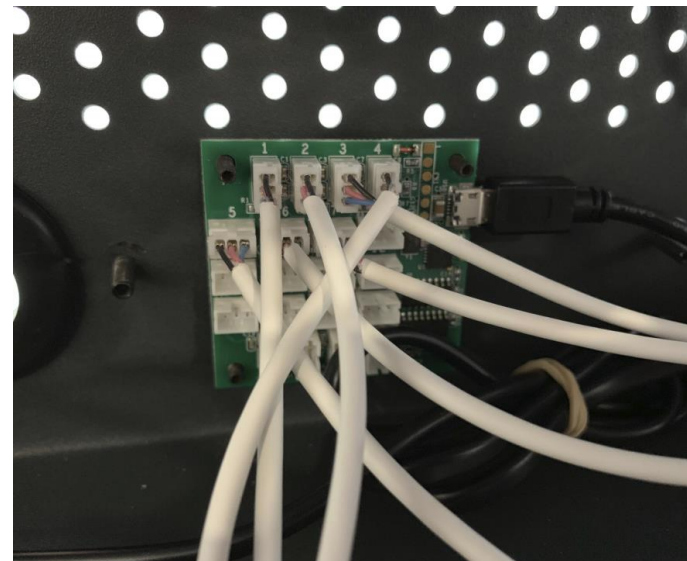

9

