

GARMIN

CORPORATE DISPLAY

P12674 | 19/11/2024

600 GLASS CABINET + RSB & HOOKS

ASSEMBLY GUIDE


TOOLS REQUIRED - SUPPLIED



4MM ALLEN KEY

Parts


(A) X1
600MM

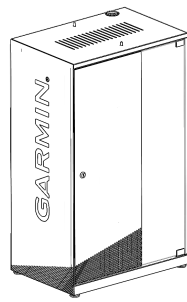

(B) X1
RSB
600MM




(C) X5
HOOKS
600MM = 5 OFF

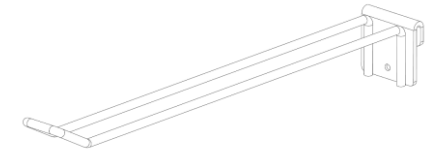


1


(A) X1

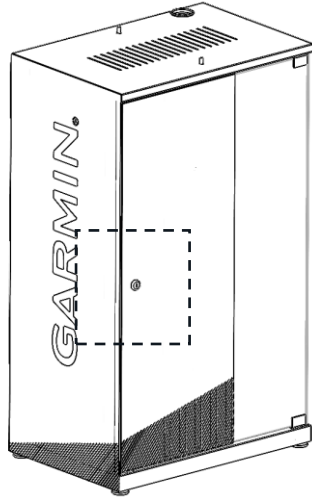

2

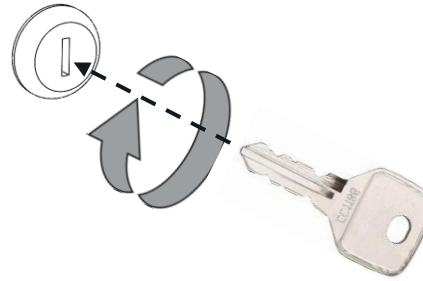


3

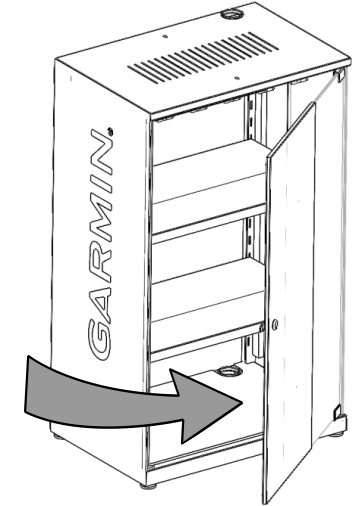


4

(B) X1

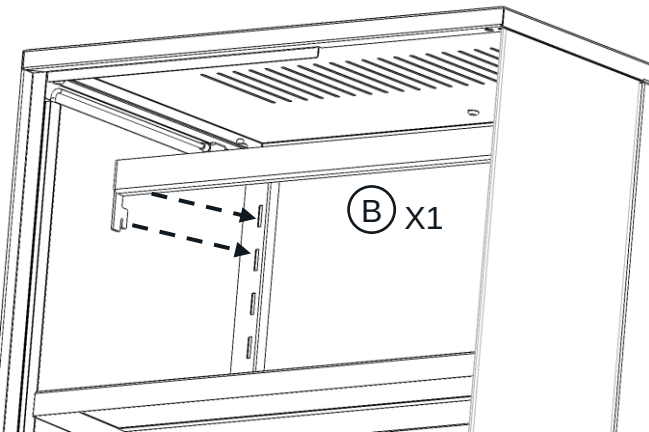


5

TOP SLOT

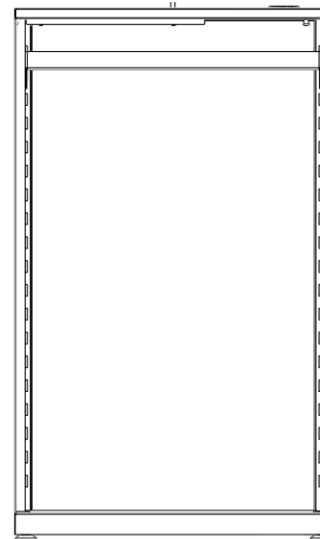


6


(C) X5

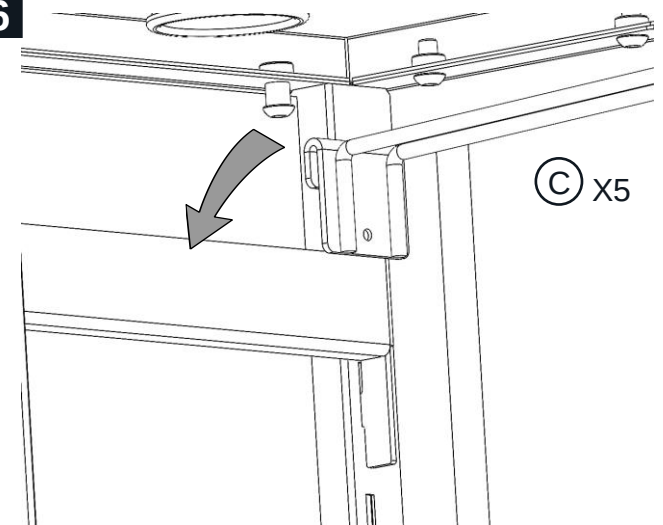


7

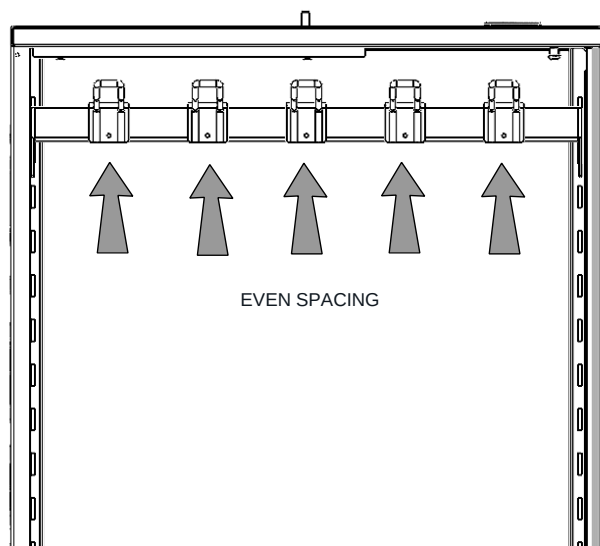


8

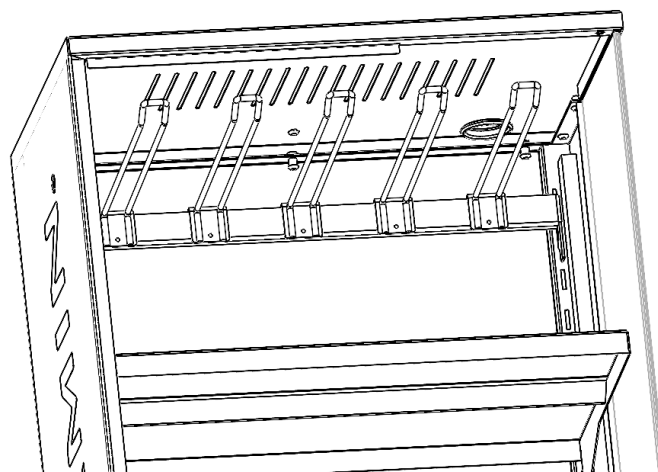

9

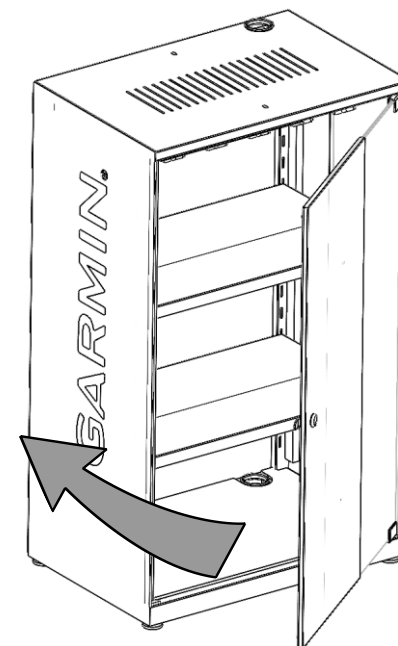

10

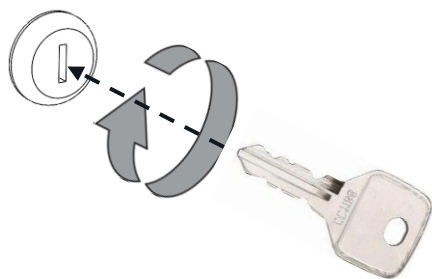

11

