


GARMIN

MID UNITS 1000 ADJOINING
BACK PANEL




P11274 | July 2024

ASSEMBLY DIAGRAM

Tools Required - Supplied




Parts

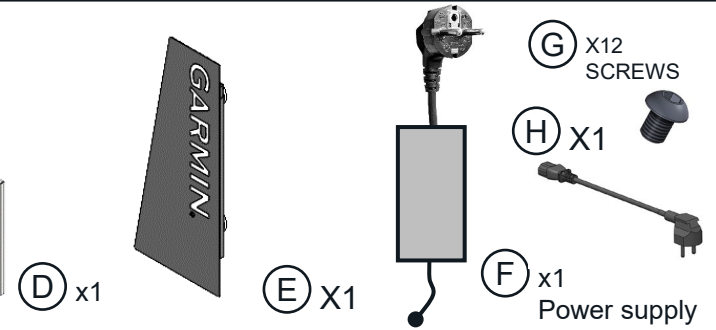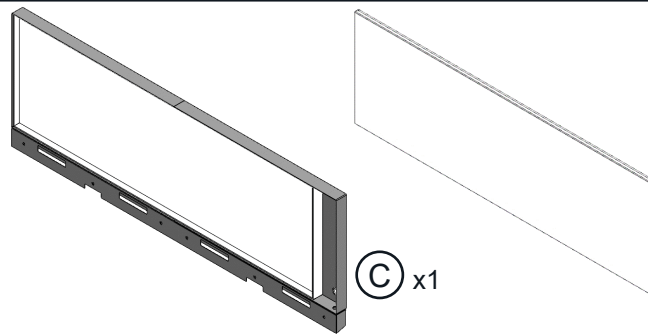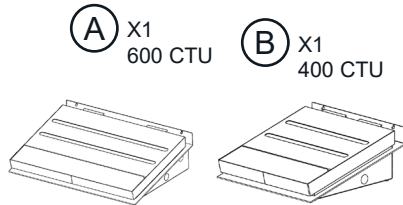

1

(A) X1
600 CTU

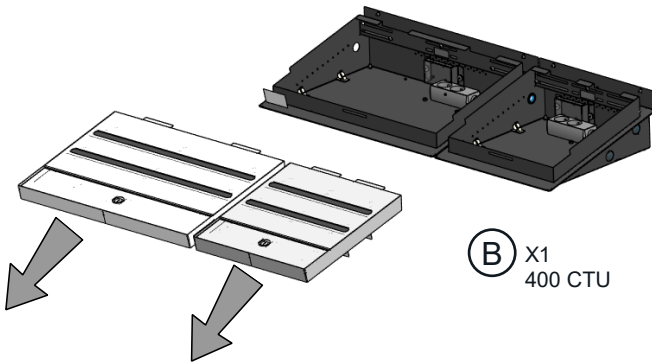


REMOVE TOP PANEL ASSEMBLIES

2


(C) X1

POSITION BACK PANEL
INTO REAR OF CTU'S

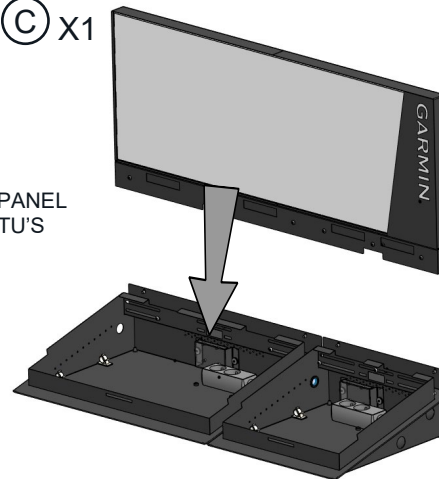


3

Offer up the header and feed the cable through
to the inside of the CTU compartment:

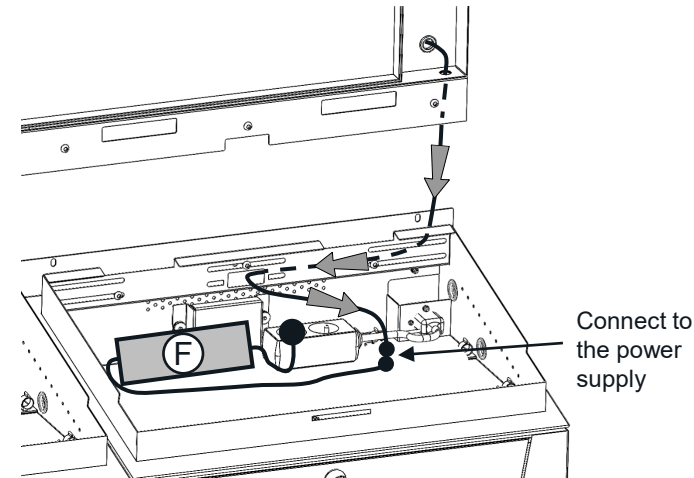


4

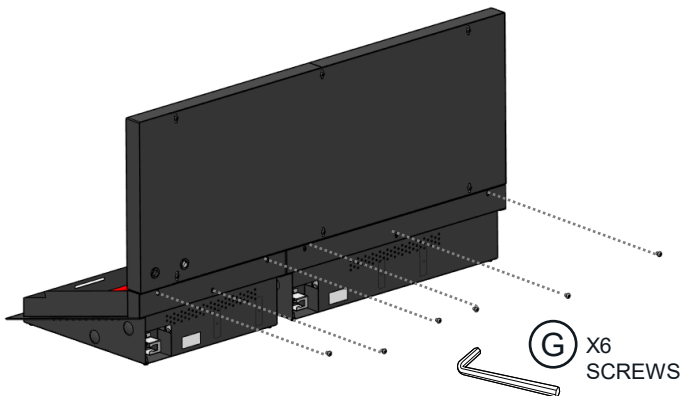

SECURE WITH SCREWS



5

Place power supply from header into the right hand CTU compartment. Plug it into the 2 gang socket:

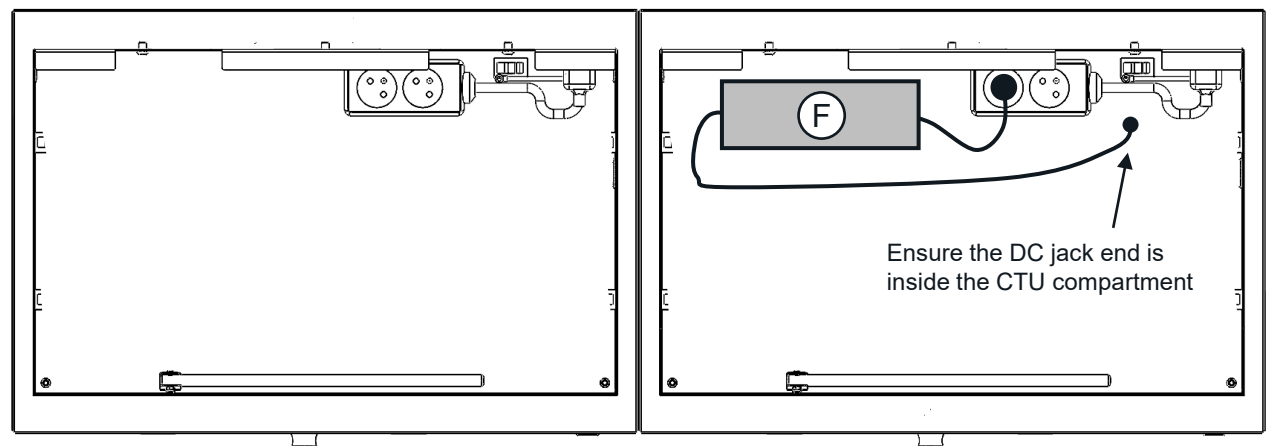

GARMIN

4


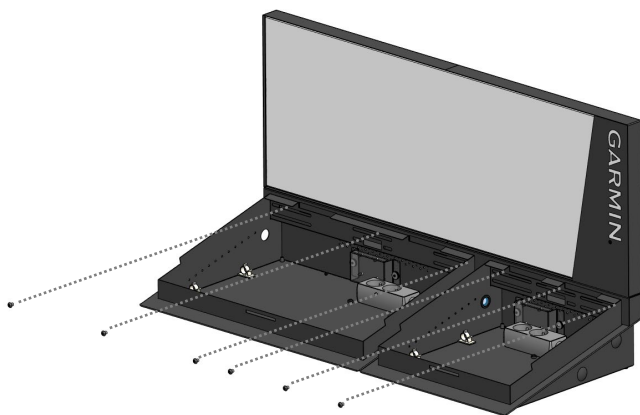


SECURE WITH SCREWS

(G) X6
SCREWS


8

Fit the fabric graphic. Do this by pushing the soft silicone edging on the graphic into the channel of the header. Start at one end and work to the other **pulling it tight**:

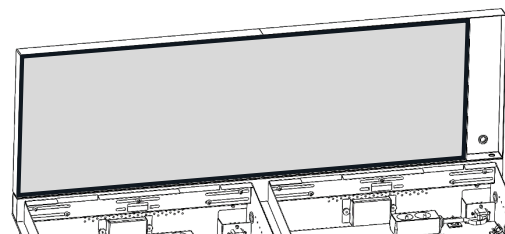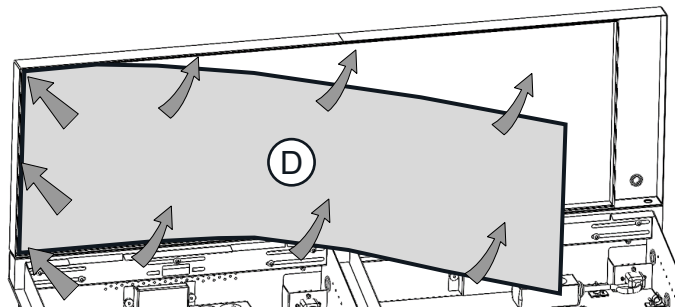


9


Fit the logo panel to the right side, held with magnets:

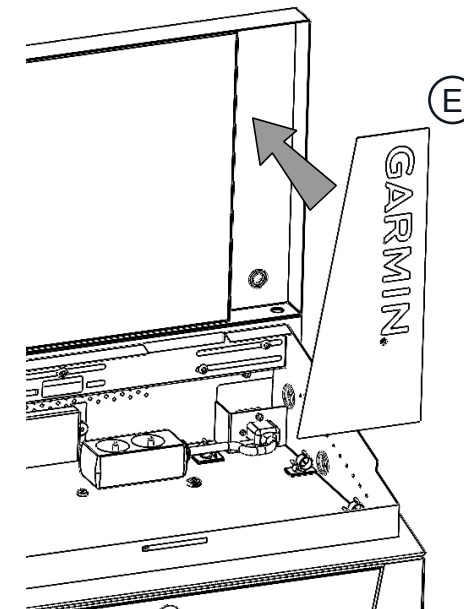

10

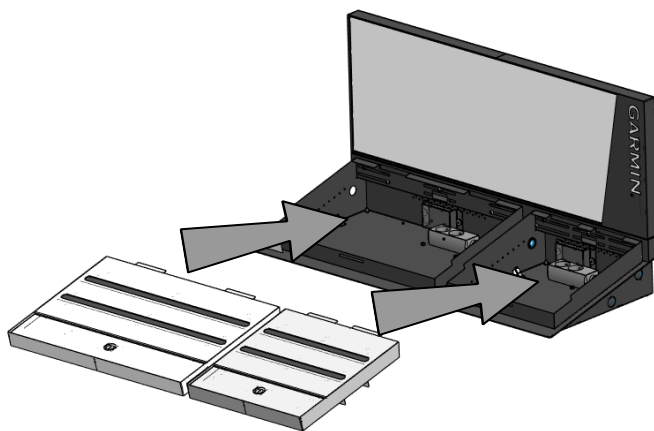


11

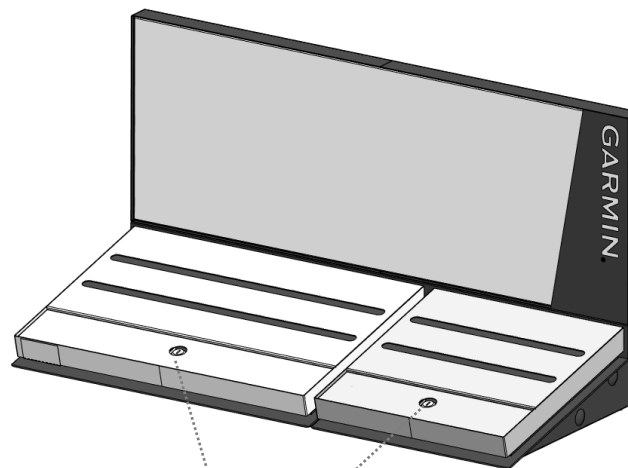

USE THE KEY TO SECURE THE
TOP PANEL ASSEMBLIES INTO
THE CTU'S

12

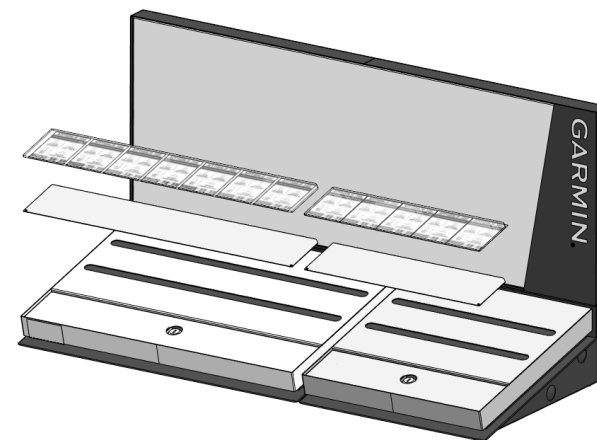

REPLACE THE LENS, TICKETS
AND METAL PLATE

