


GARMIN

MID UNITS 1200 ADJOINING
BACK PANEL

P11274 | July 2024


ASSEMBLY DIAGRAM

Tools Required - Supplied




Parts


(A) X2
600 CTU

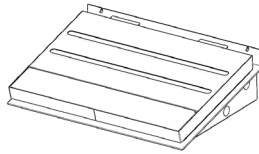

(B) x1

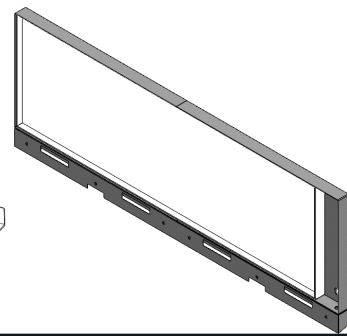

(C) x1

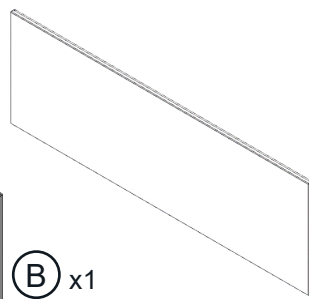


(D) X1



(E) x1

Power supply




(G) X1



(F) X12
SCREWS



1

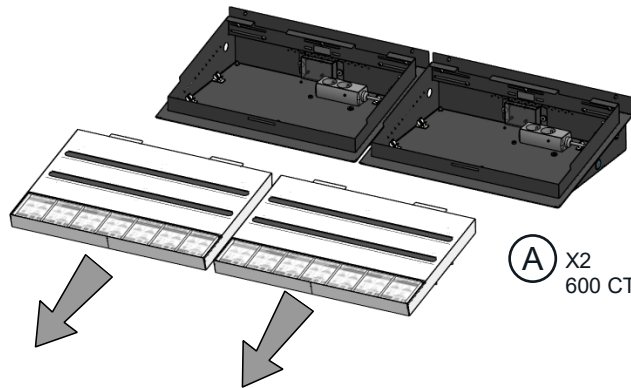


REMOVE TOP PANEL ASSEMBLIES

(A) X2
600 CTU


2

POSITION BACK PANEL
INTO REAR OF CTU'S

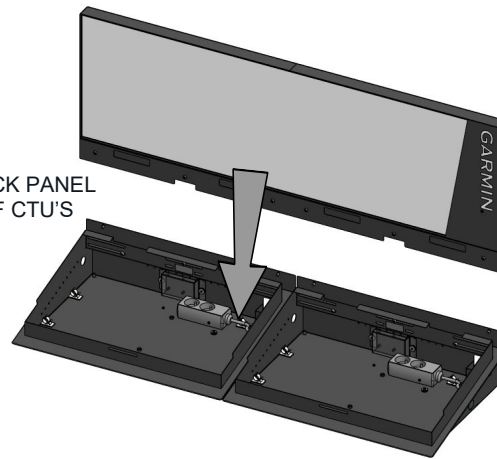


3

Offer up the header and feed the cable through
to the inside of the CTU compartment:

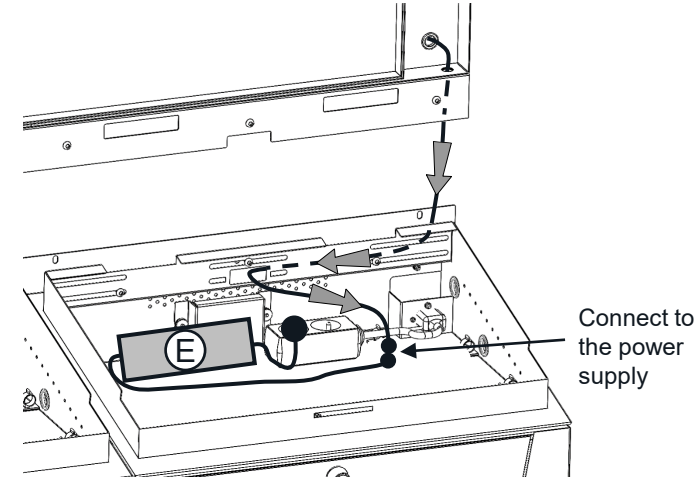

Connect to the
power supply

4

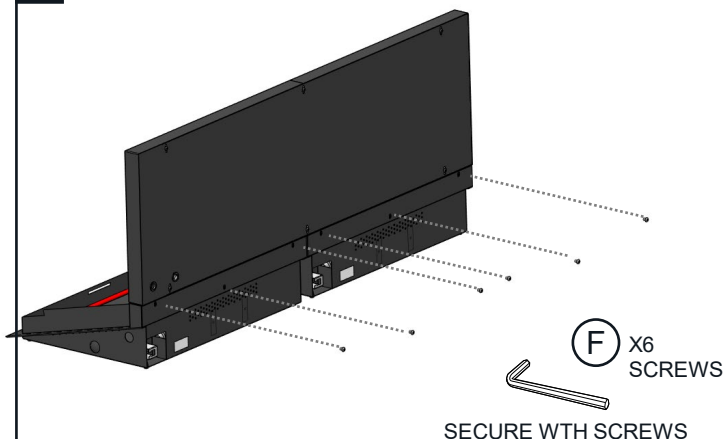


SECURE WITH SCREWS

(F) X6
SCREWS

5


Place power supply from header into the right hand CTU compartment. Plug it into the 2 gang socket:

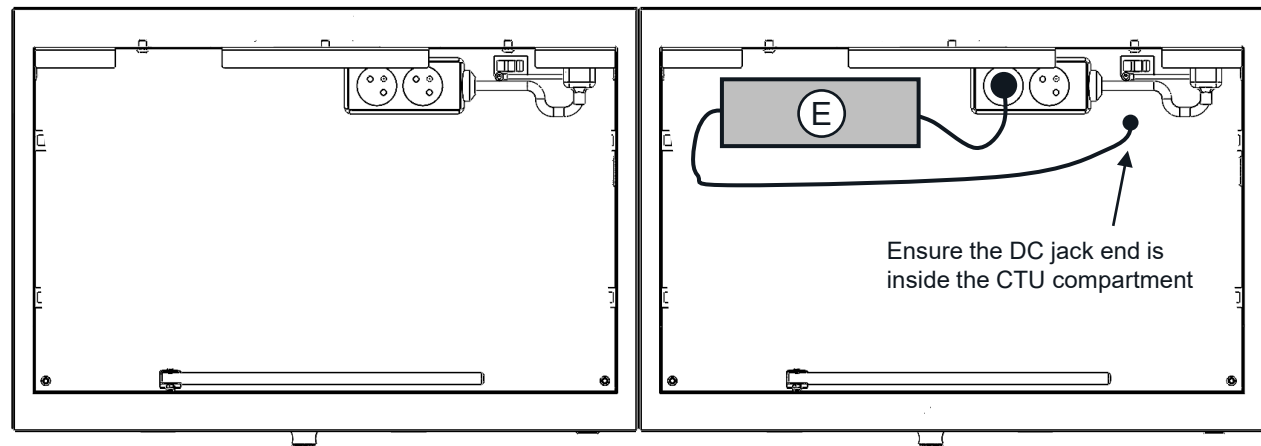

Ensure the DC jack end is
inside the CTU compartment


GARMIN

6

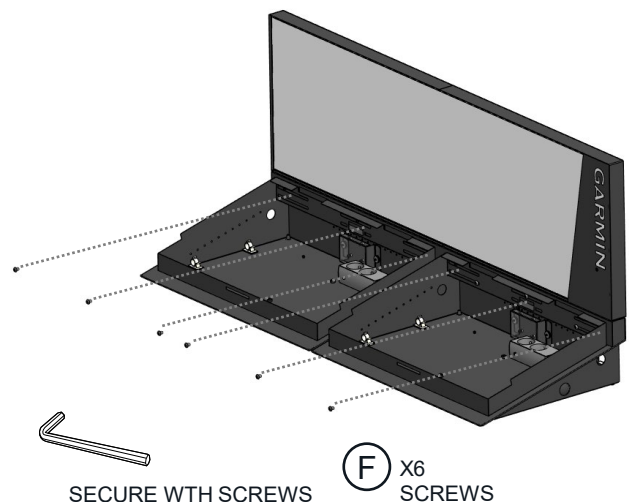


7

Fit the fabric graphic. Do this by pushing the soft silicone edging on the graphic into the channel of the header. Start at one end and work to the other **pulling it tight**:

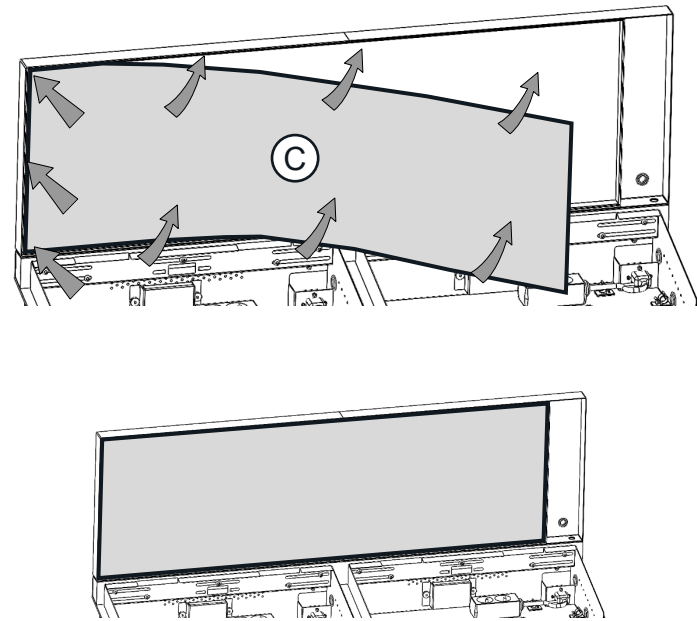


8


Fit the logo panel to the right side, held with magnets:

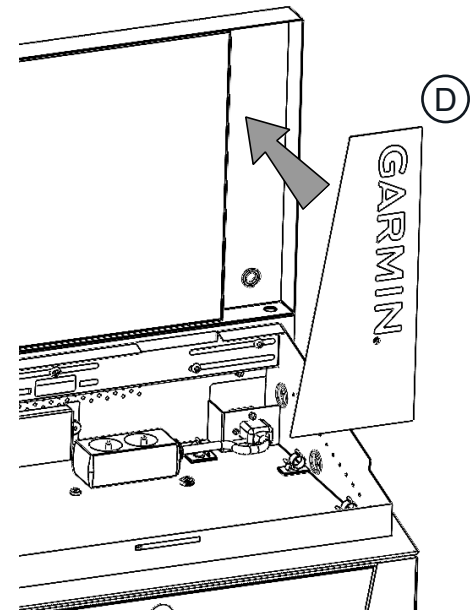

9

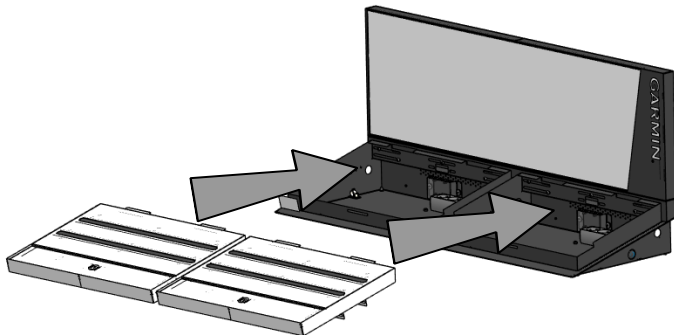

10

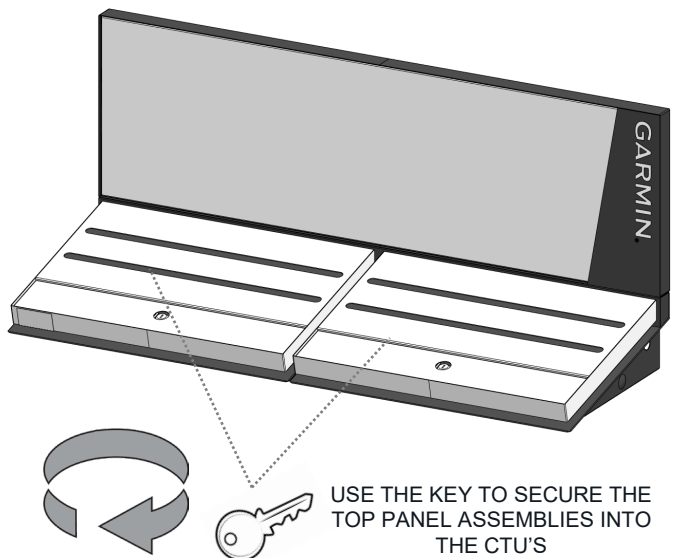

11

