



ASSEMBLY GUIDE


TOOLS REQUIRED – SUPPLIED

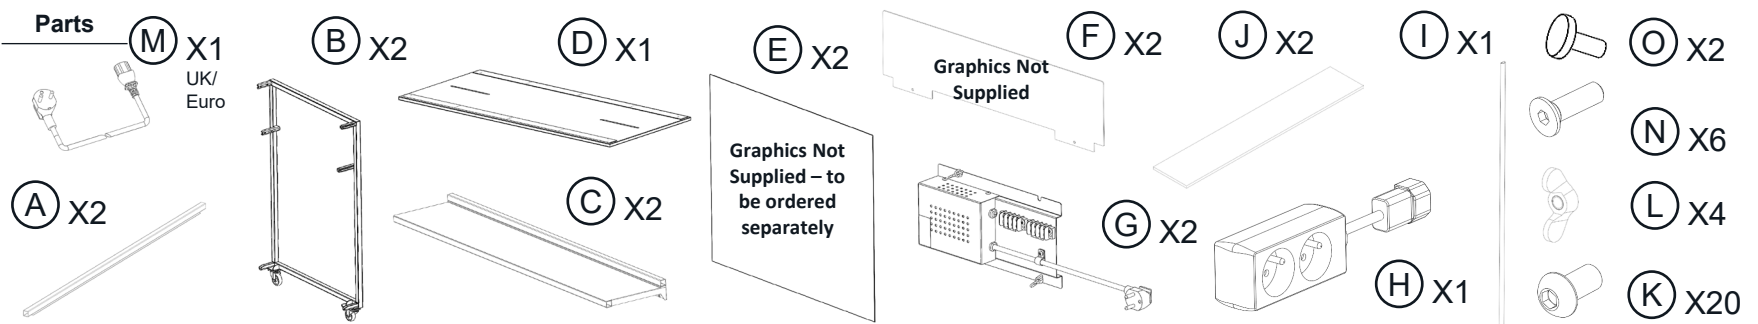


1

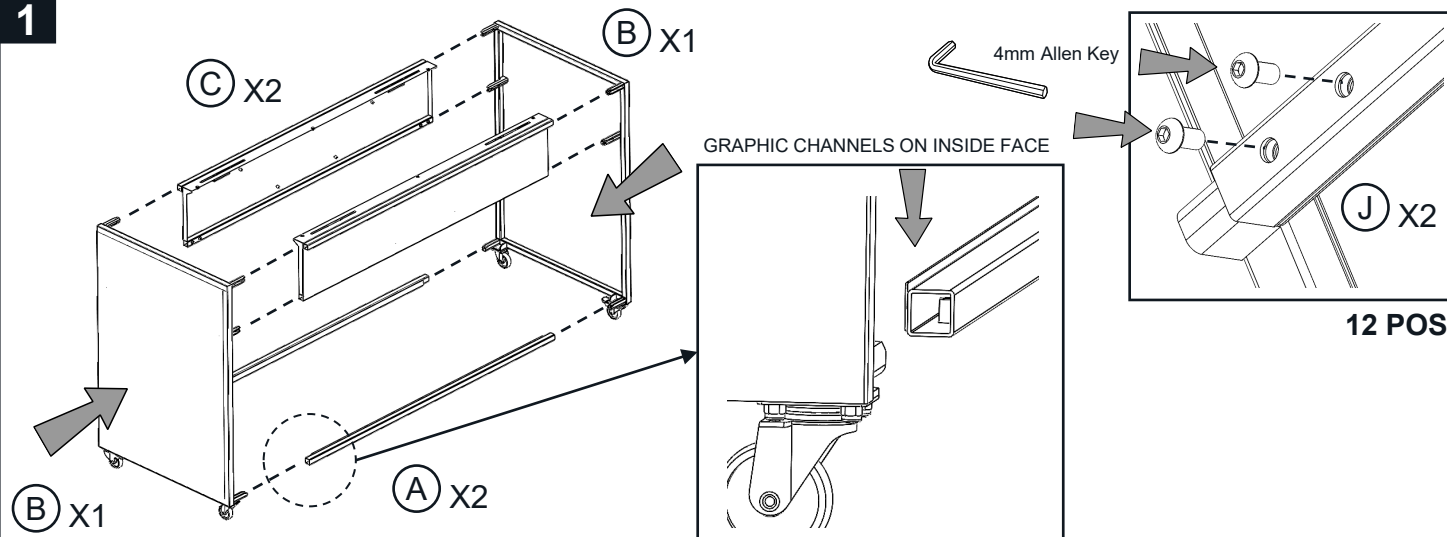


2

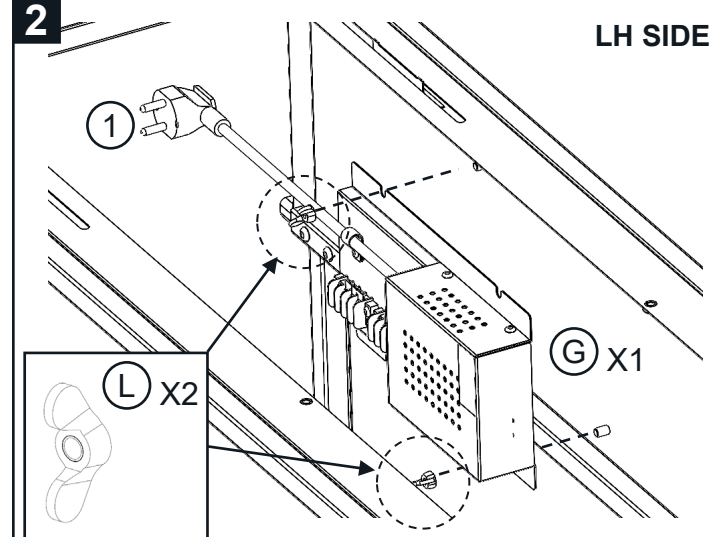


3

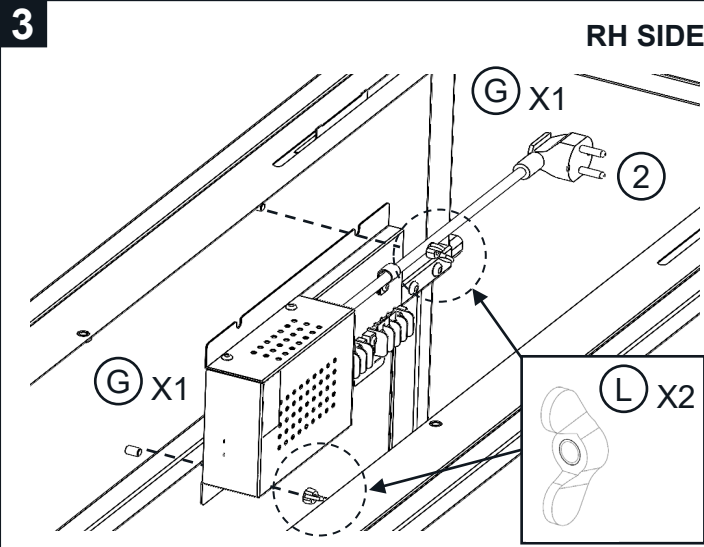


4

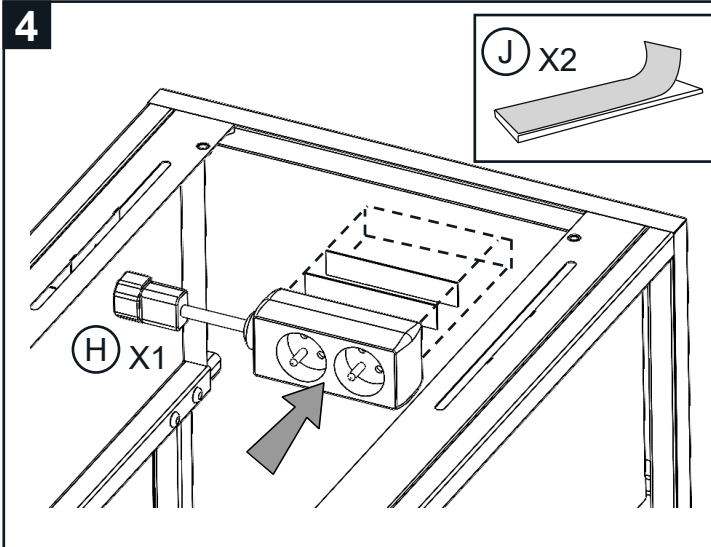


5

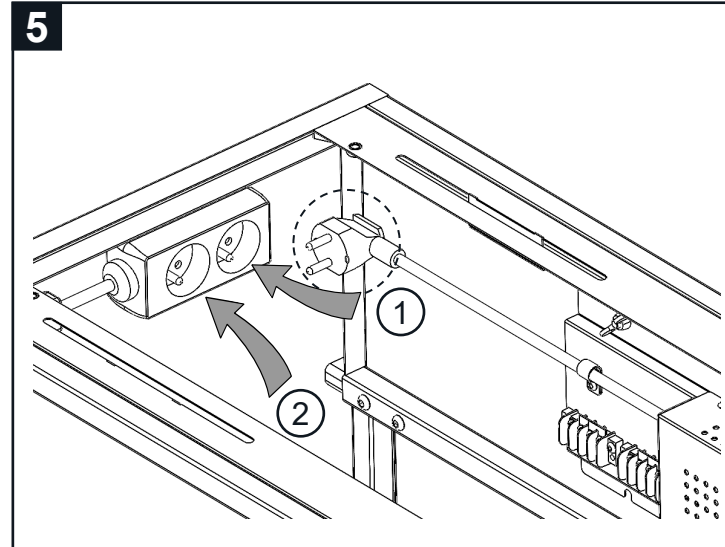


6

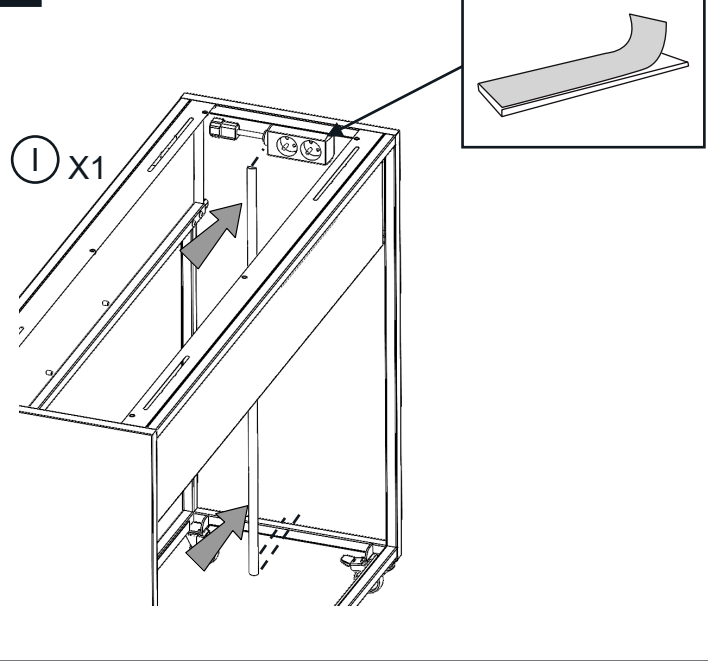


7

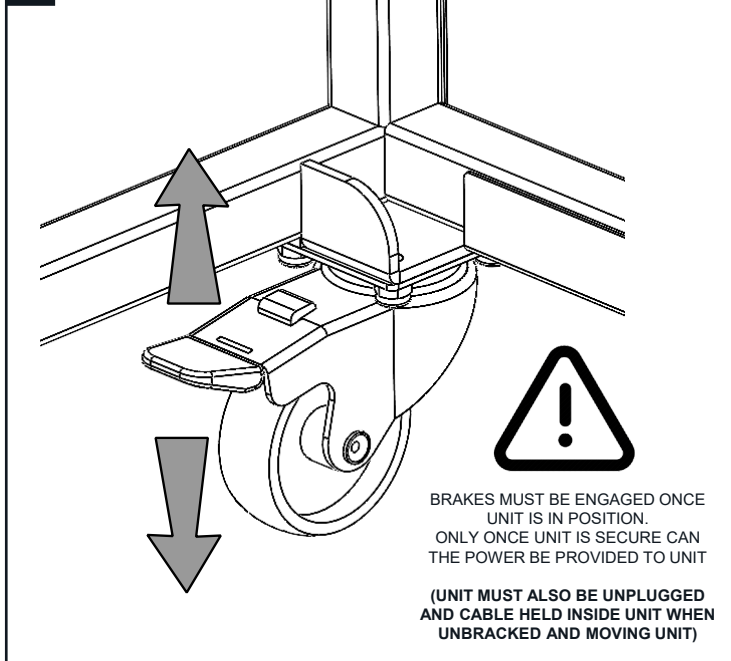


8

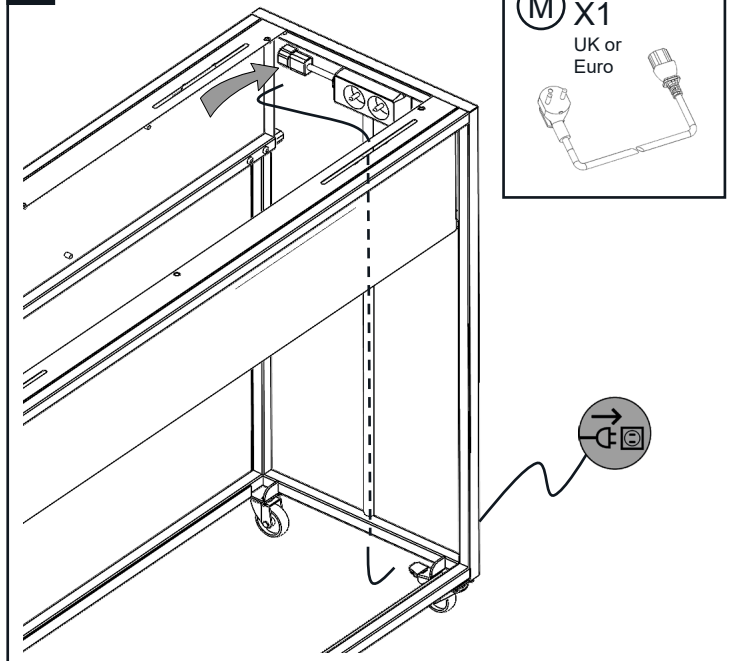


9

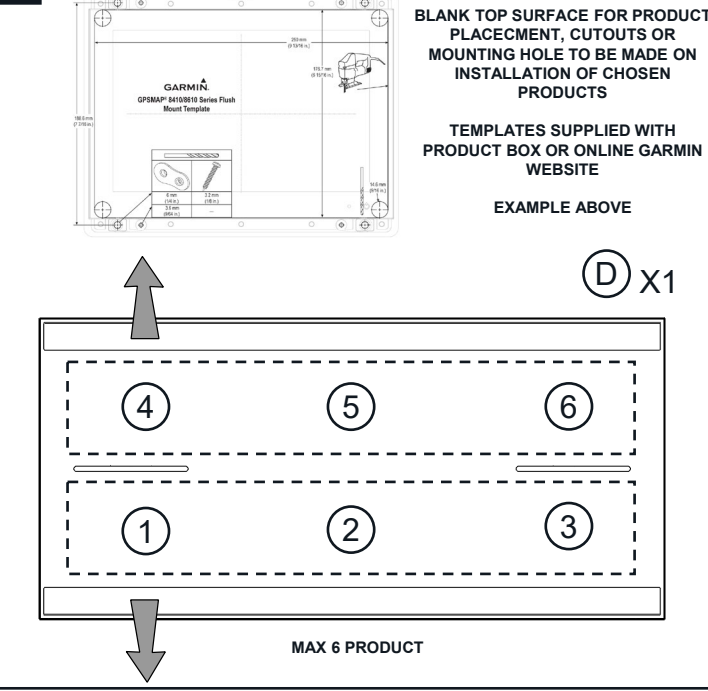


10

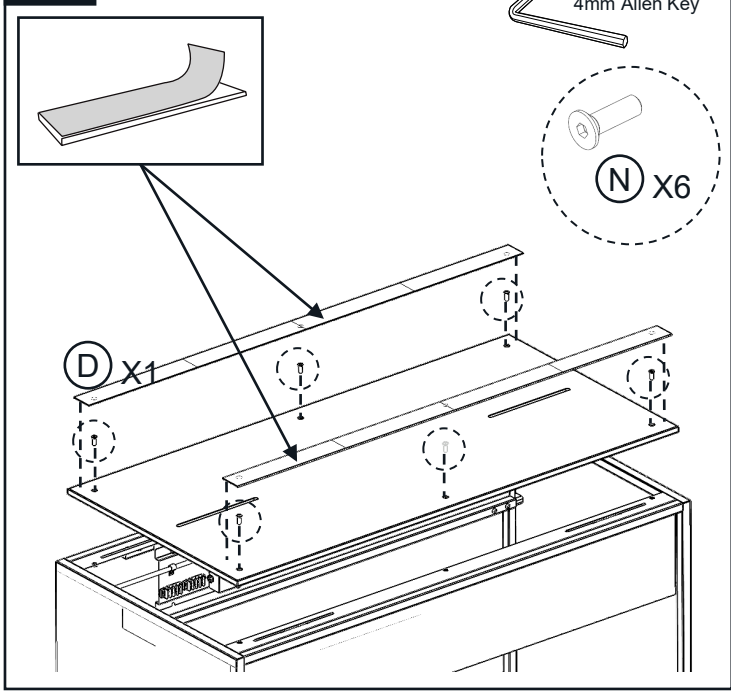


11

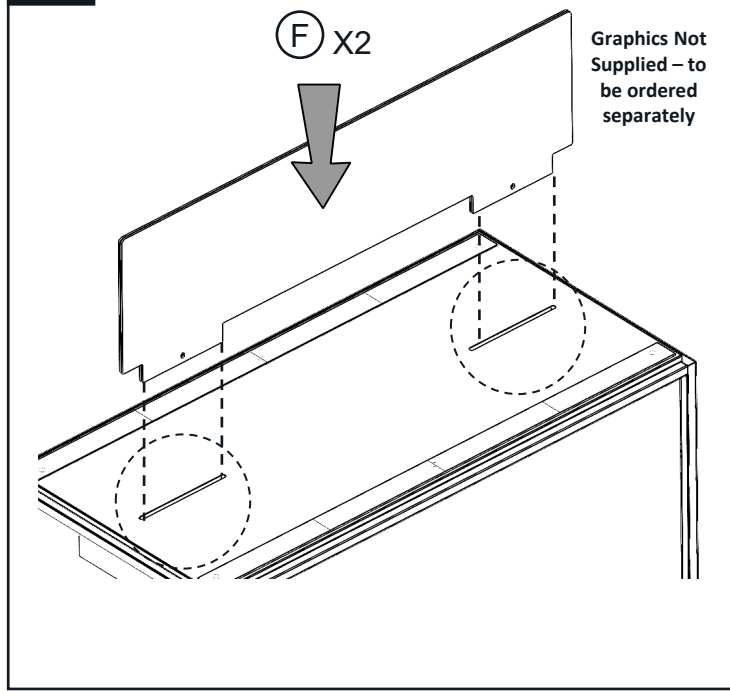

12

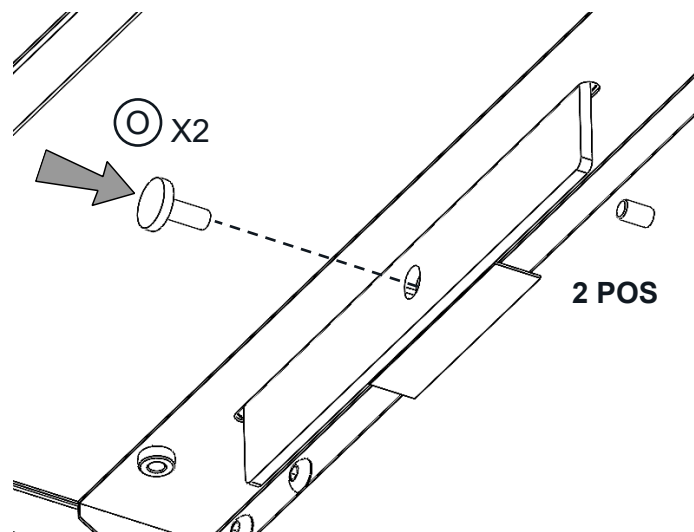


13

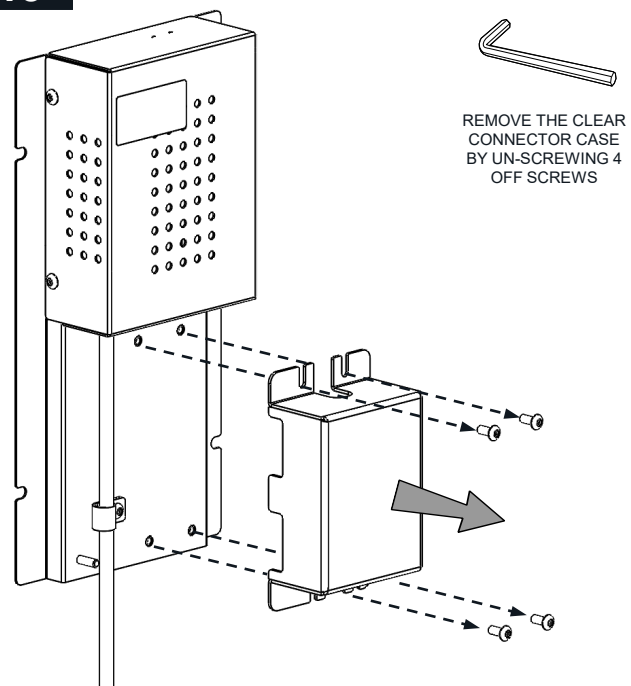

14




UNIT MUST BE DISCONNECTED FROM POWER AND UNPLUG BEFORE WIRING UP 12V POWER SUPPLIES FROM PRODUCT TO TERMINALS





5 CONNECTOR TERMINALS PROVIDED

PRODUCT

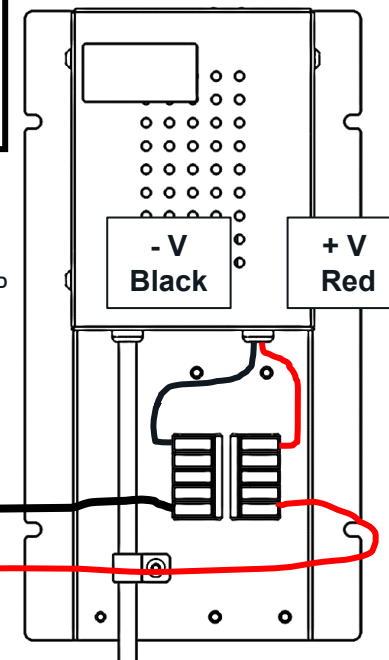


15

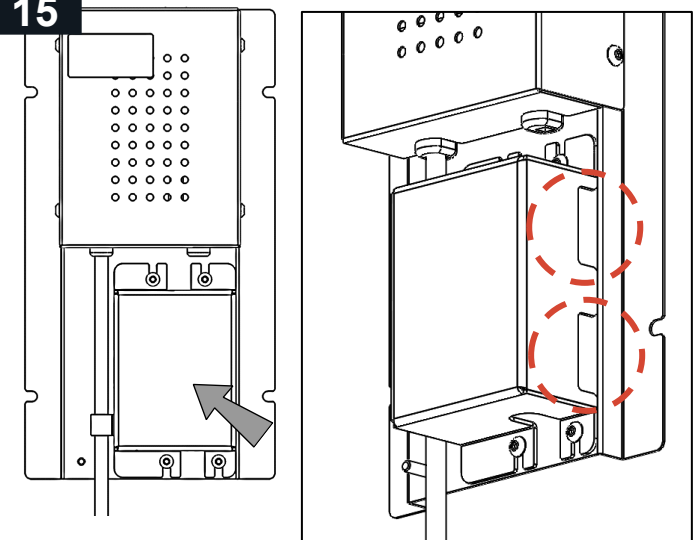

FIT THE COVER BACK TO THE TRAY. MAKE SURE ALL THE CABLES AND CONNECTORS ARE MANAGED UNDER THE COVER. THERE ARE RELIEFS IN THE COVER FOR CABLES.

16

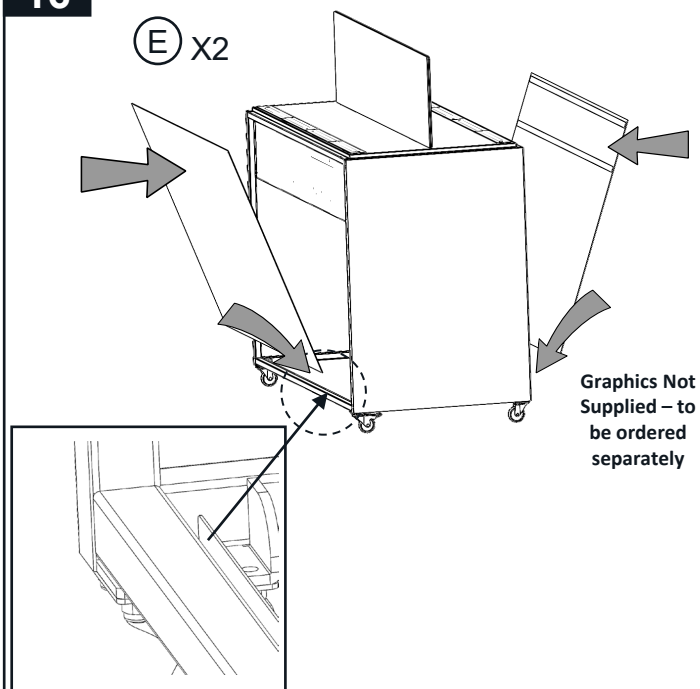

17

