


## ASSEMBLY GUIDE

## TOOLS REQUIRED – SUPPLIED

Parts


Ⓐ X1

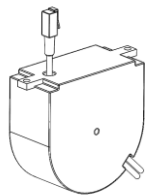

Ⓑ X1




Ⓒ X1

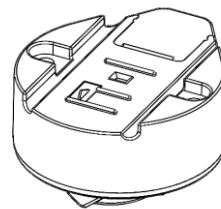


Ⓓ X1




1

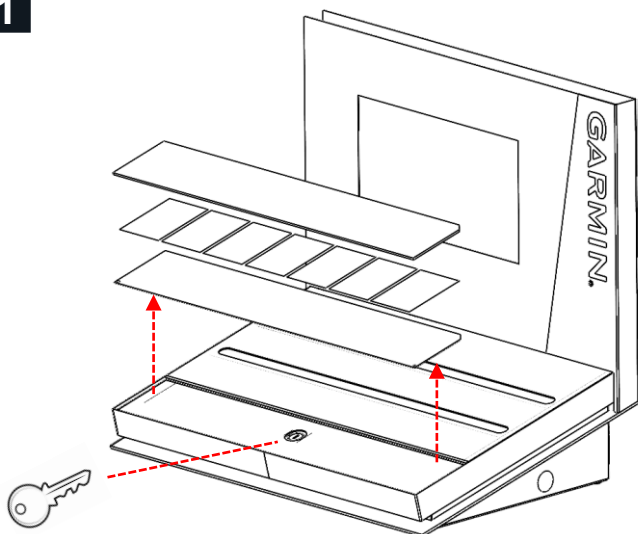


2

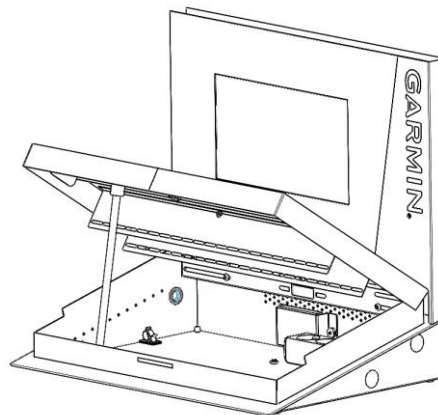



3

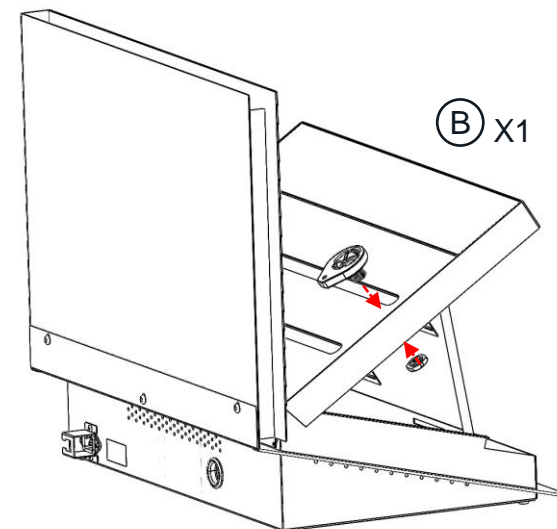

4

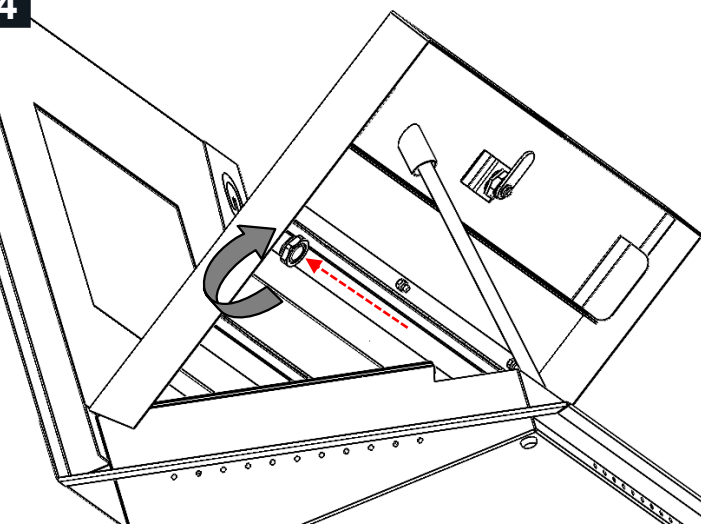

5

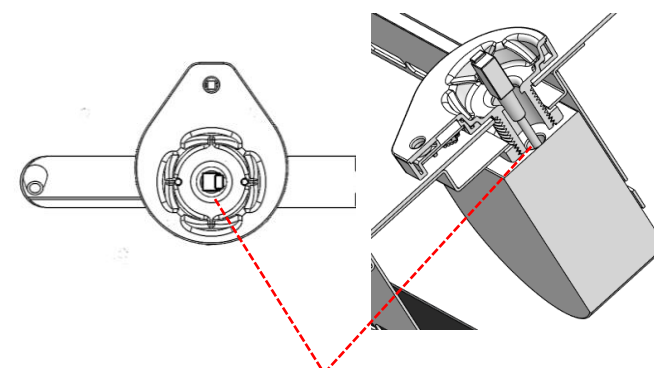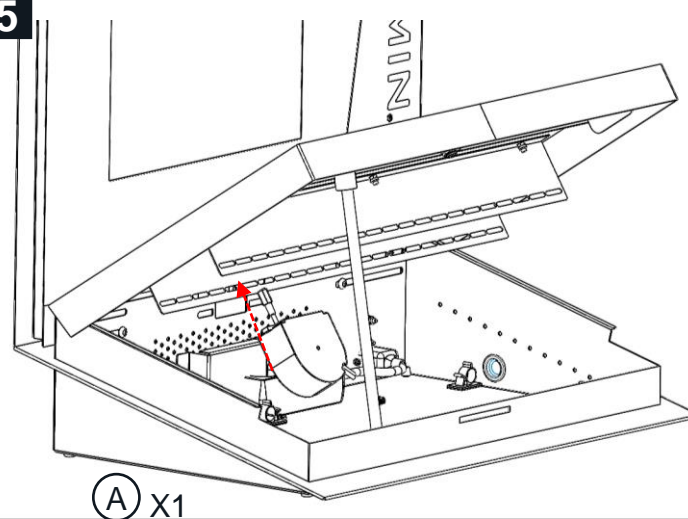

**!CRITICAL!**  
Ensure recoiled cable  
hole is aligned with the  
security mount.


6






CLIP RJ9(1) CONNECTOR INTO  
SOCKET IN TOP MOULDING



7

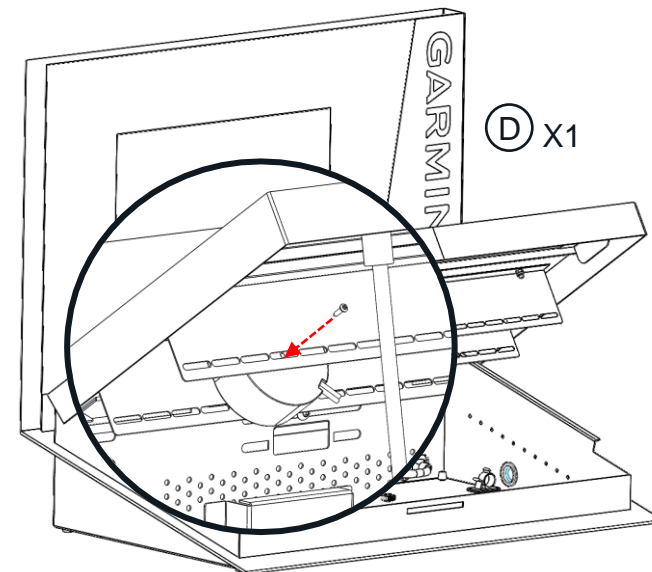

8

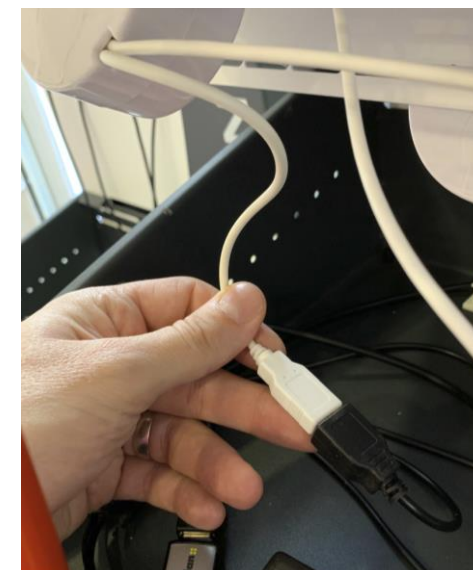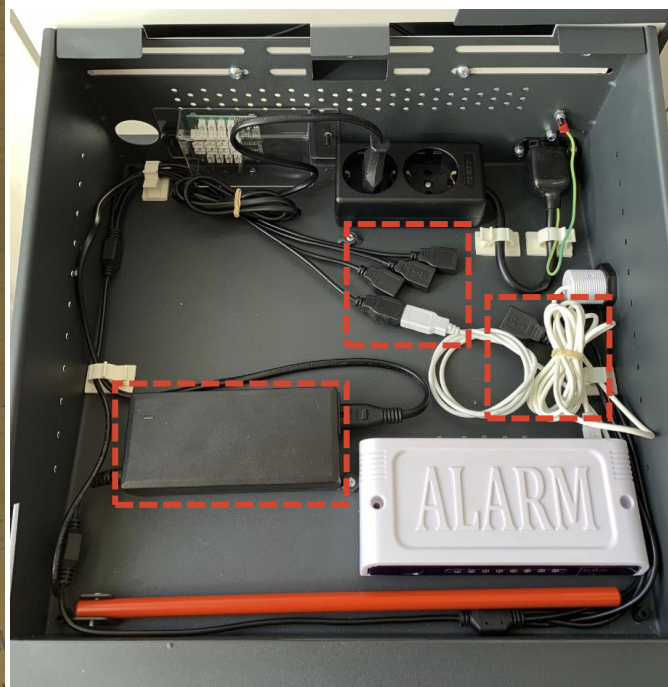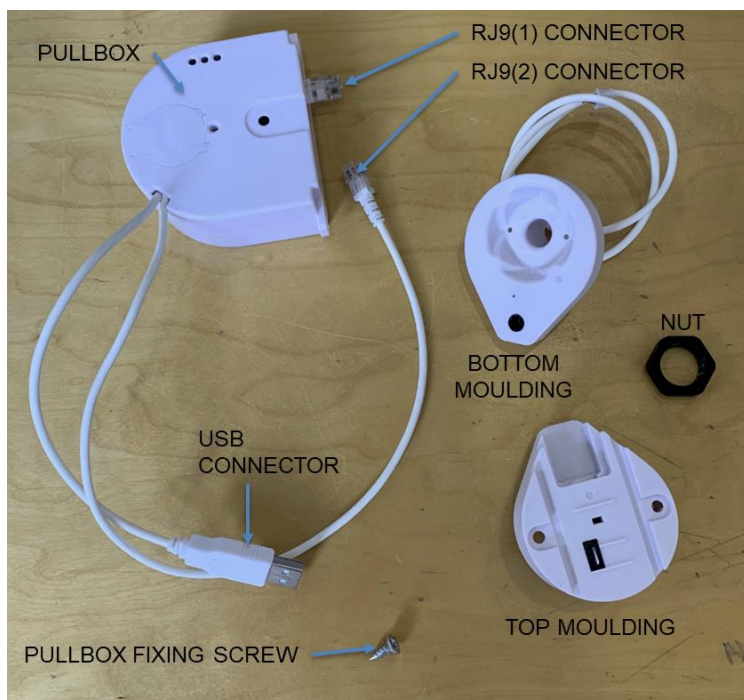


Connect USB from pull box to USB  
splitter in base.




9

TAKE THE RJ9(2) PLUG  
FROM THE RECOILER  
AND PLUG  
IT INTO THE  
CORRESPONDING PORT  
ON THE  
ALARM UNIT

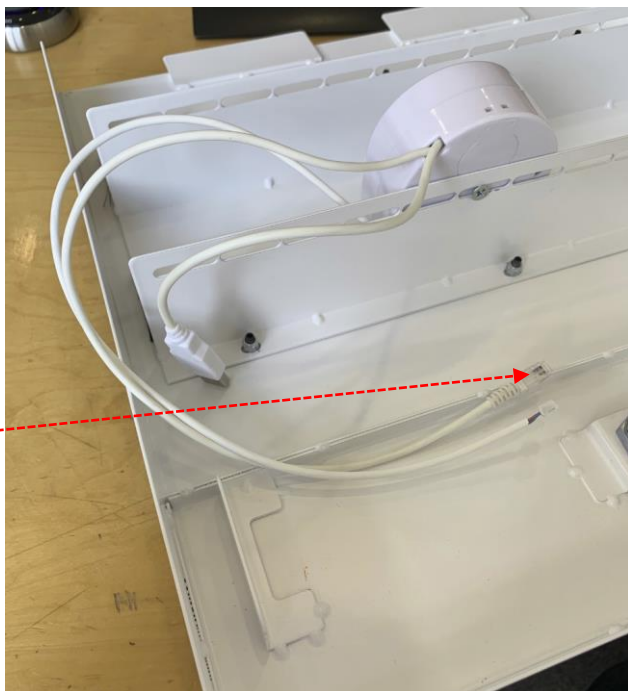

10 Only required for Lift and Learn

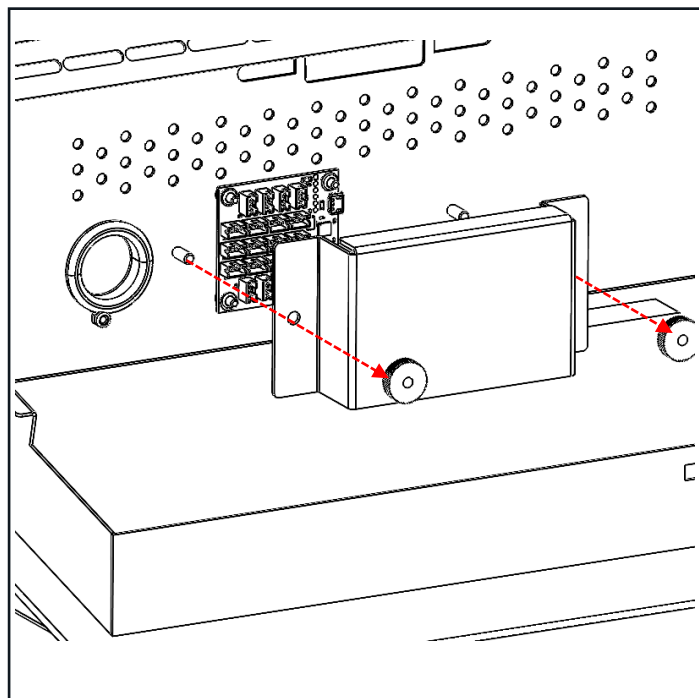

Connect Molex into PCB board

