


ASSEMBLY GUIDE


TOOLS REQUIRED – SUPPLIED

Parts


Ⓐ X1

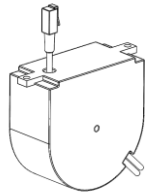

Ⓑ X1

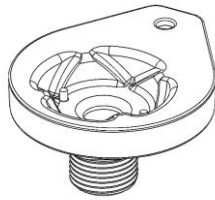


Ⓒ X1

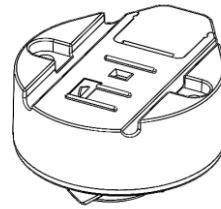


Ⓓ X1




1

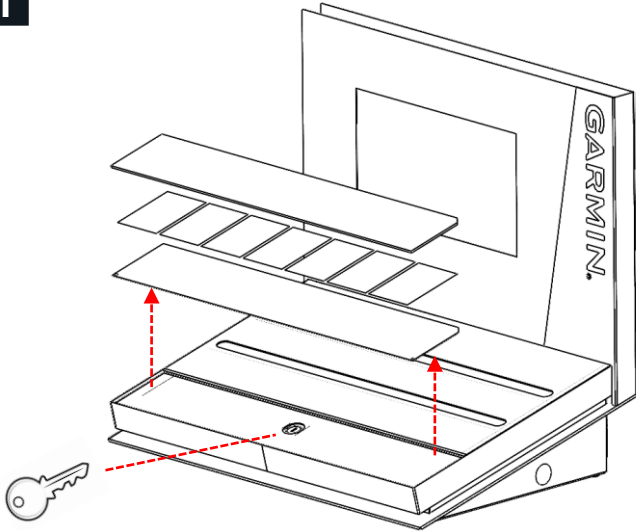


2

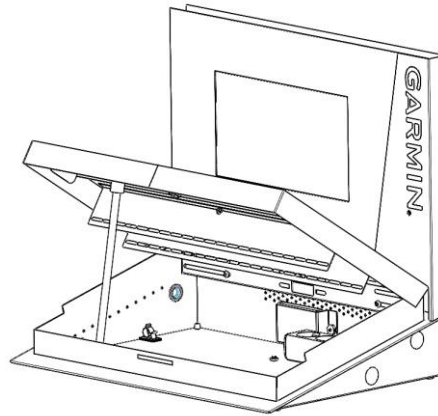


3

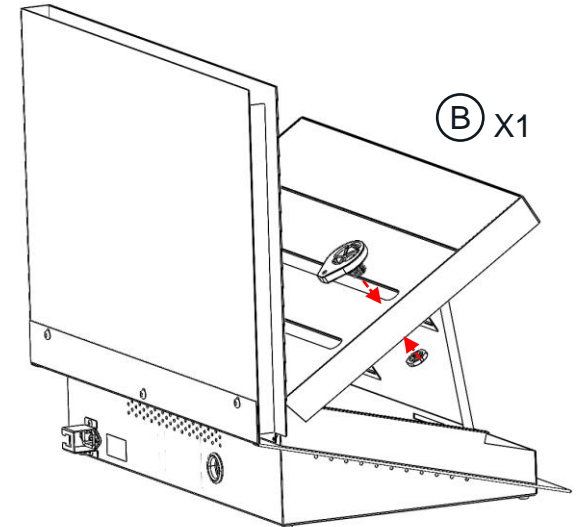


4

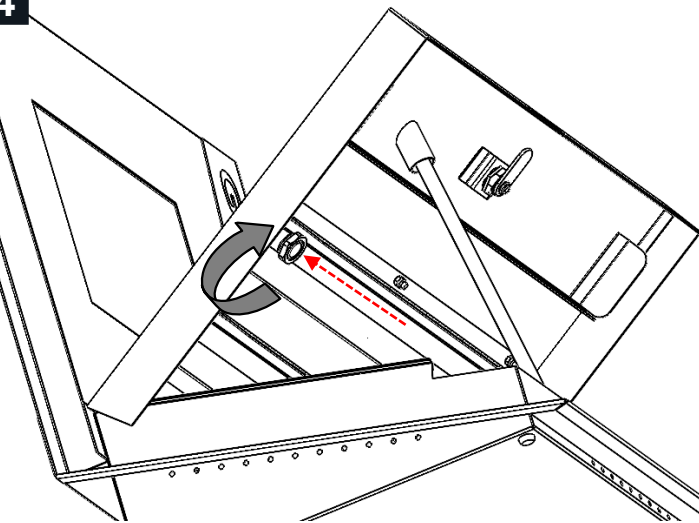

5

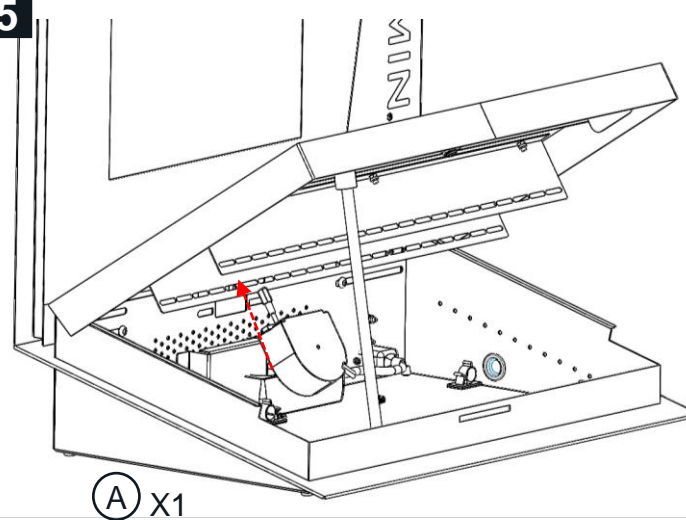

Ⓐ X1

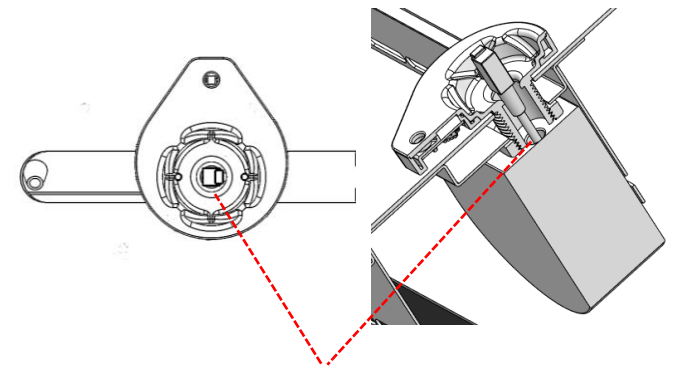

!CRITICAL!
Ensure recoiled cable
hole is aligned with the
security mount.


6



CLIP RJ9(1) CONNECTOR INTO
SOCKET IN TOP MOULDING



7

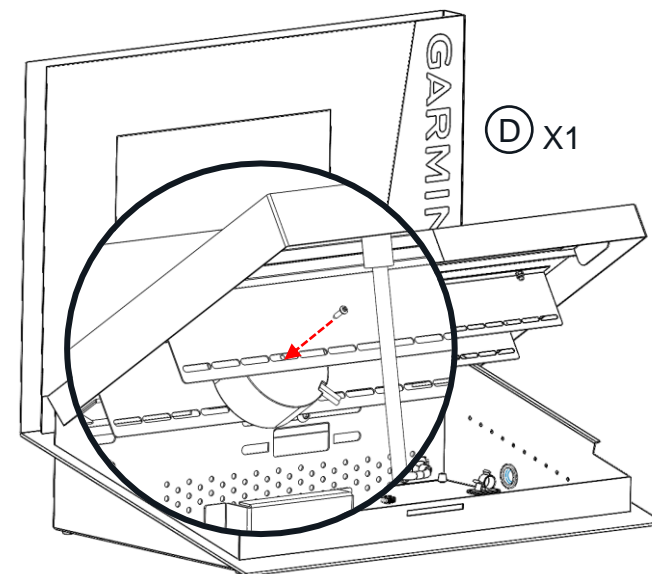

8

