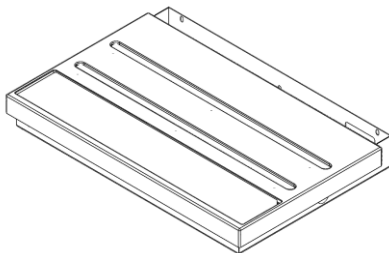**TOOLS REQUIRED – SUPPLIED**

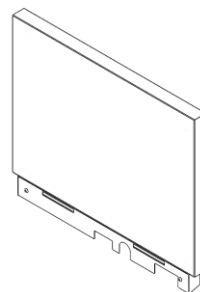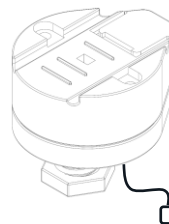4MM ALLEN KEY

Parts

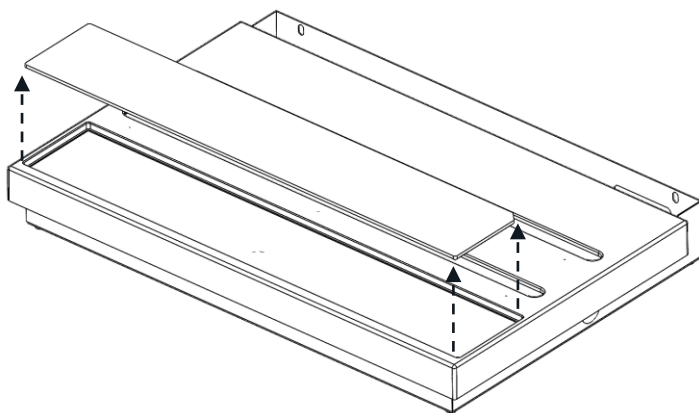(A) X1 — 400MM

(B) X1 — 400MM

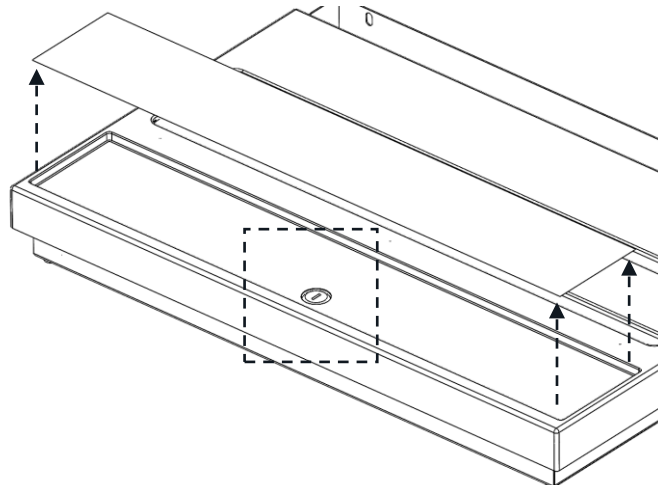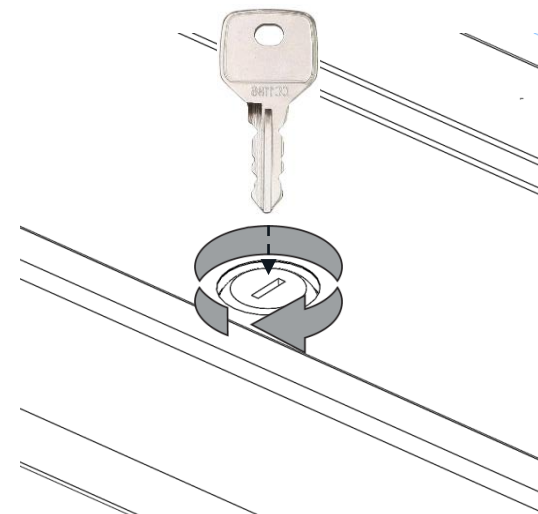(B) X5 — **GOLD** SECURITY POSTS **(PRE-FITTED)**

(C) X5 — M6X8MM SCREW
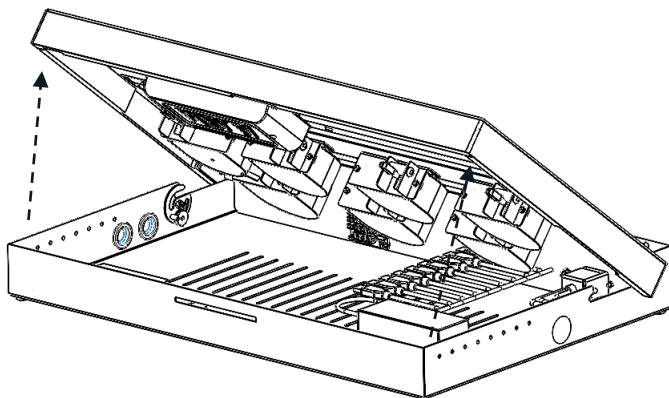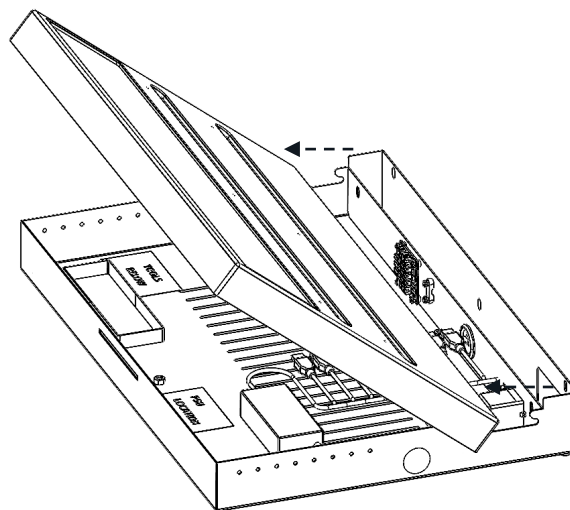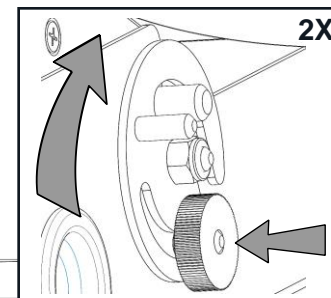
(C) X1

1

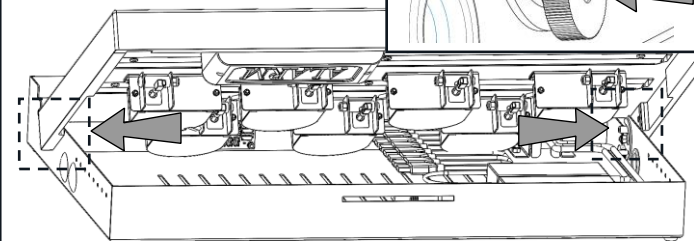**2**

3

4

5

6

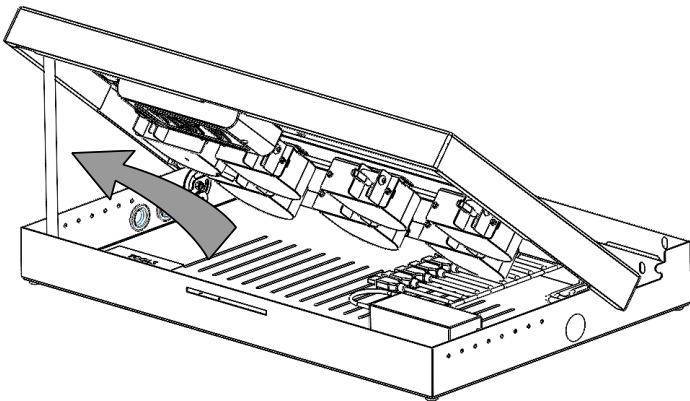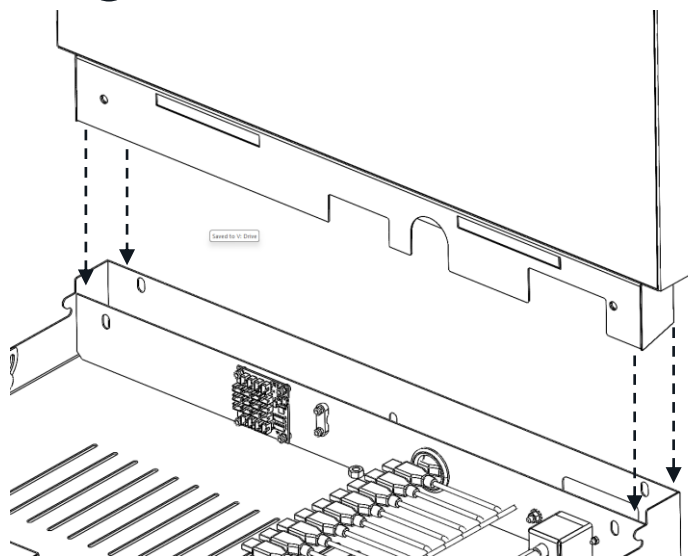⚠️ MUST TWIST LOCKING PLATES TO HOLD TOP SURFACE IN POSITION (REPEAT BOTH SIDES)

2X

GARMIN

7

⚠️

RED SUPPORT ARM MUST BE
SWUNG INTO POSTION TO
SUPPORT TOP PLATE

8

(B) X1

Saved to V: Drive

9

2X

10

3X

11

12

2X

GARMIN.

13

14

15

16

17

18
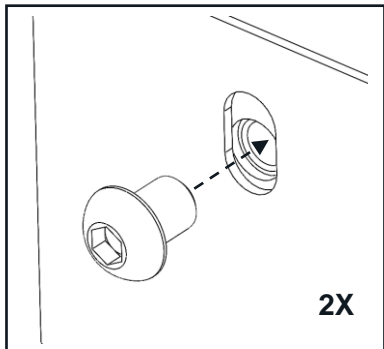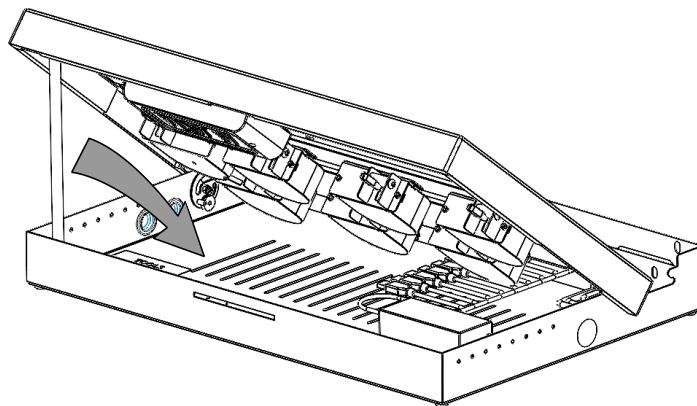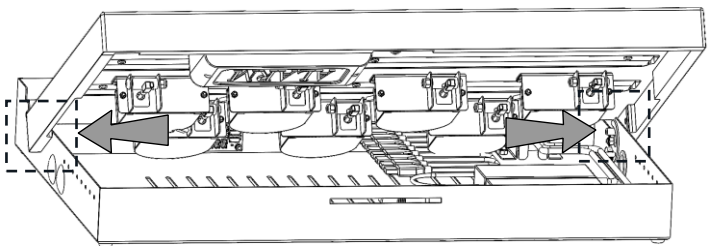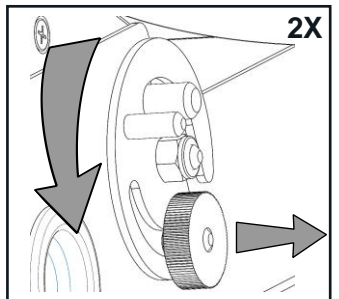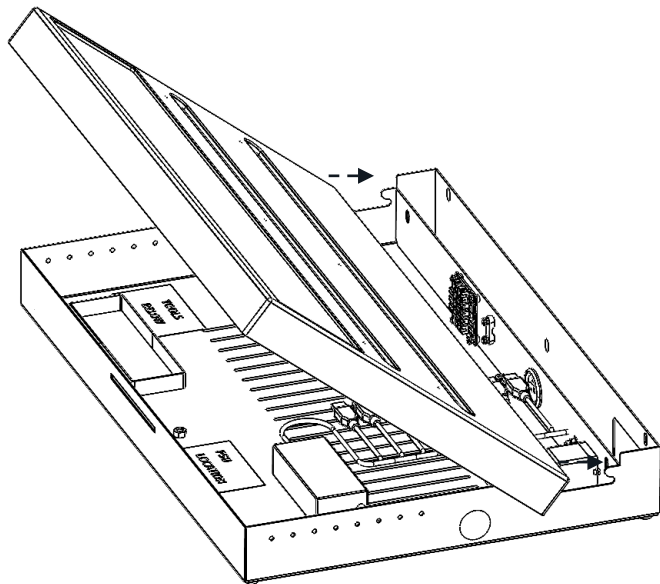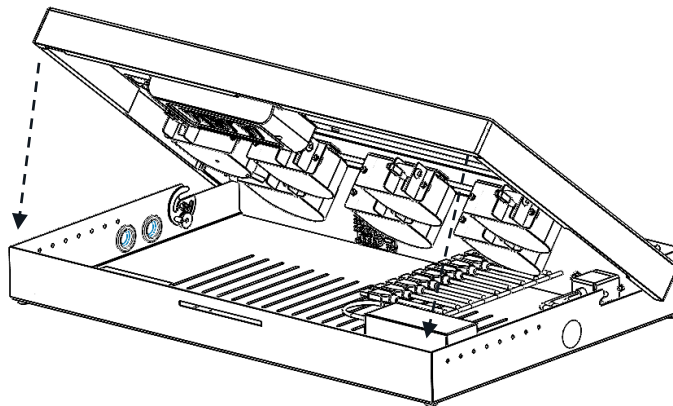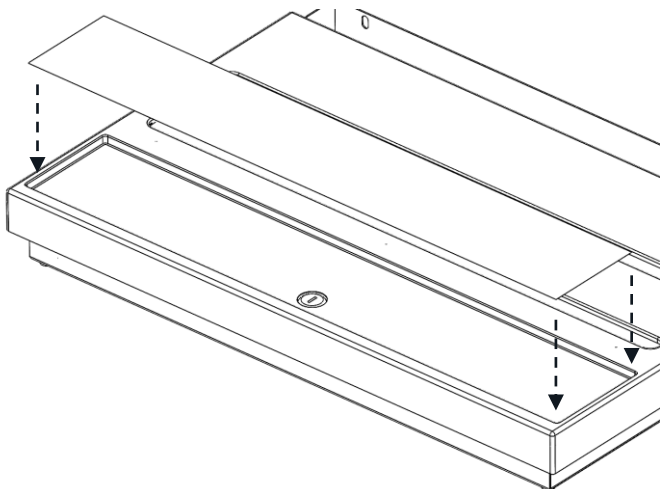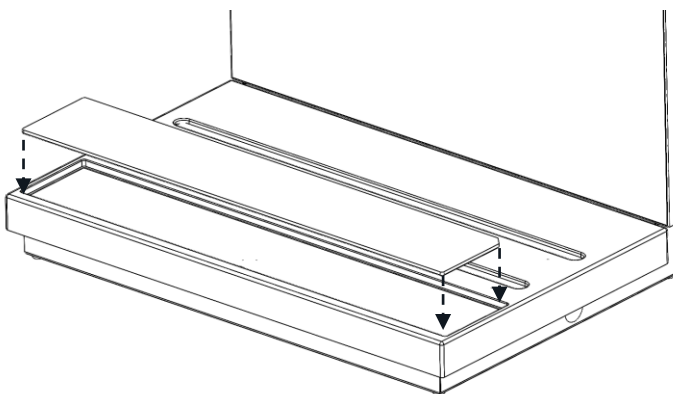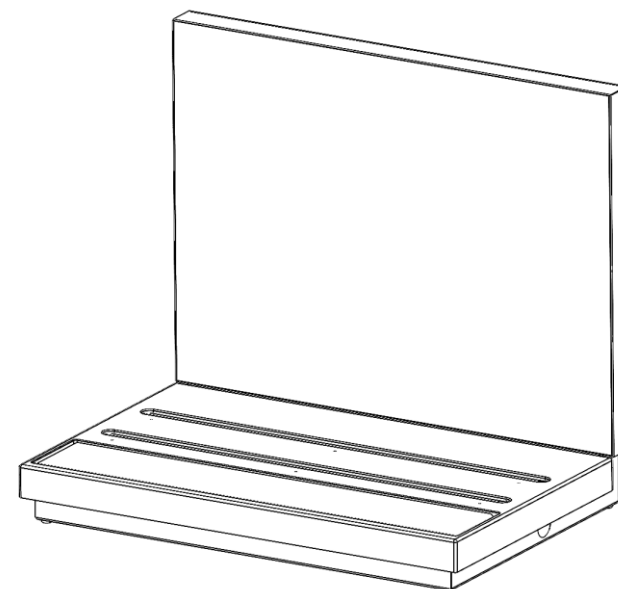
GARMIN.

Fitting security to your CTU

6 MUST TWIST LOCKING PLATES TO HOLD TOP SURFACE IN POSITION (REPEAT BOTH SIDES)

2X

GARMIN.

7

⚠️
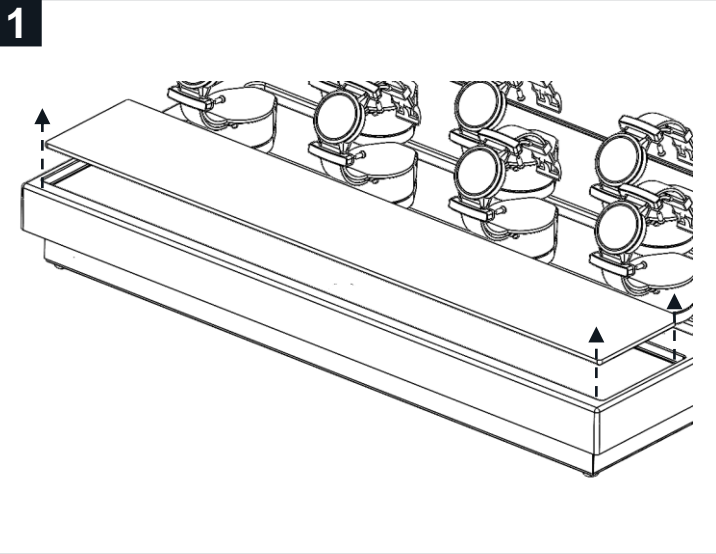
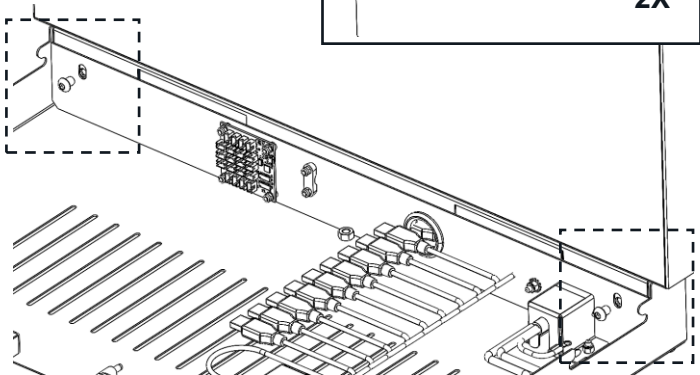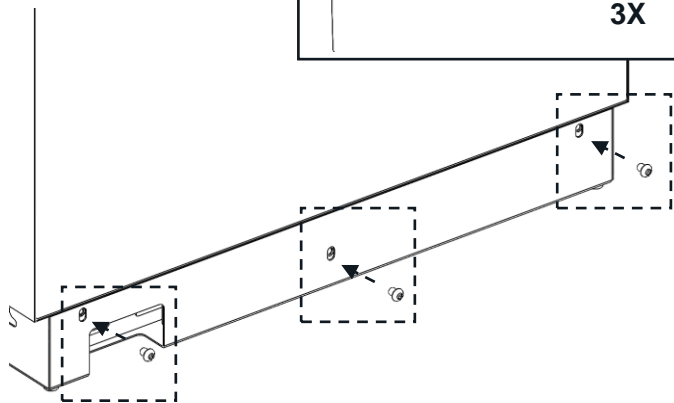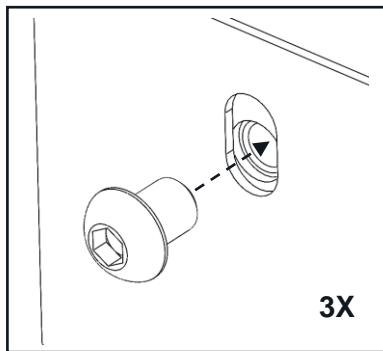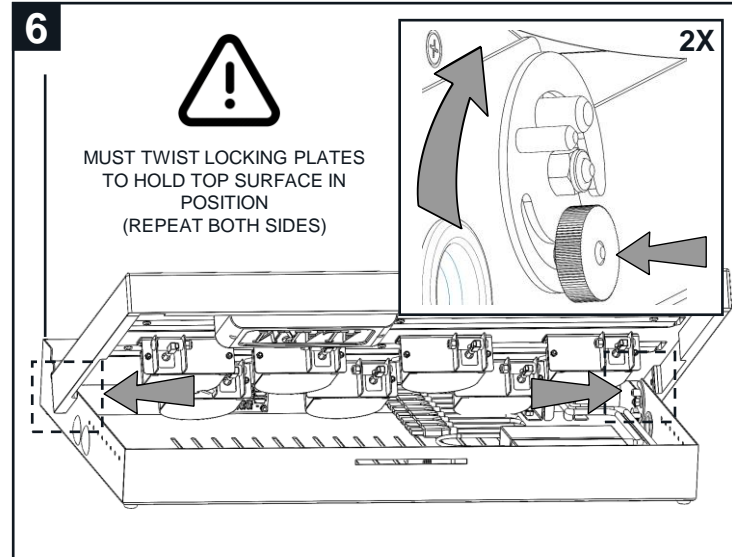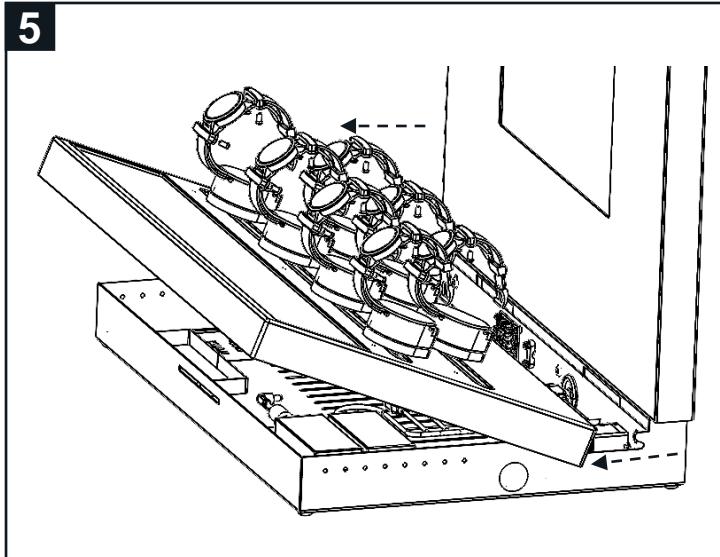RED SUPPORT ARM MUST BE
SWUNG INTO POSTION TO
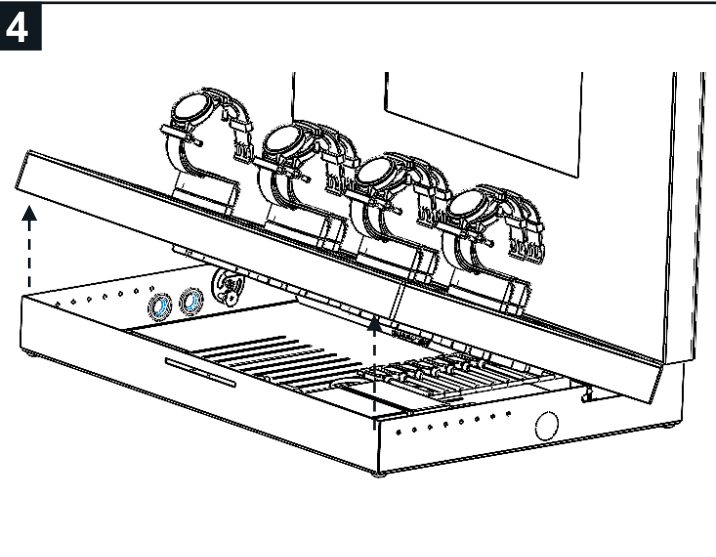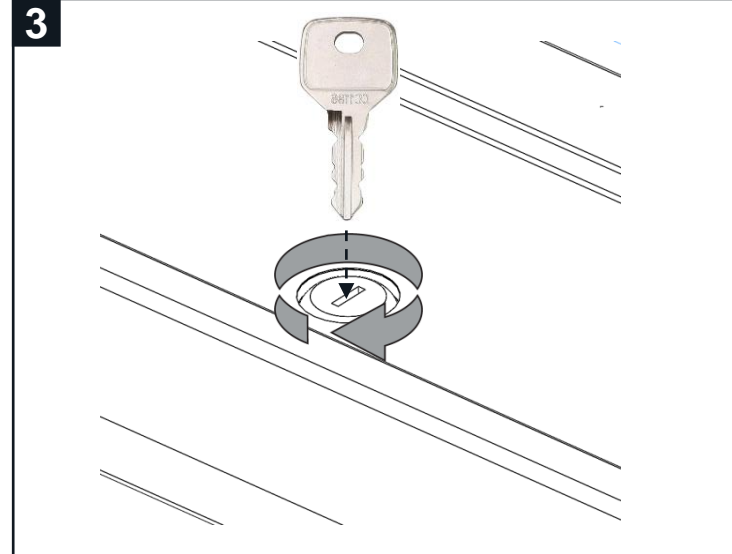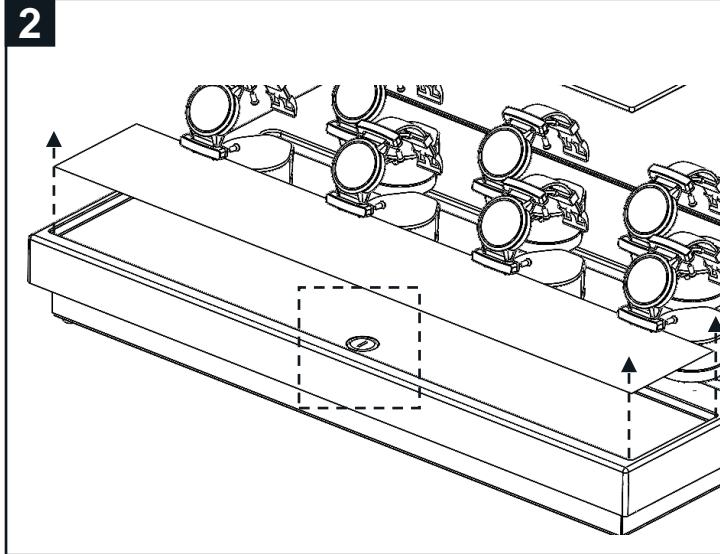SUPPORT TOP PLATE

8

9

10

11

12

(E)   Torx X20

⚠️

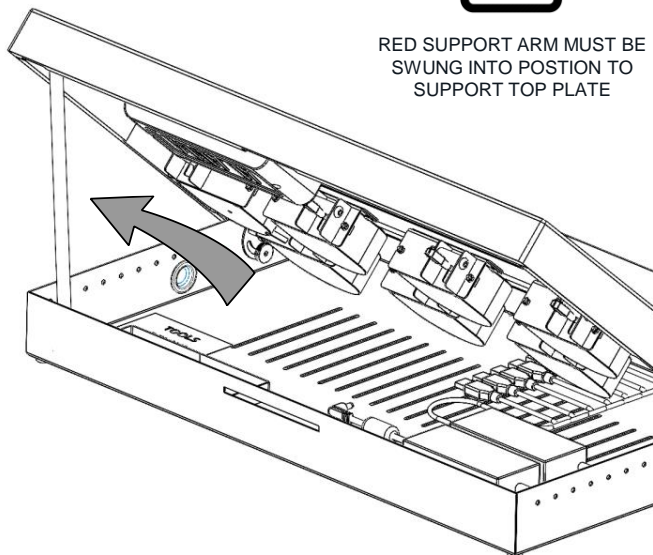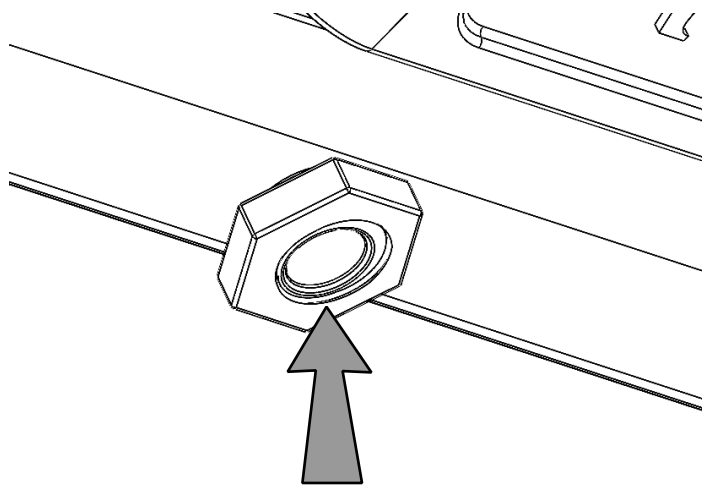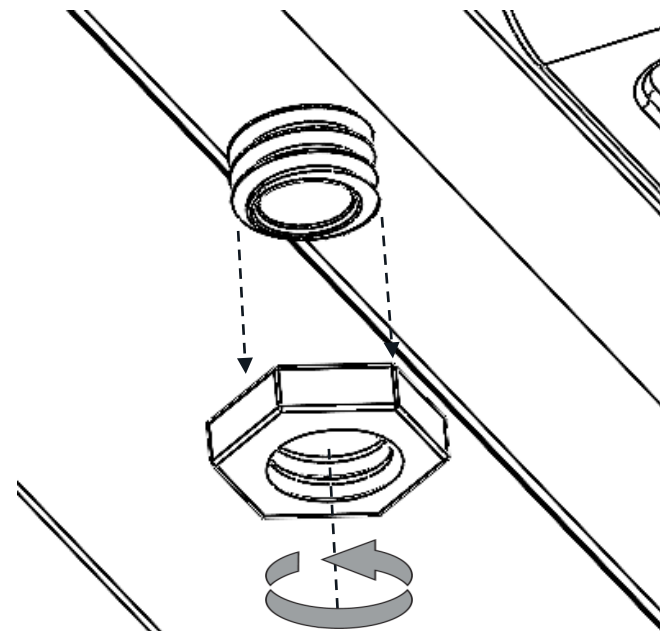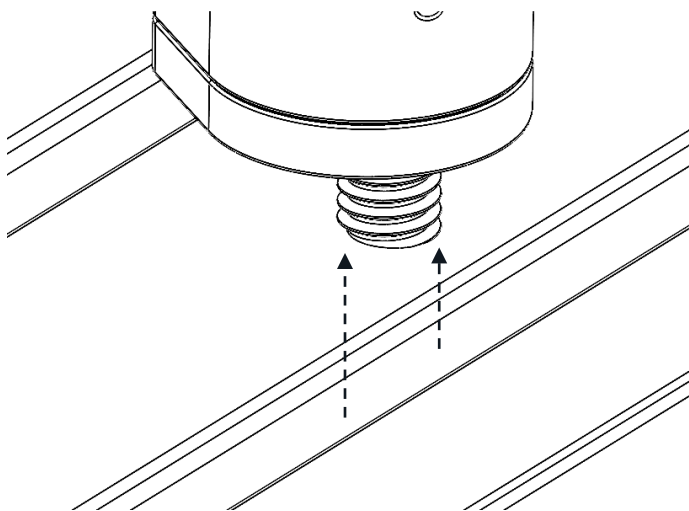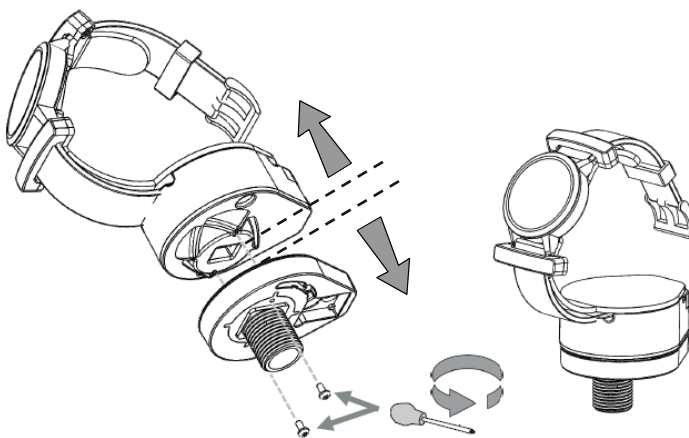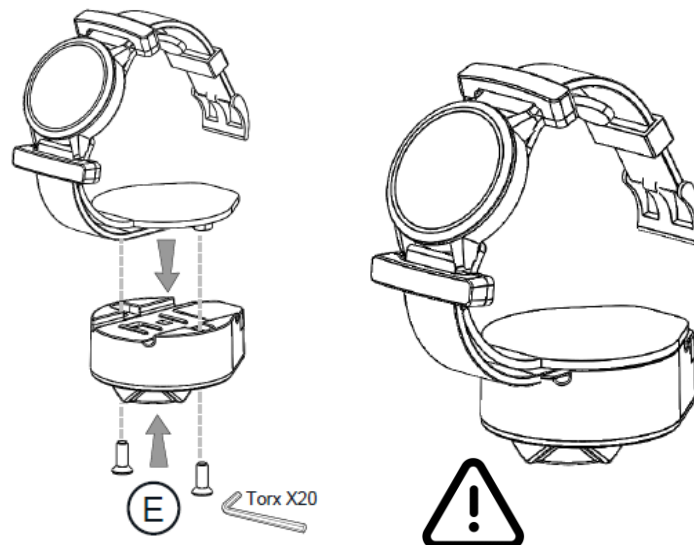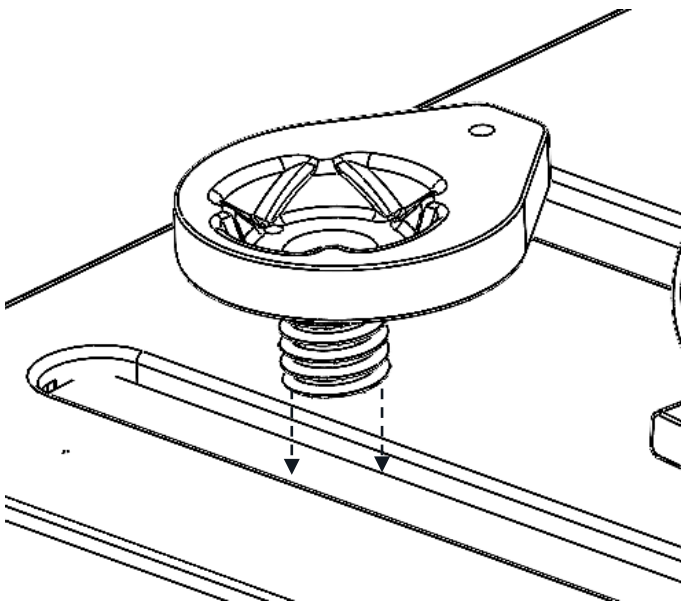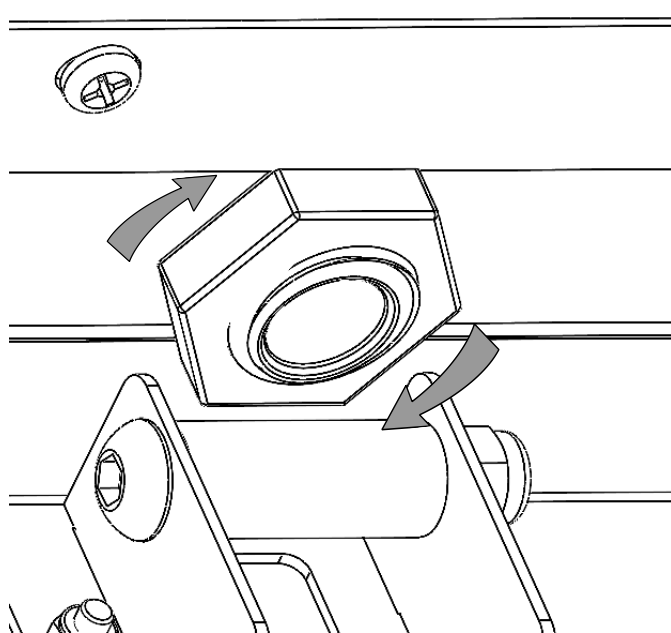REMOVE EXISTING CRADLE FROM THE
PLASTIC MOULDING SO THAT IT CAN BE
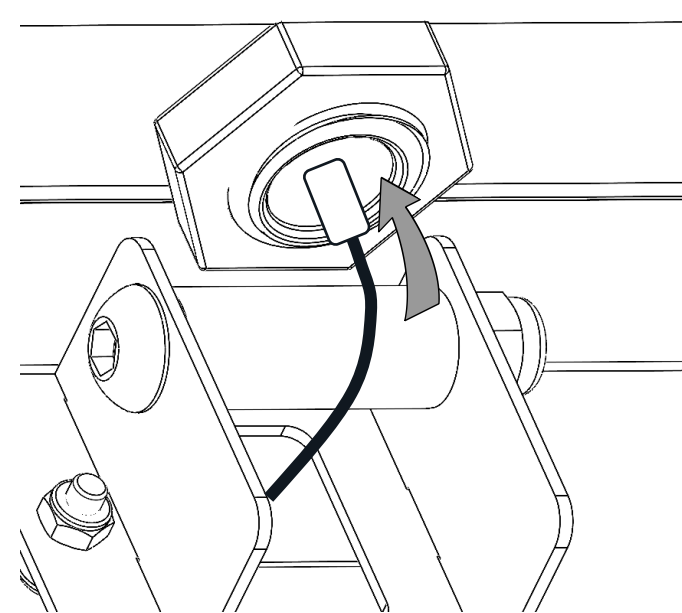REATTACHED TO GOLD POST IF
REQUIRED

GARMIN®

13

14

15
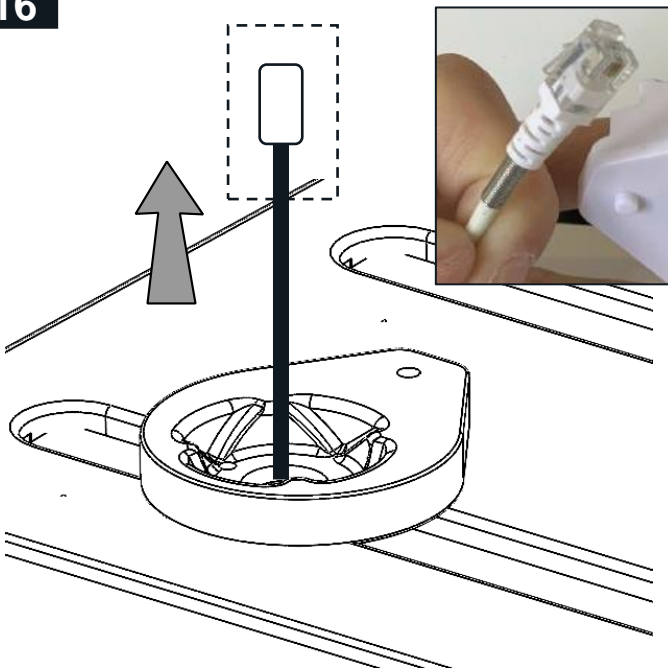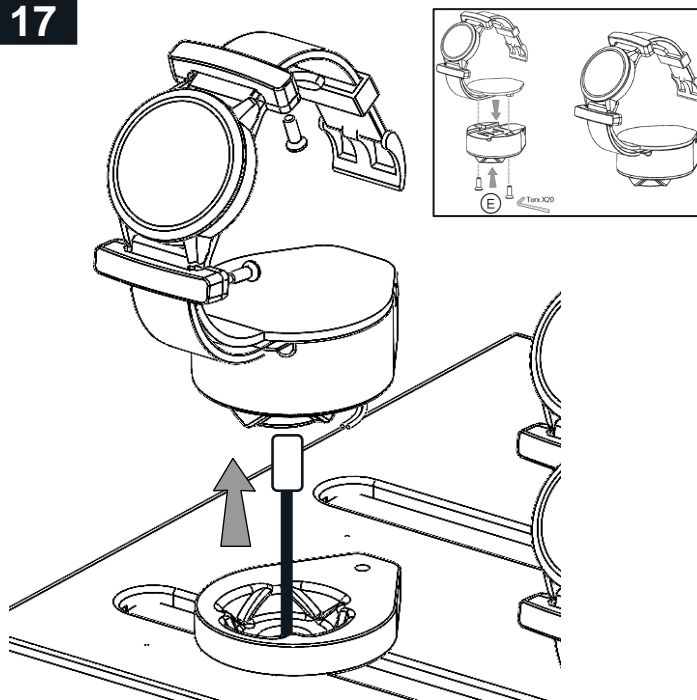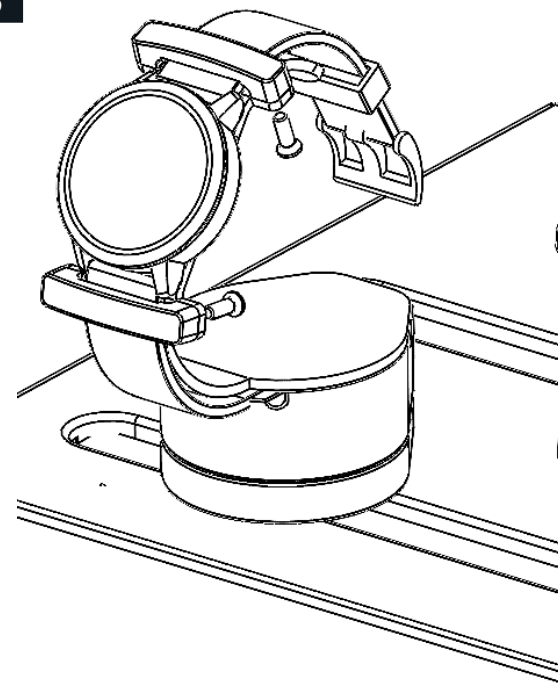

16

17

Torx X20

18

GARMIN

19
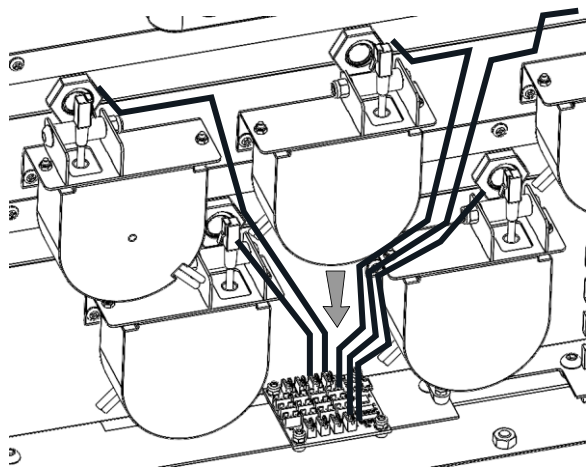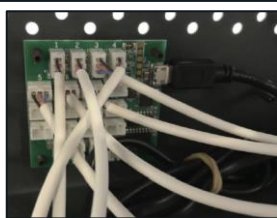
20

21

22

23

24

25

26

27

GARMIN.
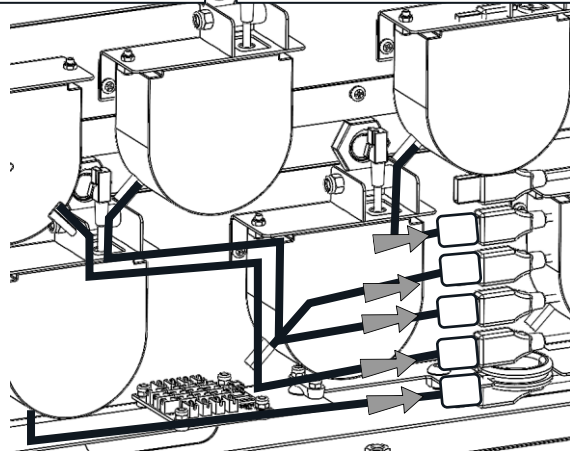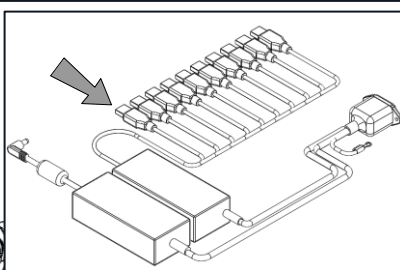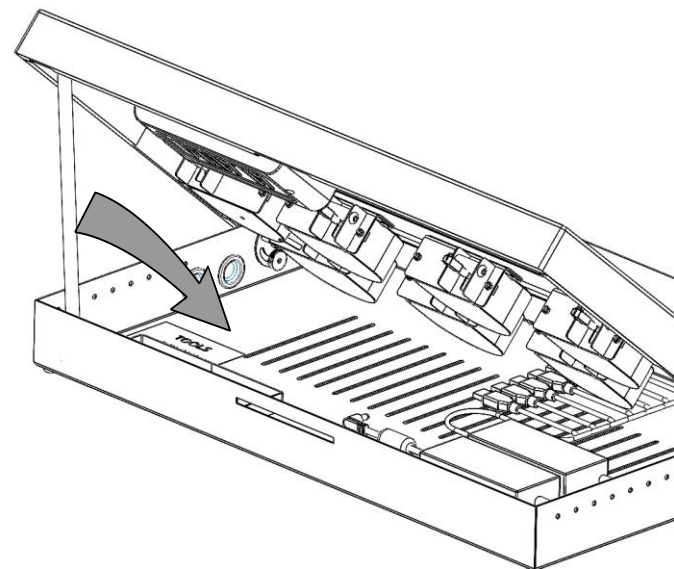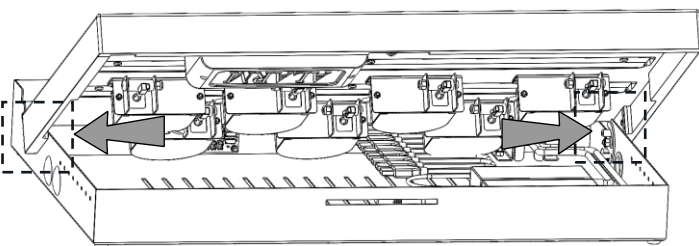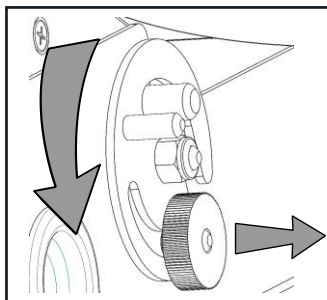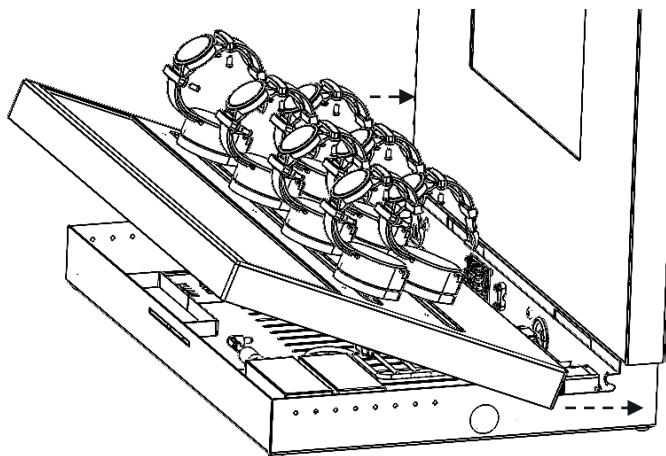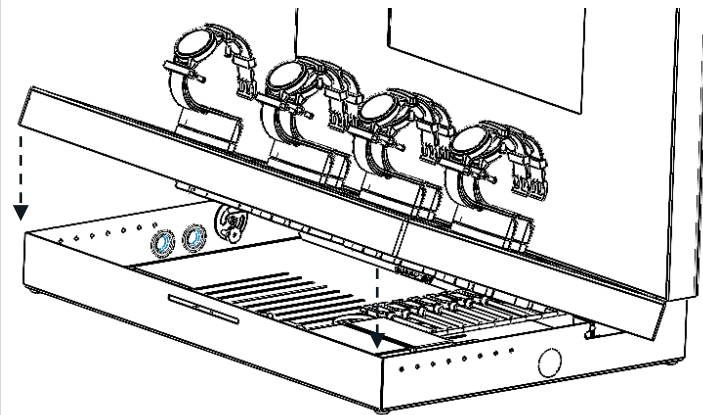
Gold Security
Lift and learn function
Power for live products with USB-C Charging
Positions 1-5

GARMIN®

Lift and Learn cables for PCB board numbered 1-5

This PSU at the front is not included in this kit

ENSURE THE SENSOR CABLE FROM SECURITY DEVICE 1 IS PLUGGED INTO PORT 1 ON THE PCB, AND SO ON FOR THE OTHER SECURITY DEVICES
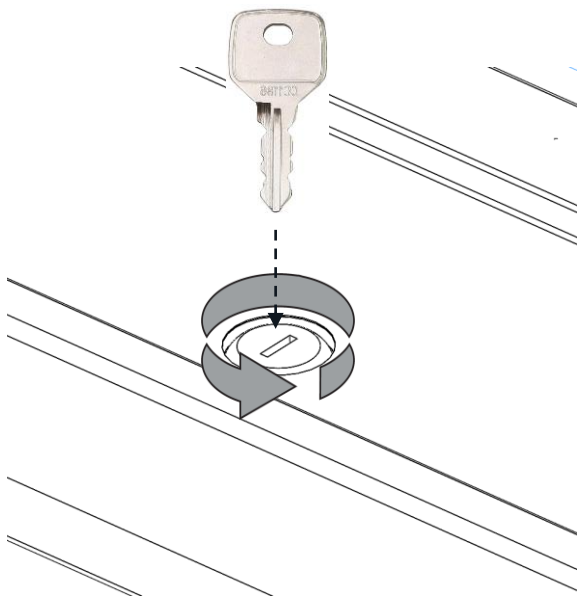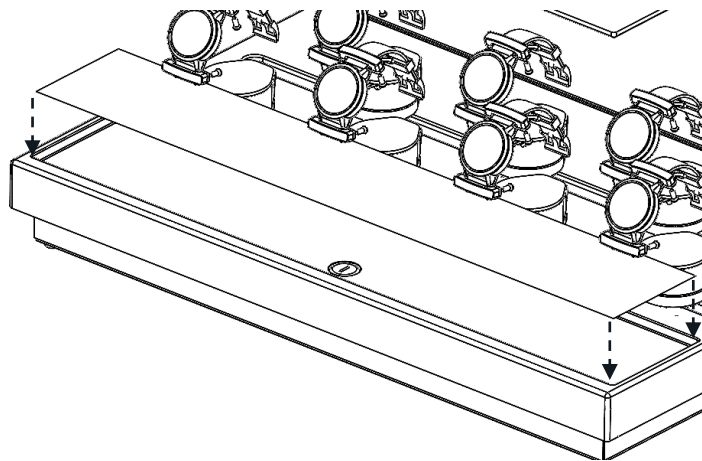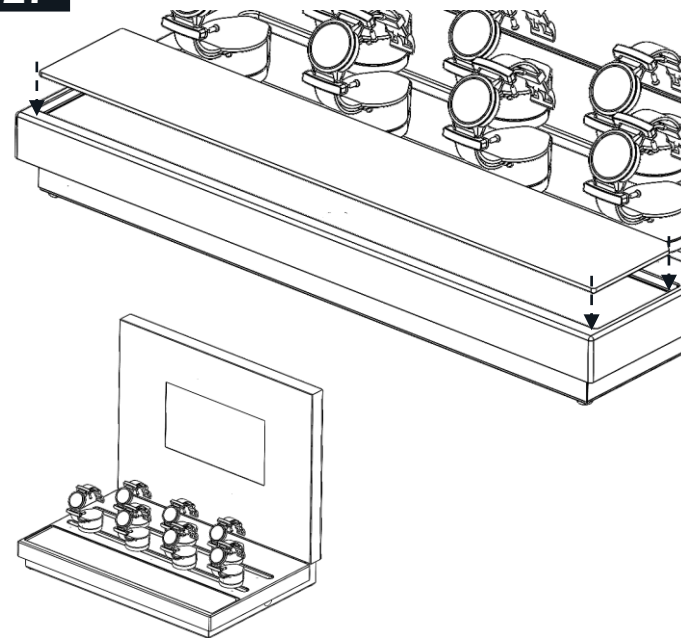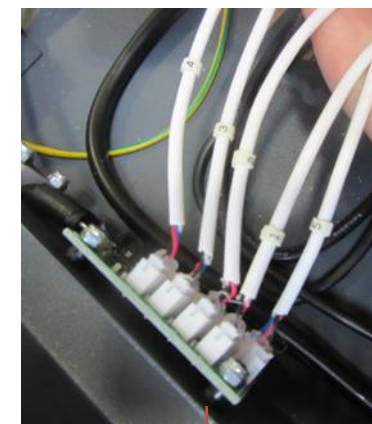
IMPORTANT:
IF YOU NEED TO REMOVE A SENSOR CABLE USE A PAIR OF LONG NOSE PLIERS.
DO NOT PULL ON THE CABLE

GARMIN.